

МОХ-системы - техническая документация

assembly-manual-round-fix-en.pdf

Технический перевод: размеры см. в оригинальных чертежах и на справочных страницах.


Исходная страница 1

РУКОВОДСТВО ПО СБОРКЕ Round-Fix


- 1 Выберите правильный профиль в соответствии с толщиной плитки.
- 2 Нанесите шов и соответствующим образом закрепите анкера профилей.
- 3 Прижимайте профиль до его фиксации в месте соединения.
- 4 Нанесите шов на места, где будет располагаться керамика.
- 5 Поместите плитку на профиль, убедившись, что ее края подходят к профилю и находятся на одном уровне.
- 6 Отрежьте два профиля под углом 45 градусов для угловых соединений.
- 7 Выровняйте профили по внутренним углам и вдавите их в стык. 10
- 8 Поместите плитку на профиль, убедившись, что ее края подходят к профилю и находятся на одном уровне.

Страница 1/1


Оригинальные чертежи и справочные страницы

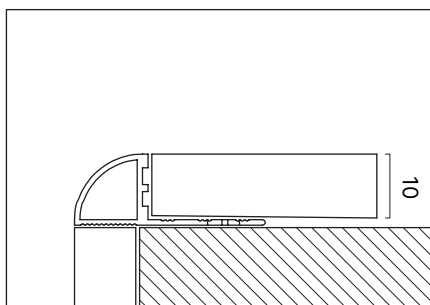


1 Pick the correct profile according to the tile thickness.

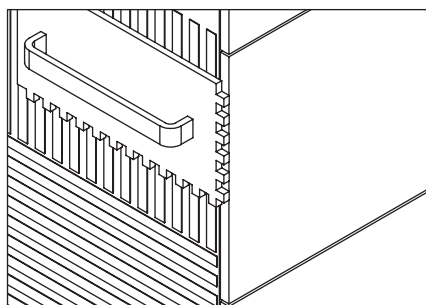


2 Apply joint and place the profiles anchor accordingly.

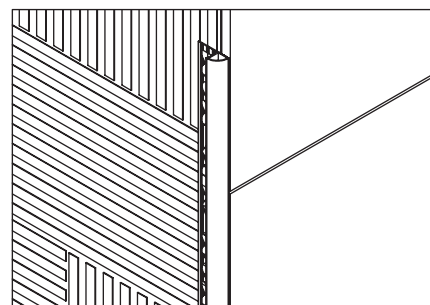


3 Press the profile until it is fixed to the joint.

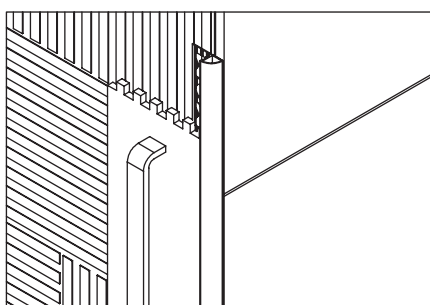


4 Apply joint to the places where the ceramics will be placed.

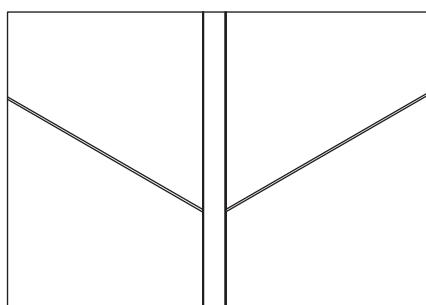


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

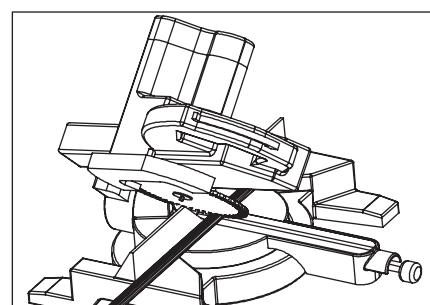

6 Cut two profiles at 45 degrees for corner joints.

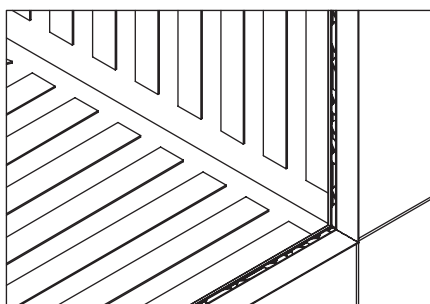

7 Align the profiles at the internal corners and press them into the joint.

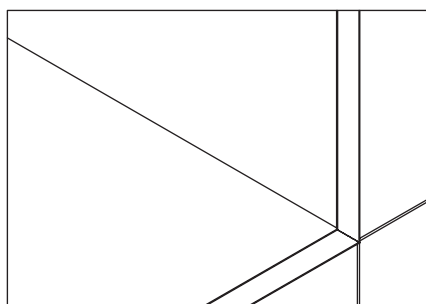

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.