

МОХ-системы - техническая документация

assembly-manual-visio-en.pdf

Технический перевод: размеры см. в оригинальных чертежах и на справочных страницах.


Исходная страница 1

РУКОВОДСТВО ПО СБОРКЕ Visio


- 1 Выберите правильный профиль в соответствии с толщиной пола.
- 2 Нанесите шов и соответствующим образом закрепите анкеры профилей.
- 3 Прижимайте профиль до его фиксации в месте соединения.
- 4 Поместите ковер на профиль.
- 5 Обрежьте профили под углом 45 градусов для внешних углов.
- 6 Выровняйте профили по внешним углам и вставьте их в стык.
- 7 Поместите ковер на профиль.
- 8 Обрежьте профили под углом 45 градусов для внутренних углов.
- 9 Выровняйте профили по внутренним углам и вставьте их в стык.
- 10 Поместите ковер на профиль. 6 8

Страница 1/1


Оригинальные чертежи и справочные страницы

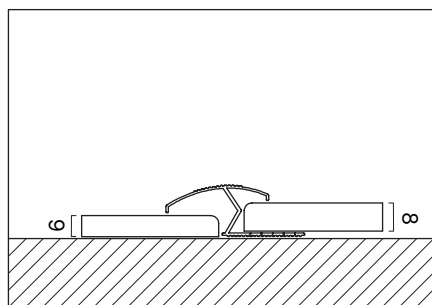


1 Pick the correct profile according to the flooring thickness.

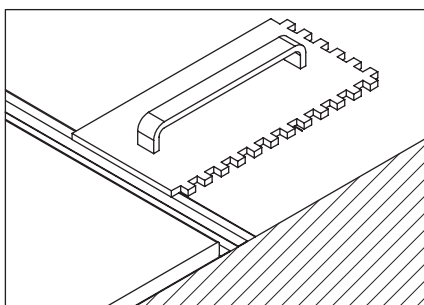


2 Apply joint and place the profiles anchor accordingly.

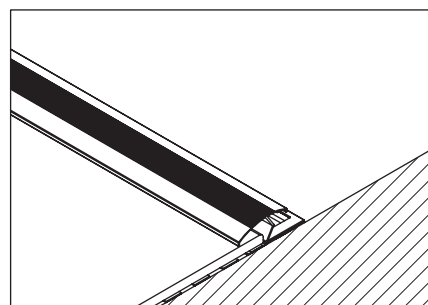


3 Press the profile until it is fixed to the joint.

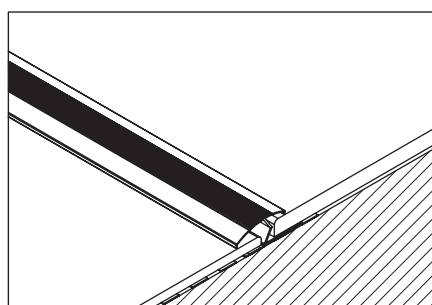


4 Place the carpet to the profile.

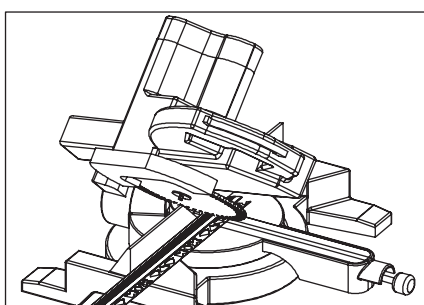


5 Cut profiles 45 degrees for external corners.

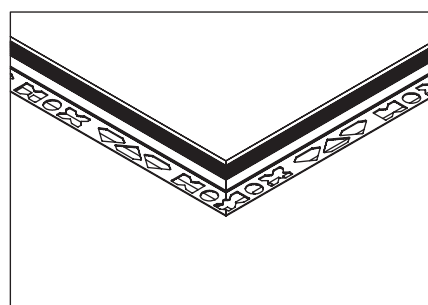


6 Align the profiles at the external corners and place them into the joint.

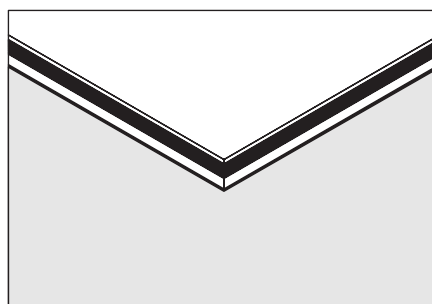


7 Place the carpet to the profile.

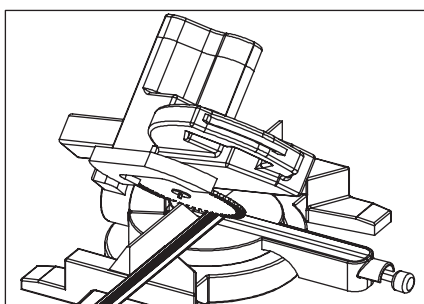

8 Cut profiles 45 degrees for internal corners.

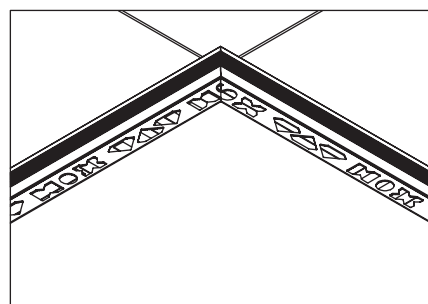

9 Align the profiles at the internal corners and place them into the joint.

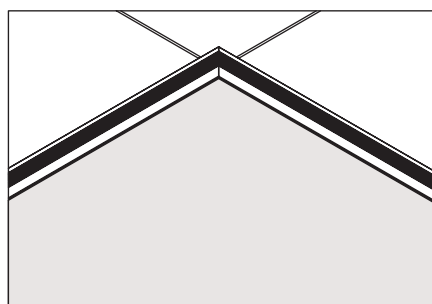

10 Place the carpet to the profile.