

MOX Systems - technická dokumentácia

assembly-manual-mps-e-en.pdf

Technický preklad: rozmery nájdete na pôvodných výkresoch a referenčných stránkach.


Zdrojová stránka 1

NÁVOD NA MONTÁŽ Mps-E


- 1 Vyberte si správny profil podľa hrúbky podlahy.
 - 2 Naneste spoj a podľa toho umiestnite kotvu profilov.
 - 3 Stlačte profil, kým nebude pripevnený ku spoju.
 - 4 Naneste škáru na miesta, kde bude položená podlaha.
 - 5 Položte a zarovnajte podlahu s profilom.
 - 6 Narežte profily o 45 stupňov pre vonkajšie rohy.
- Zarovnajte profily na vonkajších rohoch a zatlačte ich do spoja.
- 8 Položte a zarovnajte podlahu s profilom.
 - 9 Narežte profily pod uhlom 45 stupňov pre vnútorné rohy.
 - 10 Zarovnajte profily na vnútorných rohoch a zatlačte ich do spoja.
 - 11 Položte a zarovnajte podlahu s profilom.

Strana 1/1


Originálne výkresy a referenčné strany

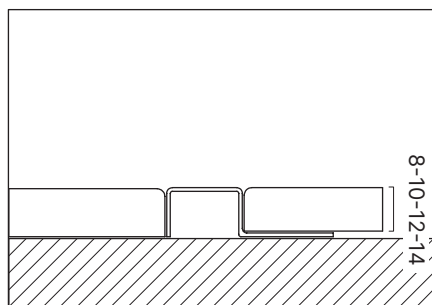


- 1** Pick the correct profile according to the flooring thickness.

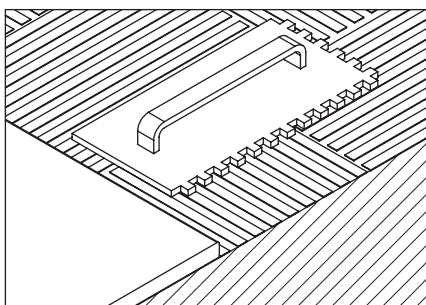


- 2** Apply joint and place the profiles accordingly.

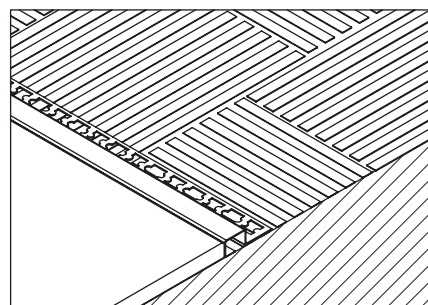


- 3** Press the profile until it is fixed to the joint.

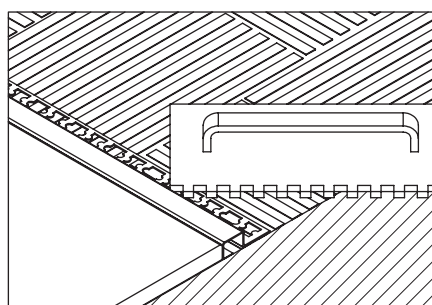


- 4** Apply joint to the places where the flooring will be placed.

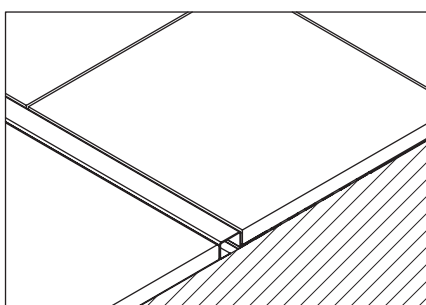


- 5** Place and align the flooring to the profile.

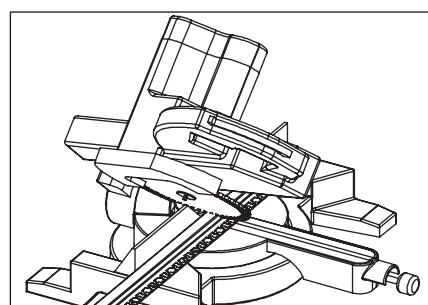


- 6** Cut profiles 45 degrees for external corners.

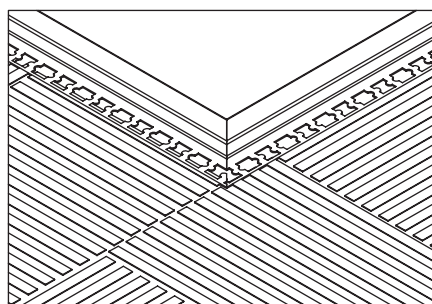


- 7** Align the profiles at the external corners and press them into the joint.

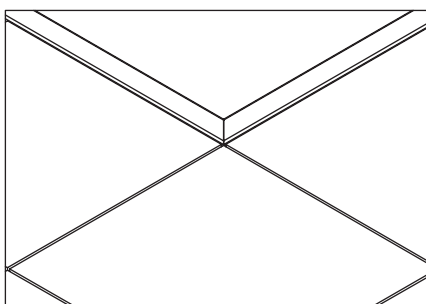


- 8** Place and align the flooring to the profile.

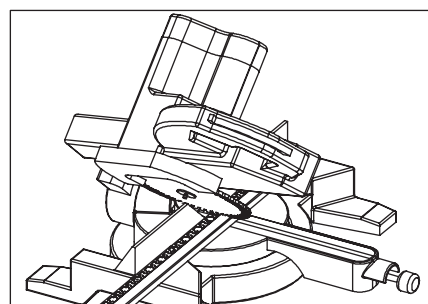

- 9** Cut profiles 45 degrees for internal corners.

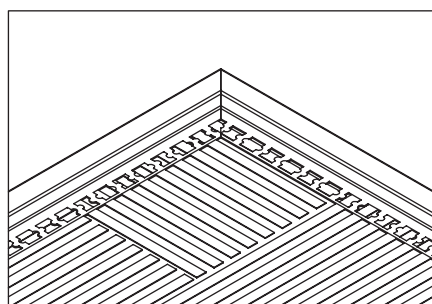

- 10** Align the profiles at the internal corners and press them into the joint.

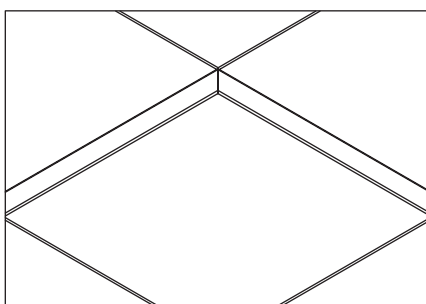

- 11** Place and align the flooring to the profile.