

# MOX Systems - technická dokumentácia

assembly-manual-mps-n-en.pdf

Technický preklad: rozmery nájdete na pôvodných výkresoch a referenčných stránkach.

## Zdrojová stránka 1

### NÁVOD NA MONTÁŽ Mps-N

Vyberte správny profil podľa hrúbky podlahy.

2 Naneste spoj a podľa toho umiestnite kotvu profilov.

3 Stlačte profil, kým nebude pripevnený ku spoju.

4 Naneste škáru na miesta, kde bude položená podlaha.

5 Položte a zarovnajte podlahu s profilom.

6 Narežte profily o 45 stupňov pre vonkajšie rohy.

Zarovnajte profily na vonkajších rohoch a zatlačte ich do spoja.

8 Položte a zarovnajte podlahu s profilom.


9 Narežte profily pod uhlom 45 stupňov pre vnútorné rohy.

10 Zarovnajte profily na vnútorných rohoch a zatlačte ich do spoja.


11 Položte a zarovnajte podlahu s profilom.

Strana 1/1


## Originálne výkresy a referenčné strany

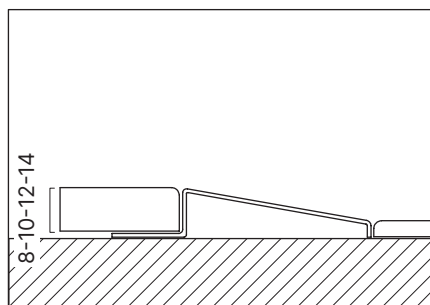


**1** Pick the correct profile according to the flooring thickness.

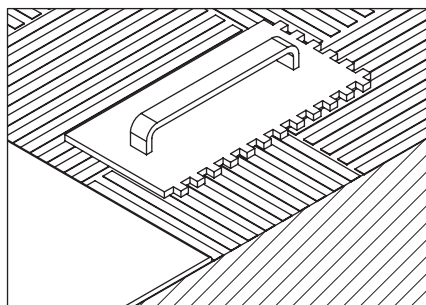


**2** Apply joint and place the profiles anchor accordingly.

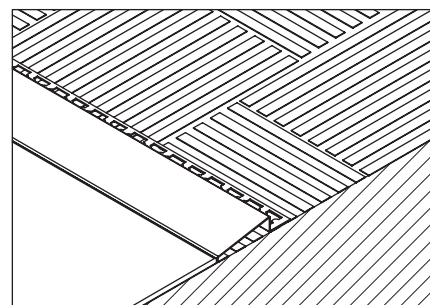


**3** Press the profile until it is fixed to the joint.

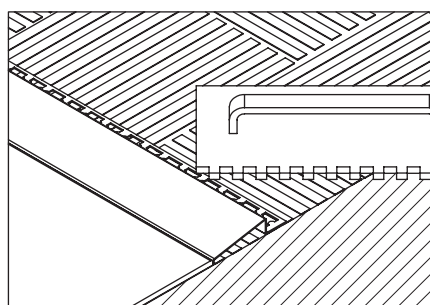


**4** Apply joint to the places where the flooring will be placed.

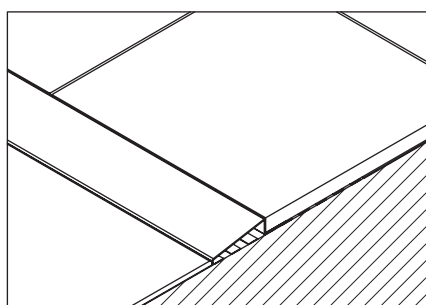


**5** Place and align the flooring to the profile.

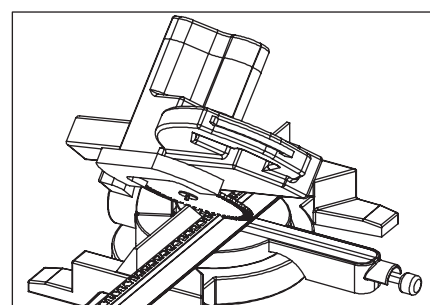


**6** Cut profiles 45 degrees for external corners.

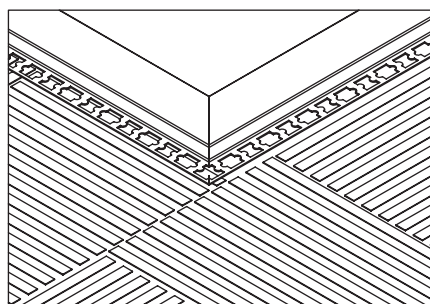


**7** Align the profiles at the external corners and press them into the joint.

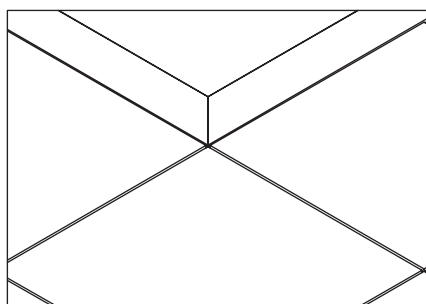


**8** Place and align the flooring to the profile.

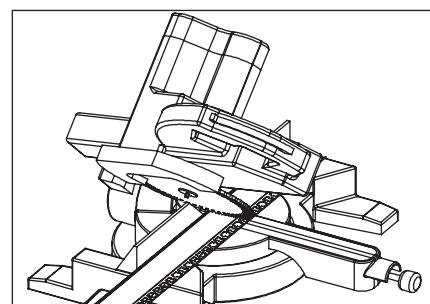

**9** Cut profiles 45 degrees for internal corners.

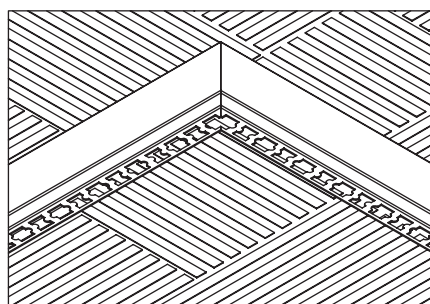

**10** Align the profiles at the internal corners and press them into the joint.

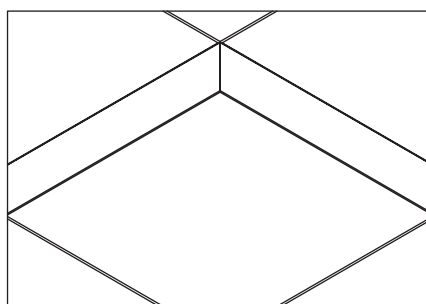

**11** Place and align the flooring to the profile.