

MOX Systems - technická dokumentácia

assembly-manual-mps-tb-en.pdf

Technický preklad: rozmery nájdete na pôvodných výkresoch a referenčných stránkach.

Zdrojová stránka 1

NÁVOD NA MONTÁŽ Mps-Tb

Vyberte správny profil podľa hrúbky podlahy.

2 Naneste spoj a podľa toho umiestnite kotvu profilov.

3 Stlačte profil, kým nebude pripevnený ku spoju.

4 Naneste škáru na miesta, kde bude položená podlaha.

5 Položte a zarovnajte podlahu s profilom.

6 Narežte profily o 45 stupňov pre vonkajšie rohy.

Zarovnajte profily na vonkajších rohoch a zatlačte ich do spoja.

8 Položte a zarovnajte podlahu s profilom.


9 Narežte profily pod uhlom 45 stupňov pre vnútorné rohy.

10 Zarovnajte profily na vnútorných rohoch a zatlačte ich do spoja.


11 Položte a zarovnajte podlahu s profilom.

Strana 1/1


Originálne výkresy a referenčné strany

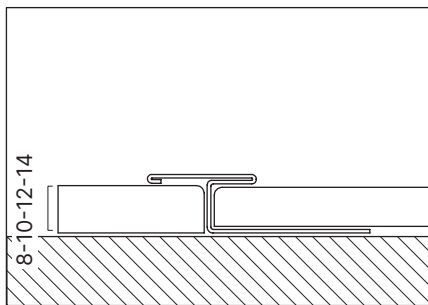


1 Pick the correct profile according to the flooring thickness.

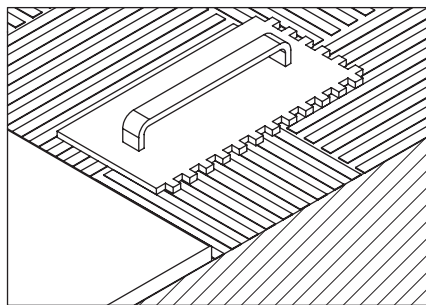


2 Apply joint and place the profiles anchor accordingly.

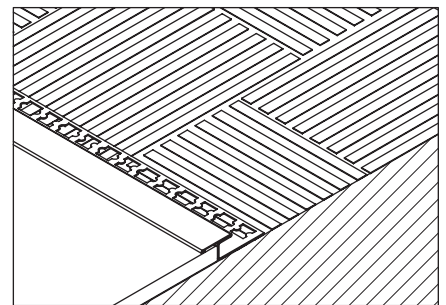


3 Press the profile until it is fixed to the joint.

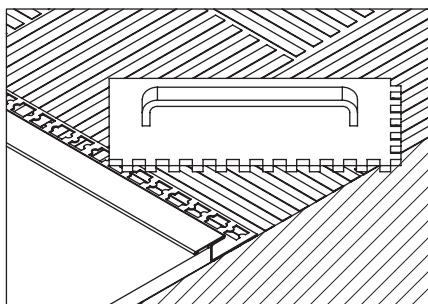


4 Apply joint to the places where the flooring will be placed.

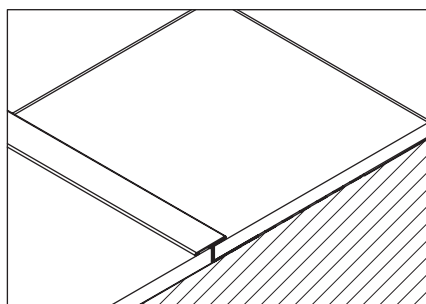


5 Place and align the flooring to the profile.

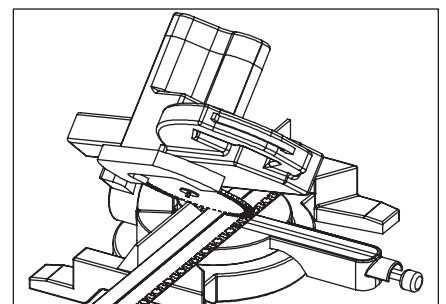


6 Cut profiles 45 degrees for external corners.

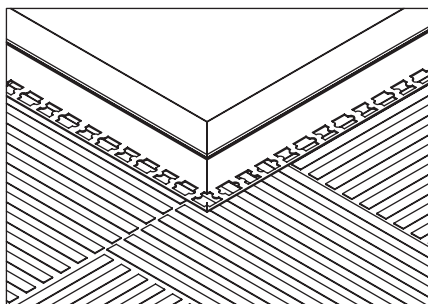


7 Align the profiles at the external corners and press them into the joint.

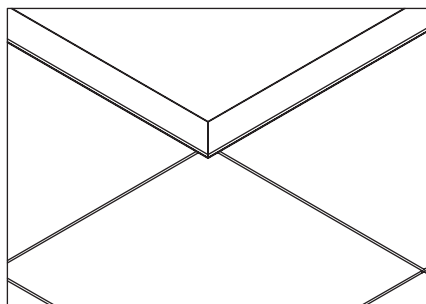


8 Place and align the flooring to the profile.

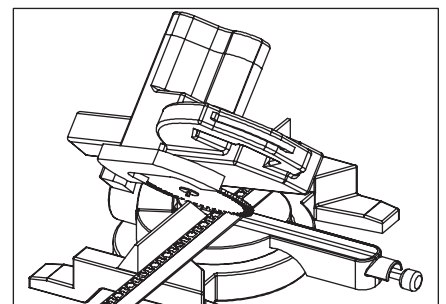

9 Cut profiles 45 degrees for internal corners.

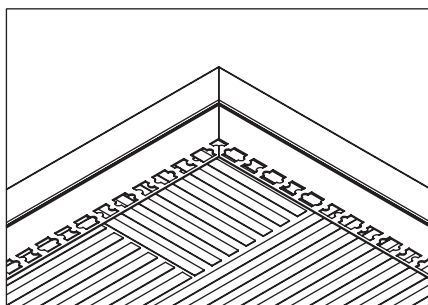

10 Align the profiles at the internal corners and press them into the joint.

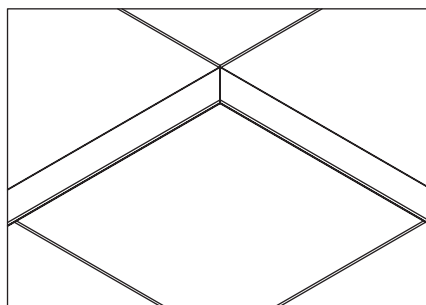

11 Place and align the flooring to the profile.