

MOX Systems - technická dokumentácia

assembly-manual-revio-en.pdf

Technický preklad: rozmery nájdete na pôvodných výkresoch a referenčných stránkach.

Zdrojová stránka 1

NÁVOD NA MONTÁŽ Revio

Aplikácia s lepidlom

- 1 Naneste silikón alebo spoj na profil.
- 2 Pripevnite profil k podlahe a pritlačte ho.
- 3 Priložte koberec k profilu.

Aplikácia pomocou skrutky


- 11 Upevnite profil skrutkami.
- 2 Priložte koberec k profilu.

Köşe Birleşimleri


- 1 Narežte profily o 45 stupňov pre vnútorné rohy.
- 2 Zarovnajte profily vo vnútorných rohoch a umiestnite ich do spoja.
- 3 Priložte koberec k profilu.
- 4 Narežte profily o 45 stupňov pre vonkajšie rohy.
- 5 Zarovnajte profily na vonkajších rohoch a umiestnite ich do spoja.
- 6 Priložte koberec k profilu.

Originálne výkresy a referenčné strany


Application with Adhesive

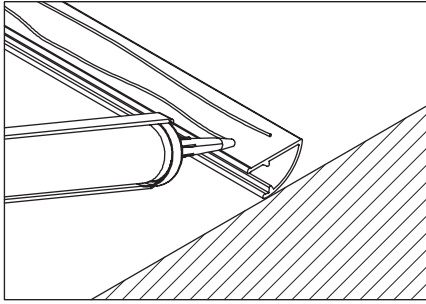

1 Apply silicone or joint to the profile.

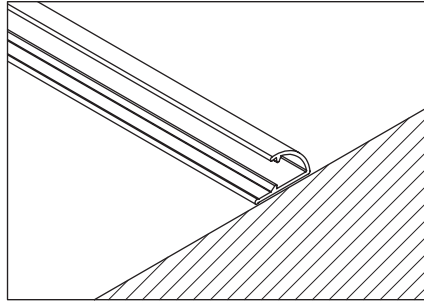


2 Fix the profile to the floor and press it.

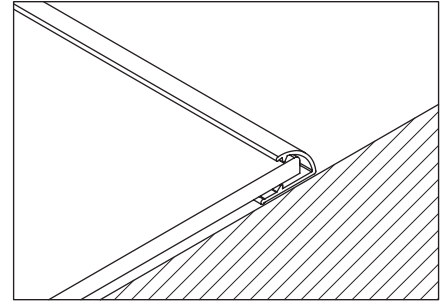


3 Place the carpet to the profile.

Application with Screw

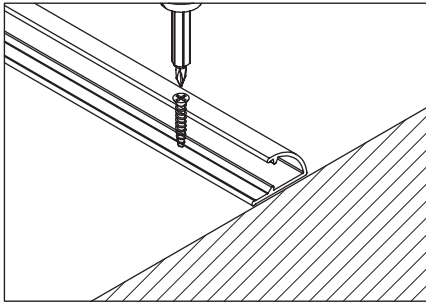


1 Fix the profile with screws.

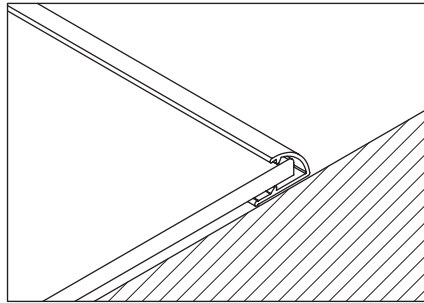


2 Place the carpet to the profile.


Köşe Birleşimleri

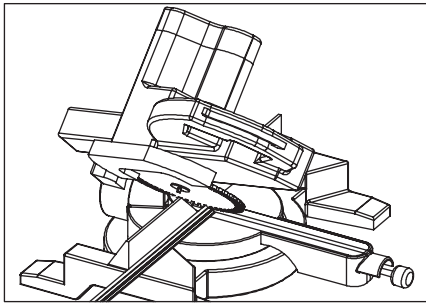


1 Cut profiles 45 degrees for internal corners.

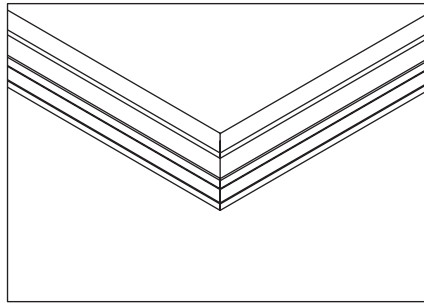


2 Align the profiles at the internal corners and place them into the joint.

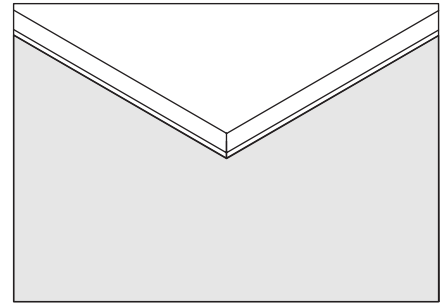


3 Place the carpet to the profile.

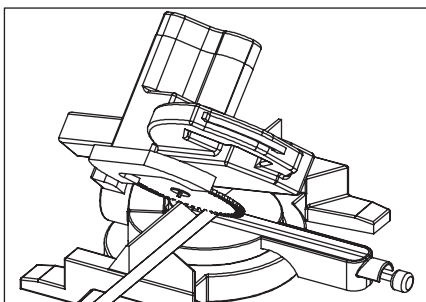

4 Cut profiles 45 degrees for external corners.

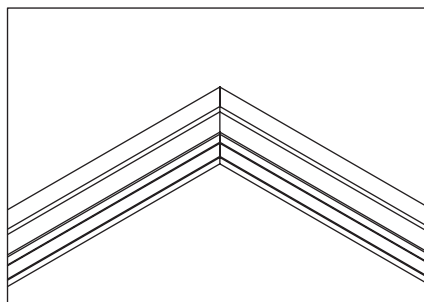

5 Align the profiles at the external corners and place them into the joint.

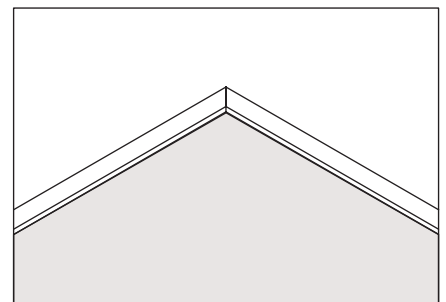

6 Place the carpet to the profile.