

MOX Systems - technická dokumentácia

assembly-manual-visio-en.pdf

Technický preklad: rozmery nájdete na pôvodných výkresoch a referenčných stránkach.


Zdrojová stránka 1

NÁVOD NA MONTÁŽ Visio


- 1 Vyberte si správny profil podľa hrúbky podlahy.
- 2 Naneste spoj a podľa toho umiestnite kotvu profilov.
- 3 Stlačte profil, kým nebude pripevnený ku spoju.
- 4 Priložte koberec k profilu.
- 5 Narežte profily o 45 stupňov pre vonkajšie rohy.
- 6 Zarovnajte profily na vonkajších rohoch a umiestnite ich do spoja.
- 7 Priložte koberec k profilu.
- 8 Narežte profily pod uhlom 45 stupňov pre vnútorné rohy.
- 9 Zarovnajte profily vo vnútorných rohoch a umiestnite ich do spoja.
- 10 Priložte koberec k profilu. 6 8

Strana 1/1


Originálne výkresy a referenčné strany

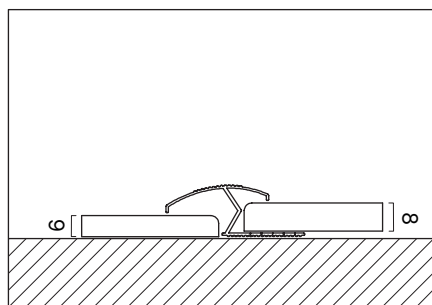


1 Pick the correct profile according to the flooring thickness.

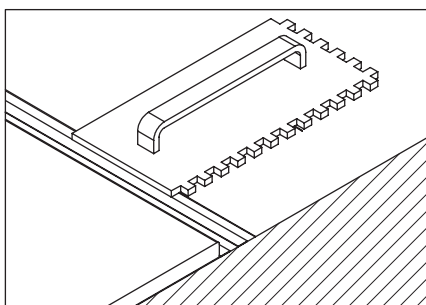


2 Apply joint and place the profiles anchor accordingly.

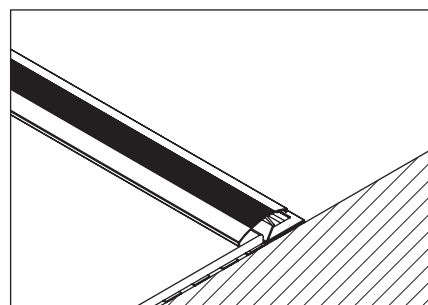


3 Press the profile until it is fixed to the joint.

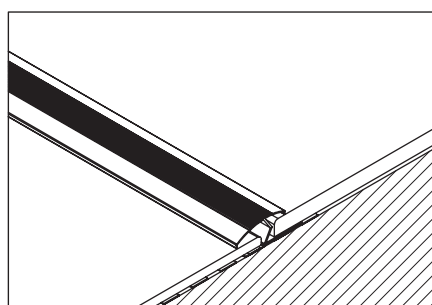


4 Place the carpet to the profile.

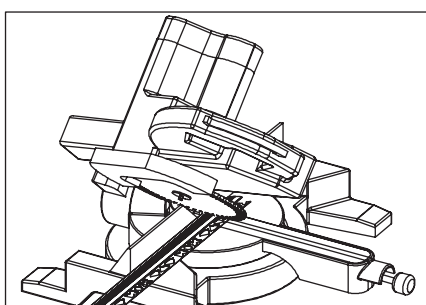


5 Cut profiles 45 degrees for external corners.

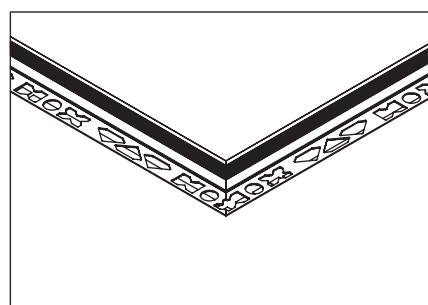


6 Align the profiles at the external corners and place them into the joint.

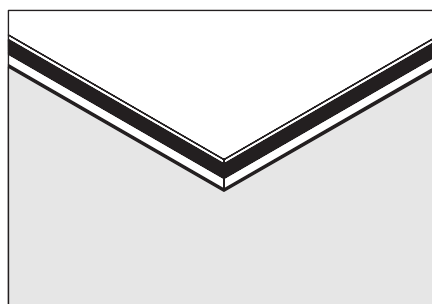


7 Place the carpet to the profile.

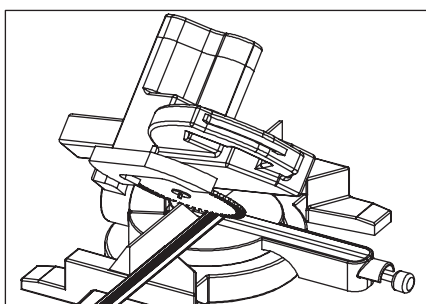

8 Cut profiles 45 degrees for internal corners.

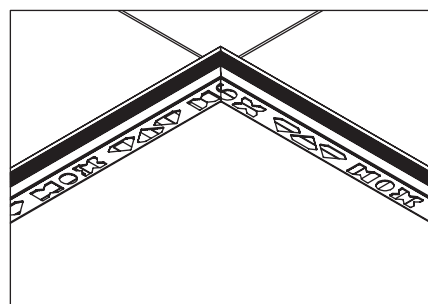

9 Align the profiles at the internal corners and place them into the joint.

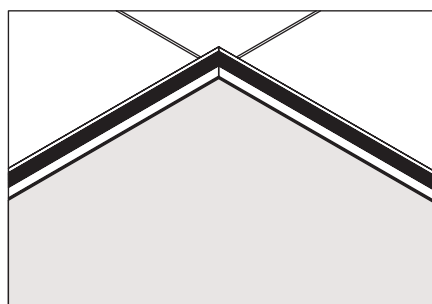

10 Place the carpet to the profile.