

MOX sistemi - tehnična dokumentacija

assembly-manual-crispo-en.pdf

Tehnični prevod: za dimenzije si oglejte izvirne risbe in referenčne strani.


Izvorna stran 1

NAVODILA ZA SESTAVLJANJE Crispo


- 1 Orodja za pritrjevanje na steno postavite v razmaku 50 cm in označite steno od lukenj za vijake.
- 2 Izvrtajte točke, ki ste jih že označili.
- 3 V izvrtane luknje vstavite ustrezne moznike glede na material stene.
- 4 Privijte orodja za pritrditev na steno na mesta, ki so izvrtana v intervalih 50 cm.
- 5 Sestavite profil na orodje za pritrjevanje na steno tako kot na sliki.
- 6 Prepričajte se, da so žebli profila in žebli orodja za pritrjevanje med seboj popolnoma povezani in da je podplat profila pritrjen na tla.
- 7 Za zunanje vogale odrežite profile pod kotom 45 stopinj.
- 8 Orodje za pritrditev na steno pritrdite tako, da bo zaprto na vogale in nanj sestavite profile, ki ste jih odrezali pod kotom 45 stopinj.
- 9 Prepričajte se, da so profili, ki so odrezani pod kotom 45 stopinj, popolnoma pritrjeni drug na drugega na zunanjih vogalih.
- 10 Odrežite profile pod kotom 45 stopinj za notranje vogale.
- 11 Pritrdite orodje za pritrjevanje na steno tako, da bo zaprto na vogale in nanj sestavite profile, ki ste jih odrezali pod kotom 45 stopinj.
- 12 Prepričajte se, da so profili, ki so odrezani pod kotom 45 stopinj, popolnoma pritrjeni drug na drugega v notranjih kotih.

Stran 1/1


Izvirne risbe in referenčne strani

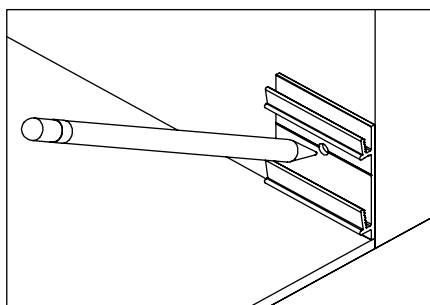


1 Place the wall fixation tools at 50cm intervals and mark the wall from the screw holes.

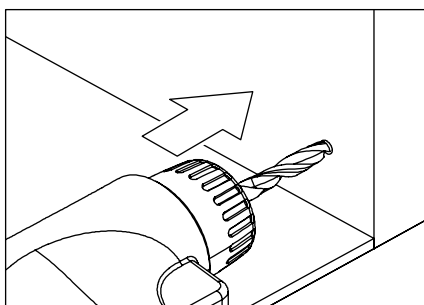


2 Drill the points that you have already marked.

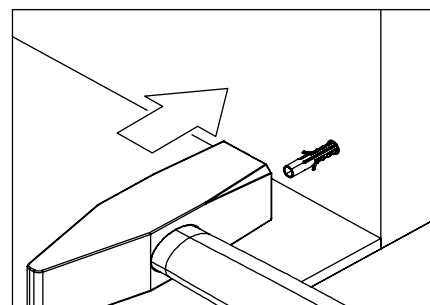


3 Place the correct dowels according to the wall material into the drilled holes.

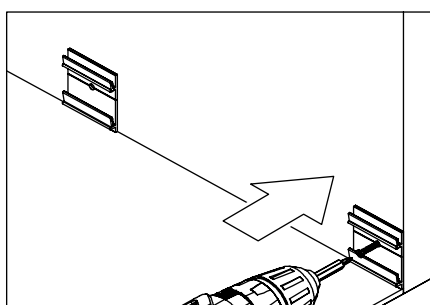


4 Screw the wall fixation tools to the places that are drilled at 50cm intervals.

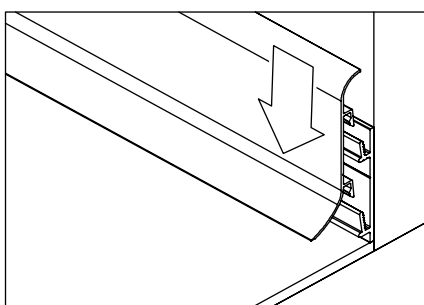


5 Assemble the profile on the wall fixation tools just like in the picture.

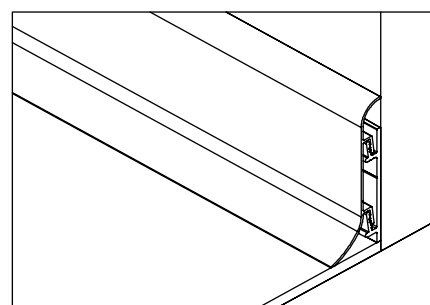


6 Make sure that the profile nails and the fixation tool's nails are completely connected to each other and be sure that the profile sole is fixed to the floor.

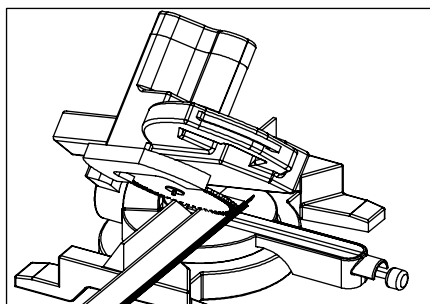


7 Cut profiles 45 degrees for external corners.

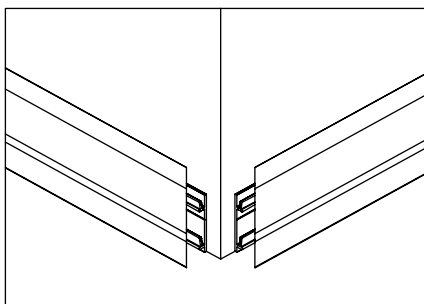


8 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

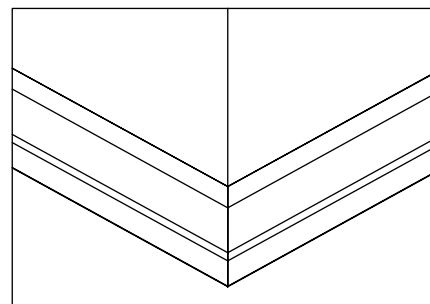


9 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

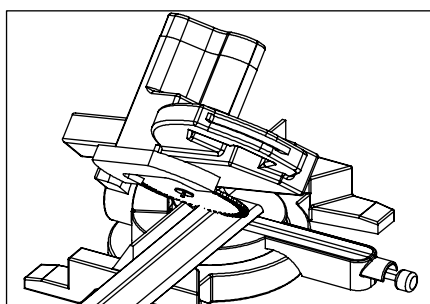

10 Cut profiles 45 degrees for internal corners.

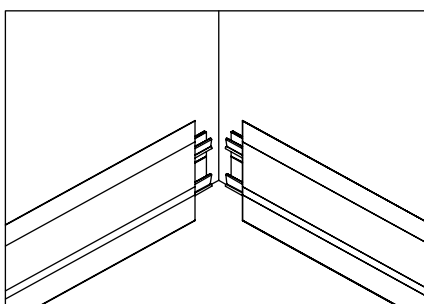

11 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

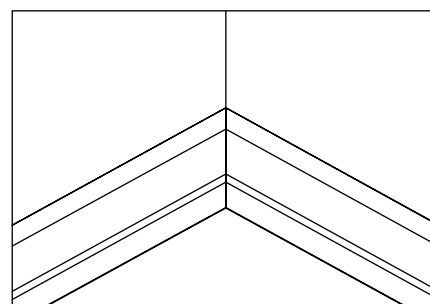

12 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.