

MOX sistemi - tehnična dokumentacija

assembly-manual-mps-s-en.pdf

Tehnični prevod: za dimenzije si oglejte izvirne risbe in referenčne strani.

Izvorna stran 1

NAVODILA ZA SESTAVLJANJE Mps-S

Izberite pravi profil glede na debelino ploščice.

2 Nanesite spoj in ustrezno namestite sidra za profile.

3 Pritisnite profil, dokler ni pritrjen na spoj.

Na mestih, kjer bomo polagali keramiko, naredimo fugo.

5 Keramiko položite in poravnajte na profil.

6 Za zunanje vogale odrežite profile pod kotom 45 stopinj.

Poravnajte profile na zunanjih vogalih in jih vtisnite v spoj.

8 Keramiko položite in poravnajte na profil.


9 Za notranje vogale odrežite profile pod kotom 45 stopinj.

10 Poravnajte profile na notranjih vogalih in jih vtisnite v spoj.


11 Postavite in poravnajte keramiko na profil.

Stran 1/1


Izvirne risbe in referenčne strani

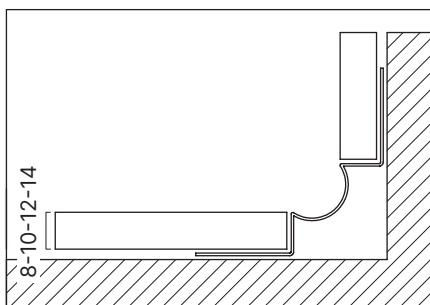


- 1 Pick the correct profile according to the tile thickness.

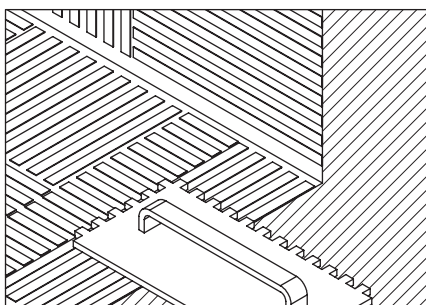


- 2 Apply joint and place the profiles anchor accordingly.

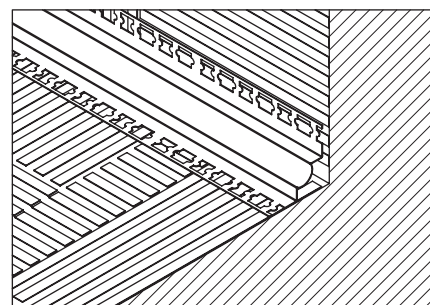


- 3 Press the profile until it is fixed to the joint.

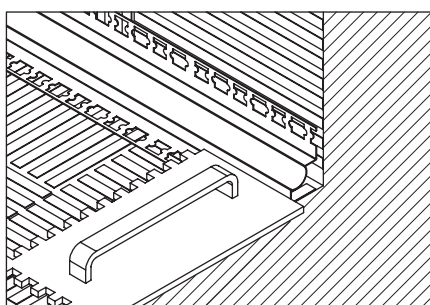


- 4 Apply joint to the places where the ceramics will be placed.

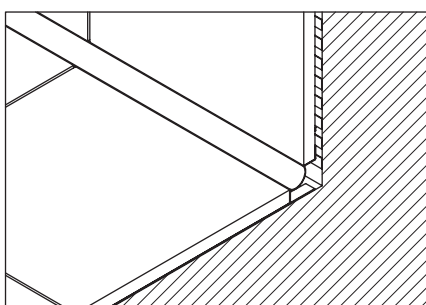


- 5 Place and align the ceramics to the profile.

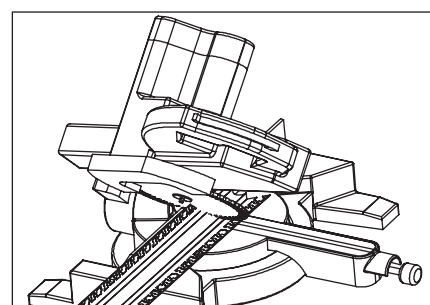


- 6 Cut profiles 45 degrees for external corners.

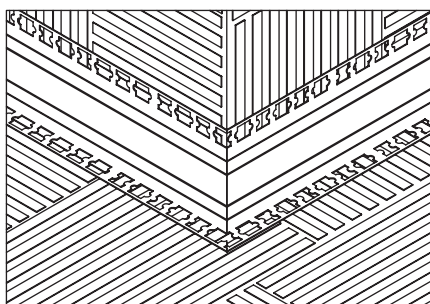


- 7 Align the profiles at the external corners and press them into the joint.

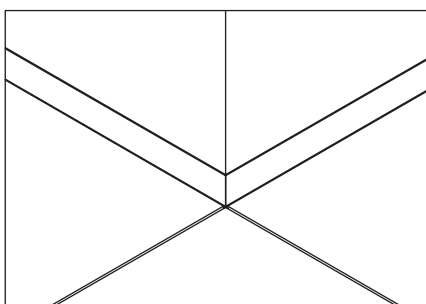


- 8 Place and align the ceramics to the profile.

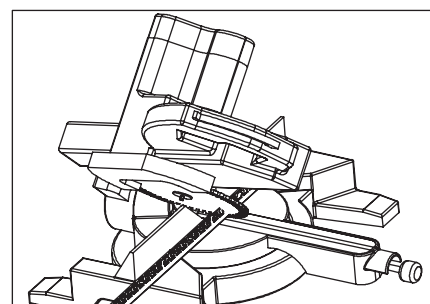

- 9 Cut profiles 45 degrees for internal corners.

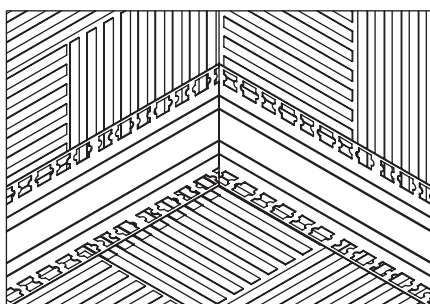

- 10 Align the profiles at the internal corners and press them into the joint.

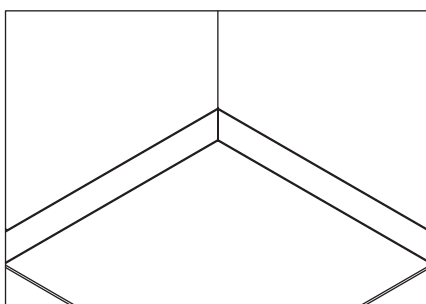

- 11 Place and align the ceramics to the profile.