

MOX sistemi - tehnična dokumentacija

assembly-manual-revio-en.pdf

Tehnični prevod: za dimenzije si oglejte izvirne risbe in referenčne strani.

Izvorna stran 1

NAVODILA ZA SESTAVLJANJE Revio

Nanos z lepilom

- 1 Nanesite silikon ali fugo na profil.
- 2 Profil pritrdite na tla in ga pritisknite.
- 3 Preprogo položite na profil.

Aplikacija z vijakom


- 11 Pritrdite profil z vijaki.
- 2 Preprogo položite na profil.

Köşe Birleşimleri


- 1 Za notranje vogale odrežite profile pod kotom 45 stopinj.
- 2 Poravnajte profile na notranjih kotih in jih položite v spoj.
- 3 Preprogo položite na profil.
- 4 Za zunanje vogale odrežite profile pod kotom 45 stopinj.
- 5 Poravnajte profile na zunanjih vogalih in jih položite v spoj.
- 6 Preprogo položite na profil.

Izvirne risbe in referenčne strani


Application with Adhesive

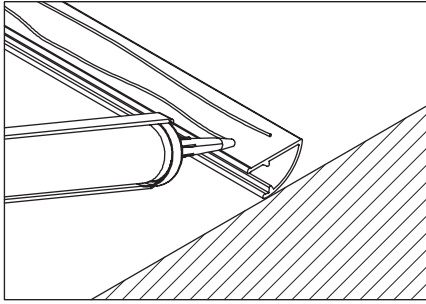

1 Apply silicone or joint to the profile.

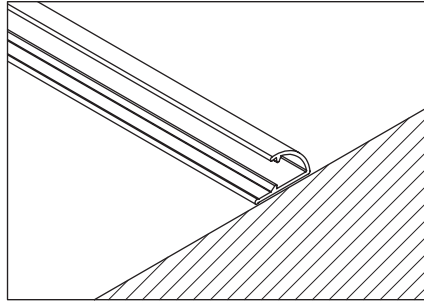


2 Fix the profile to the floor and press it.

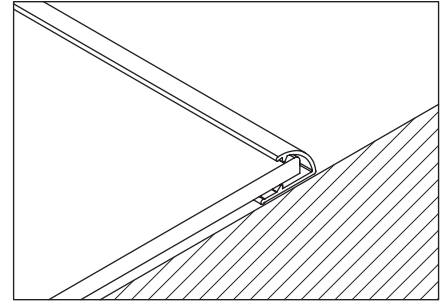


3 Place the carpet to the profile.

Application with Screw

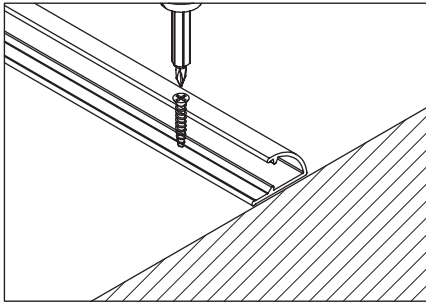


1 Fix the profile with screws.

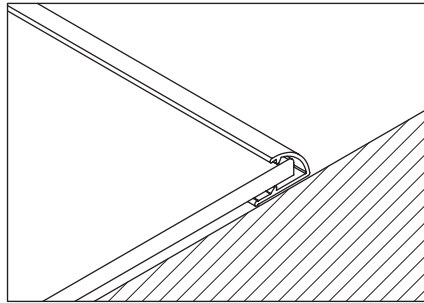


2 Place the carpet to the profile.


Köşe Birleşimleri

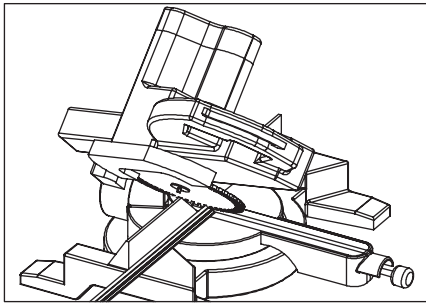


1 Cut profiles 45 degrees for internal corners.

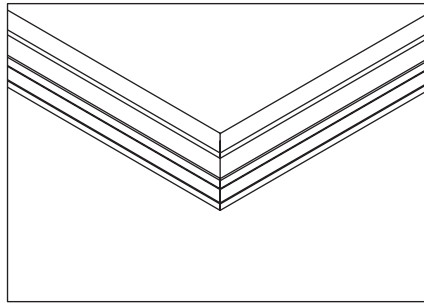


2 Align the profiles at the internal corners and place them into the joint.

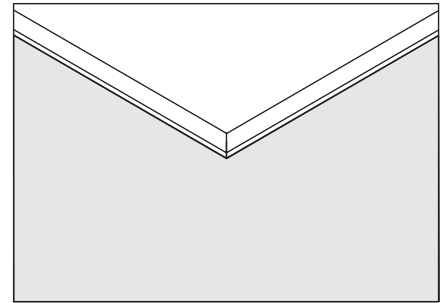


3 Place the carpet to the profile.

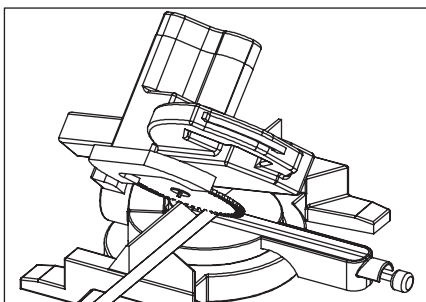

4 Cut profiles 45 degrees for external corners.

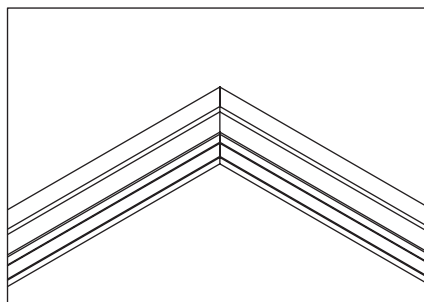

5 Align the profiles at the external corners and place them into the joint.

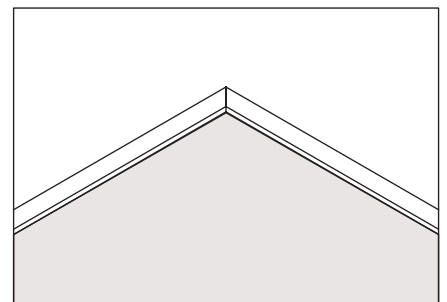

6 Place the carpet to the profile.