

MOX sistemi - tehnična dokumentacija

assembly-manual-sole-en.pdf

Tehnični prevod: za dimenzije si oglejte izvirne risbe in referenčne strani.


Izvorna stran 1

NAVODILA ZA SESTAVLJANJE PODPLATA MOX


- 1 Postavite pritrdilne dele na steno v razmaku 50 cm in označite steno od lukenj za vijake.
- 2 Izvrtajte točke, ki ste jih že označili.
- 3 V izvrtane luknje vstavite ustrezne moznike glede na material stene.
- 4 Privijte dele za pritrditev na steno na mesta, ki so izvrtana v intervalih 50 cm.
- 5 Sestavite profil na stenske pritrdilne dele tako kot na sliki.
- 6 Prepričajte se, da so žebli profila in žebli pritrdilnega dela med seboj popolnoma povezani in da je podplat profila pritrjen na tla.
- 7 Pritrdite orodja za pritrdjevanje na steno tako, da bodo zaprta na vogale, in sestavite orodja za združevanje vogalov s profili, da zagotovite vrtenje zunanjih vogalov.
- 8 Prepričajte se, da so profili in orodja za združevanje vogalov popolnoma pritrjeni drug na drugega na zunanjih vogalih.
- 9 Pritrdite orodja za pritrdjevanje na steno tako, da bodo zaprta na vogale, in sestavite orodja za združevanje vogalov s profili, da zagotovite vrtenje notranjih vogalov.
- 10 Prepričajte se, da so profili in orodja za združevanje vogalov popolnoma pritrjeni drug na drugega na notranjih vogalih.
- 11 Sestavite orodja za pokrove s profili, da zagotovite pravilen zaključek stene.
- 12 Prepričajte se, da so profili in orodja za pokrove popolnoma pritrjeni drug na drugega na koncih stene.

Stran 1/1


Izvirne risbe in referenčne strani

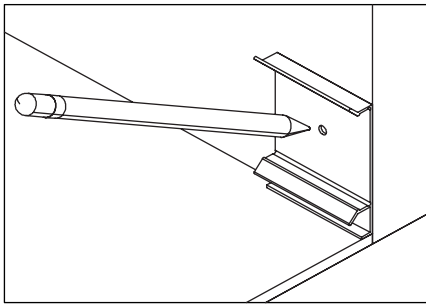


1 Place the wall fixation parts at 50cm intervals and mark the wall from the screw holes.

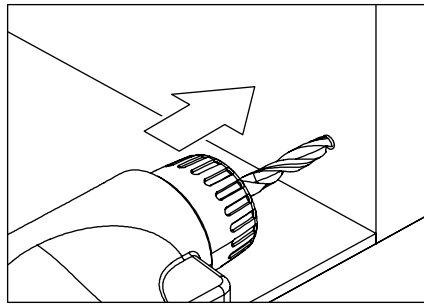


2 Drill the points that you have already marked.

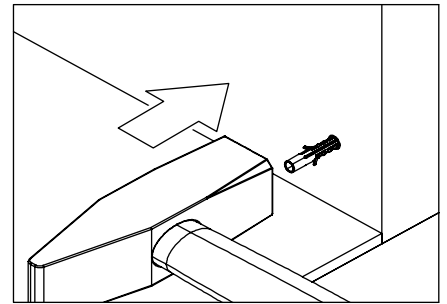


3 Place the correct dowels according to the wall material into the drilled holes.

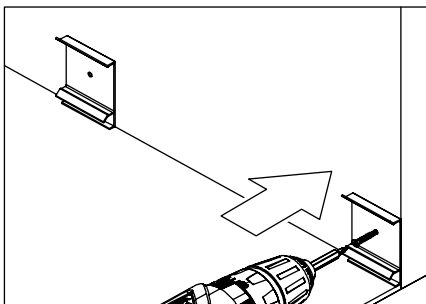


4 Screw the wall fixation parts to the places that are drilled at 50cm intervals.

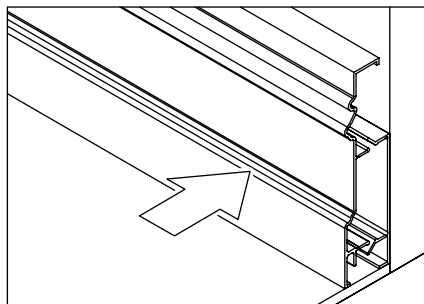


5 Assemble the profile on the wall fixation parts just like in the picture.

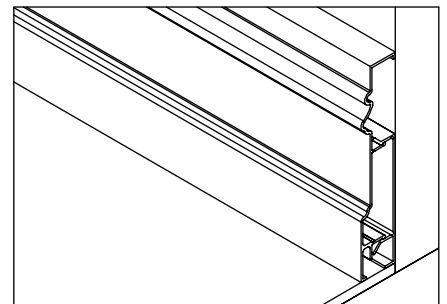


6 Make sure that the profile nails and the fixation part's nails are completely connected to each other and be sure that the profile sole is fixed to the floor.

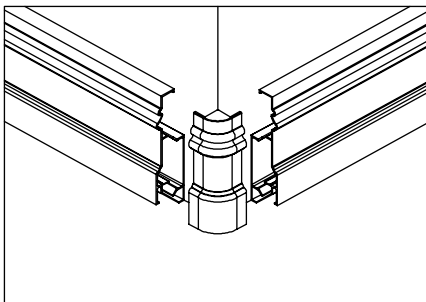


7 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the corner combining tools with the profiles to ensure the rotating of external corners.

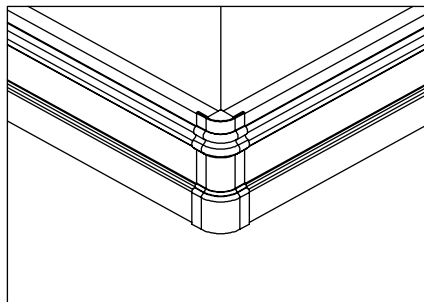


8 Make sure that profiles and corner combining tools are fixed to each other completely at the external corners.

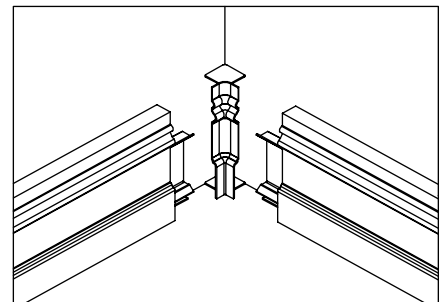


9 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the corner combining tools with the profiles to ensure the rotating of internal corners.

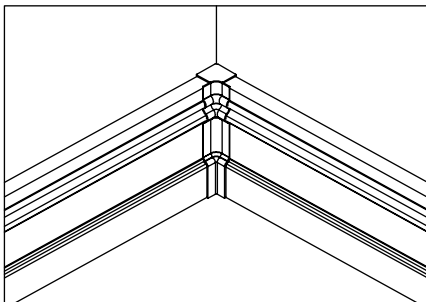

10 Make sure that profiles and corner combining tools are fixed to each other completely at the internal corners.

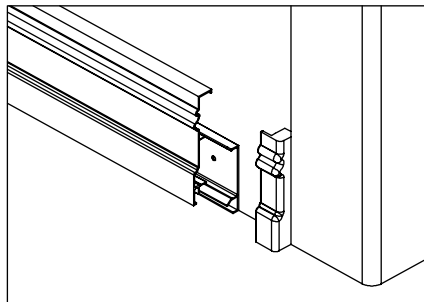

11 Assemble the cap tools with the profiles to ensure the wall ends properly.

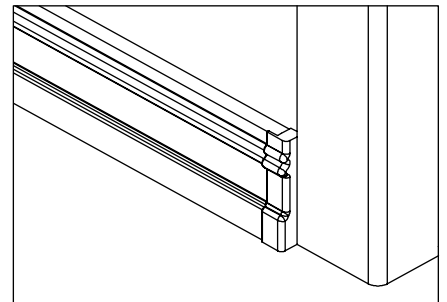

12 Make sure that profiles and cap tools are fixed to each other completely at the ends of the wall.