

MOX sistemi - tehnična dokumentacija

assembly-manual-velo-en.pdf

Tehnični prevod: za dimenzije si oglejte izvirne risbe in referenčne strani.


Izvorna stran 1

NAVODILA ZA SESTAVLJANJE Velo


- 1 Stisnite silikon v obliki dveh linij na zadnjo stran profila.
- 2 Profil, ki ste ga stisnili s silikonom, prilepite na steno in pritisnite.
- 3 Profil, ki ste ga prilepili na steno, prilepite v razmaku 50 cm.
- 4 Dan zatem skrbno odstranite pasove na profilu.
- 5 Prepričajte se, da je profil trdno pritrjen na steno.
- 6 Za zunanje vogale odrežite profile pod kotom 45 stopinj.
- 7 Profile, ki ste jih odrezali pod kotom 45 stopinj, prilepite na steno tako, da bodo zaprti drug proti drugemu.
- 8 Prepričajte se, da so profili, ki so odrezani pod kotom 45 stopinj, popolnoma pritrjeni drug na drugega na zunanjih vogalih.
- 9 Za notranje vogale odrežite profile pod kotom 45 stopinj.
- 10 Profile, ki ste jih odrezali pod kotom 45 stopinj, prilepite na steno tako, da bodo zaprti drug proti drugemu.
- 11 Prepričajte se, da so profili, ki so odrezani pod kotom 45 stopinj, popolnoma pritrjeni drug na drugega v notranjih kotih.

Stran 1/1


Izvirne risbe in referenčne strani

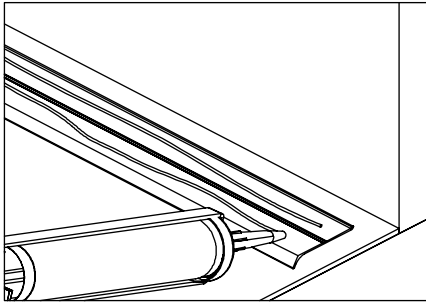


1 Squeeze the silicon in the manner of two lines to the back side of the profile.

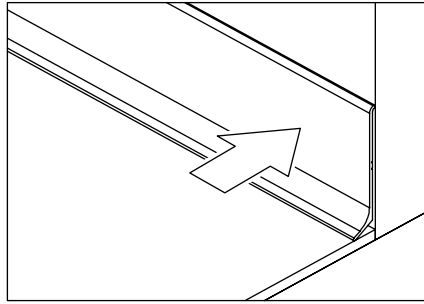


2 Paste the profile that you squeezed the silicon to the wall and press.

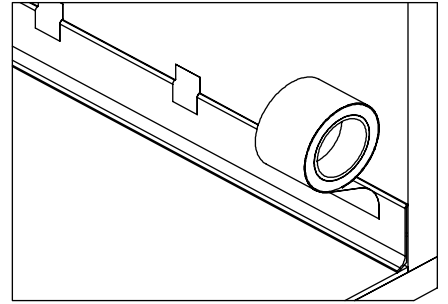


3 Tape the profile that you pasted to the wall at 50cm intervals.

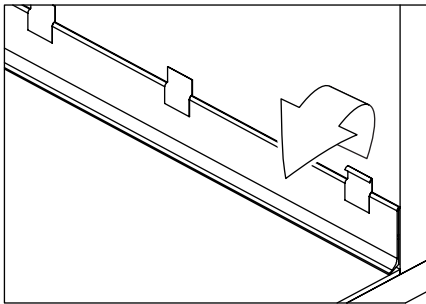


4 Remove the bands that on the profile heedfully the day after.

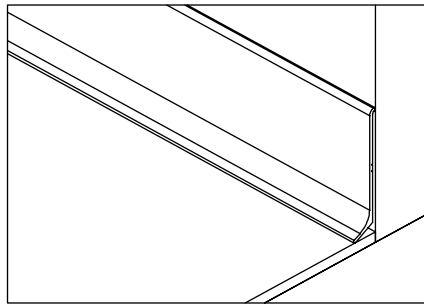


5 Make sure that the profile is stuck to the wall firmly.

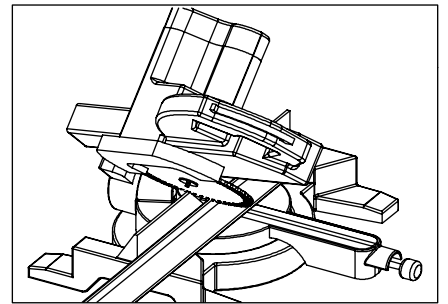


6 Cut profiles 45 degrees for external corners.

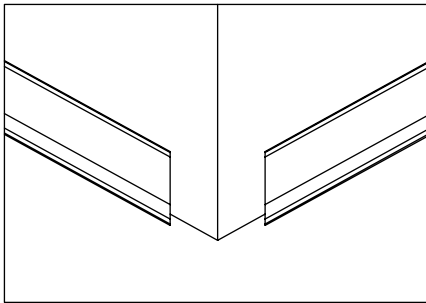


7 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

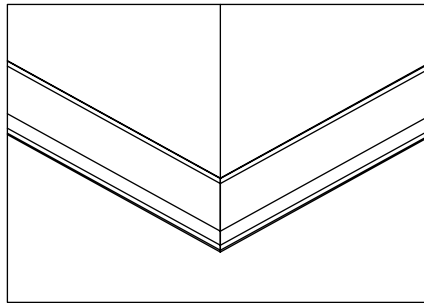


8 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

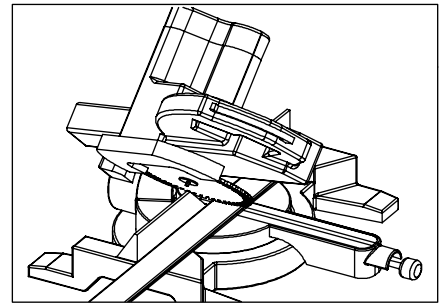

9 Cut profiles 45 degrees for internal corners.

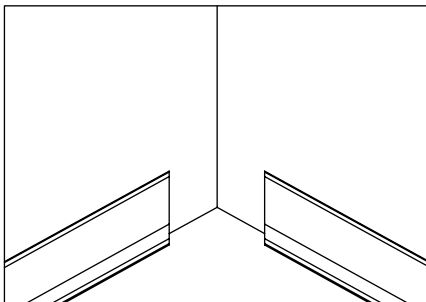

10 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

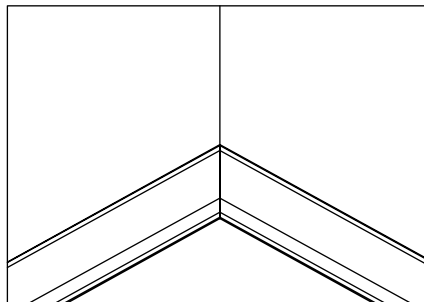

11 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.