

MOX sistemi - tehnična dokumentacija

assembly-manual-visio-en.pdf

Tehnični prevod: za dimenzije si oglejte izvirne risbe in referenčne strani.


Izvorna stran 1

NAVODILA ZA SESTAVLJANJE Visio


- 1 Izberite pravi profil glede na debelino talne obloge.
- 2 Nanesite spoj in ustrezno namestite sidra za profile.
- 3 Pritisnite profil, dokler ni pritrjen na spoj.
- 4 Preprogo položite na profil.
- 5 Odrežite profile pod kotom 45 stopinj za zunanje vogale.
- 6 Poravnajte profile na zunanjih vogalih in jih položite v spoj.
- 7 Preprogo položite na profil.
- 8 Za notranje vogale odrežite profile pod kotom 45 stopinj.
- 9 Poravnajte profile na notranjih kotih in jih položite v spoj.
- 10 Preprogo položite na profil. 6 8

Stran 1/1


Izvirne risbe in referenčne strani

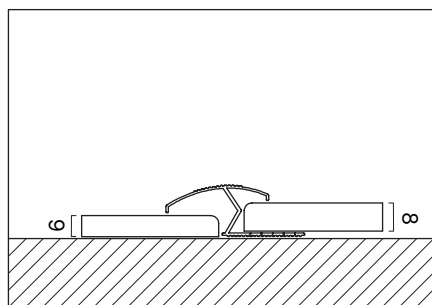


1 Pick the correct profile according to the flooring thickness.

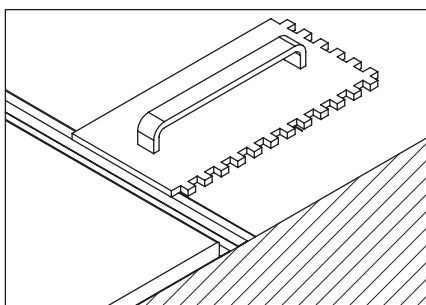


2 Apply joint and place the profiles anchor accordingly.

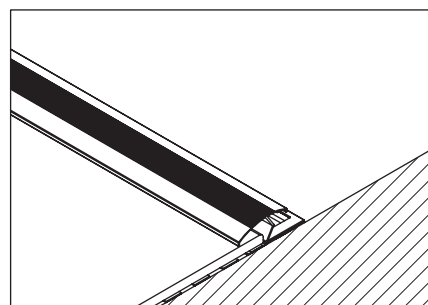


3 Press the profile until it is fixed to the joint.

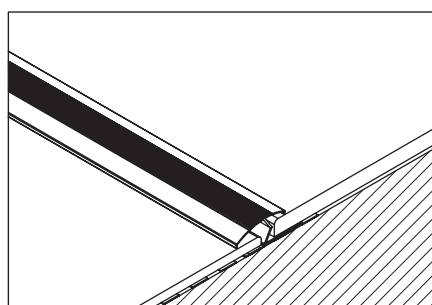


4 Place the carpet to the profile.

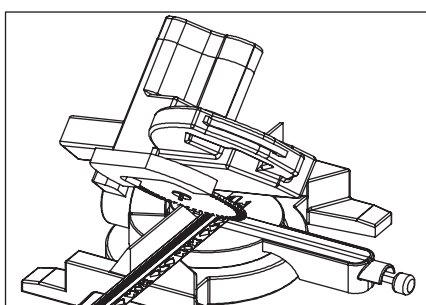


5 Cut profiles 45 degrees for external corners.

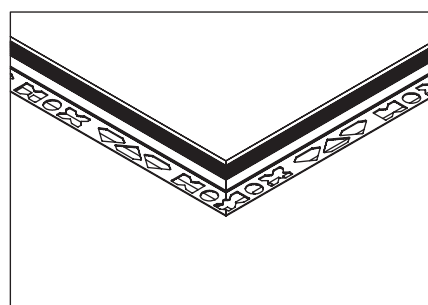


6 Align the profiles at the external corners and place them into the joint.

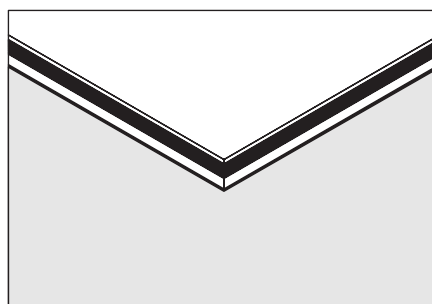


7 Place the carpet to the profile.

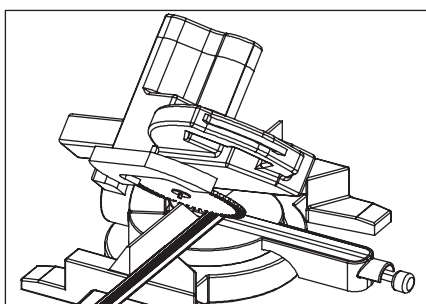

8 Cut profiles 45 degrees for internal corners.

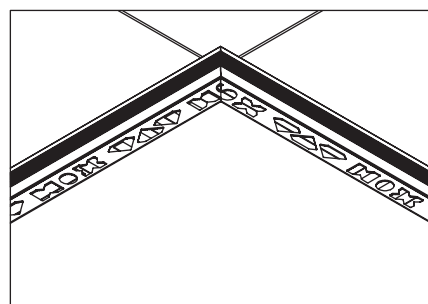

9 Align the profiles at the internal corners and place them into the joint.

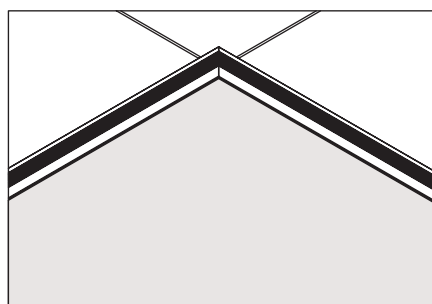

10 Place the carpet to the profile.