

MOX Systems - dokumentacion teknik

assembly-manual-revio-en.pdf

Përkthimi teknik: konsultohuni me vizatimet origjinale dhe faqet e referencës për dimensionet.

Faqja burimore 1

UDHËZUES PËR ASSEMBLI Revio

Aplikimi me ngjitës

- 1 Aplikoni silikon ose nyje në profil.
- 2 Fiksoni profilin në dysHEME dhe shtypni atë.
- 3 Vendoseni tapetin në profil.

Aplikim me vidë


- 11 Fiksoni profilin me vida.
- 2 Vendoseni tapetin në profil.

Köşe Birleşimleri


- 1 Pritini profilet 45 gradë për qoshet e brendshme.
- 2 Rreshtoni profilet në qoshet e brendshme dhe vendosini në bashkim.
- 3 Vendoseni tapetin në profil.
- 4 Pritini profilet 45 gradë për qoshet e jashtme.
- 5 Rreshtoni profilet në qoshet e jashtme dhe vendosini ato në bashkim.
- 6 Vendoseni tapetin në profil.

Vizatime origjinale dhe faqe referimi


Application with Adhesive

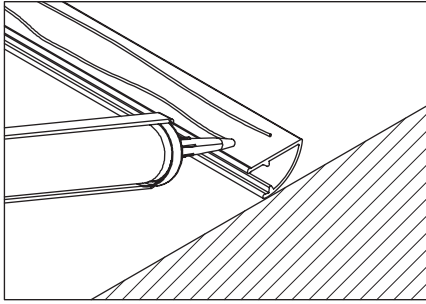

1 Apply silicone or joint to the profile.

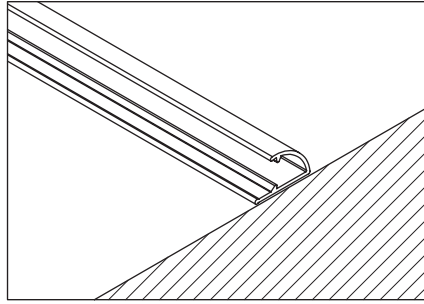


2 Fix the profile to the floor and press it.

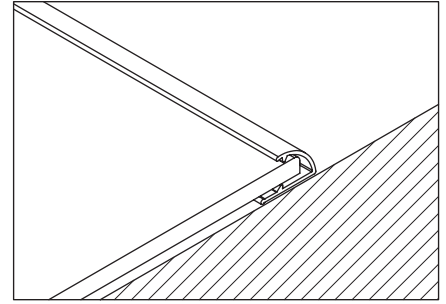


3 Place the carpet to the profile.

Application with Screw

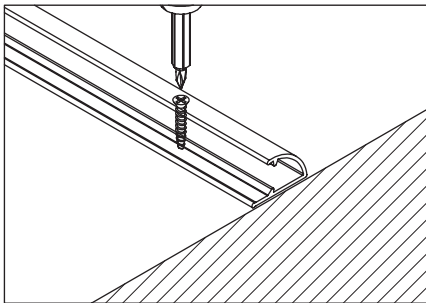


1 Fix the profile with screws.

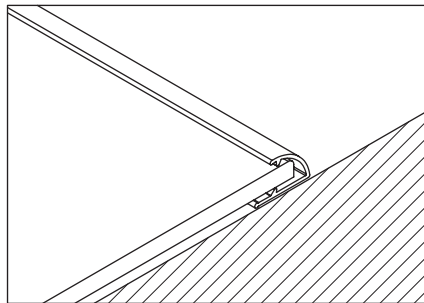


2 Place the carpet to the profile.


Köşe Birleşimleri

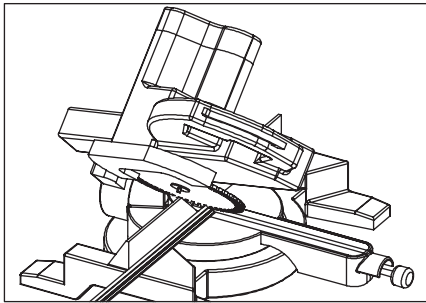


1 Cut profiles 45 degrees for internal corners.

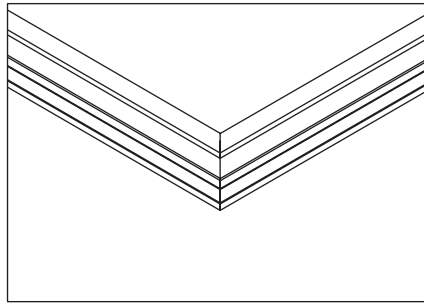


2 Align the profiles at the internal corners and place them into the joint.

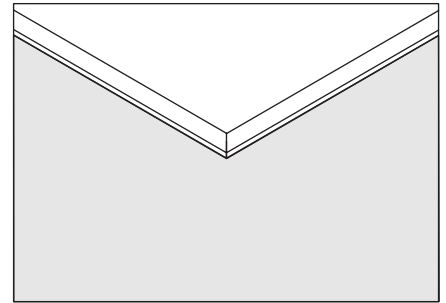


3 Place the carpet to the profile.

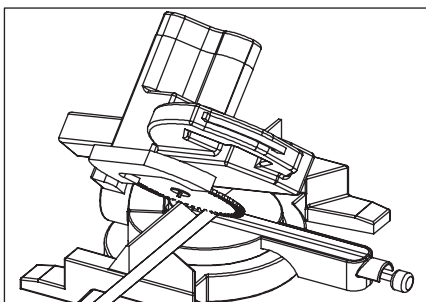

4 Cut profiles 45 degrees for external corners.

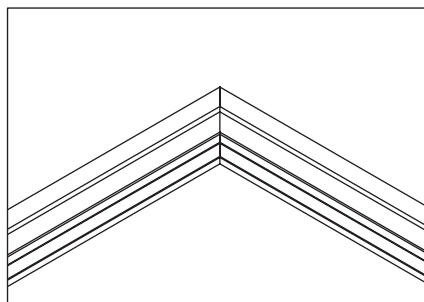

5 Align the profiles at the external corners and place them into the joint.

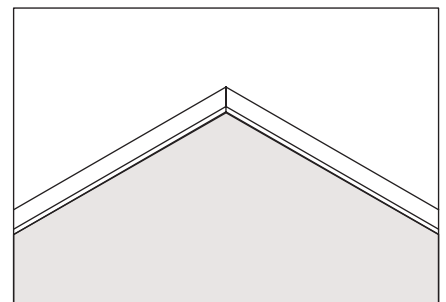

6 Place the carpet to the profile.