

MOX Systems - dokumentacion teknik

assembly-manual-square-fix-en.pdf

Përkthimi teknik: konsultohuni me vizatimet origjinale dhe faqet e referencës për dimensionet.


Faqja burimore 1

UDHËZUES PËR MONTIM TË MONTIMIT TË SHËSHTIT MOX

- 1 Zgjidhni profilin e duhur sipas trashësisë së pllakës.
- 2 Aplikoni bashkimin dhe vendoseni spirancën e profileve në përputhje me rrethanat.
- 3 Shtypni profilin derisa të fiksohet në bashkim.
- 4 Aplikoni fuga në vendet ku do të vendoset qeramika.
- 5 Vendosni pllakat në profil, duke u siguruar që skajet e tyre të përshtaten me profilin dhe të jenë të rrafshët.
- 6 Pritini dy profile në 45 gradë për nyjet e qosheve.
- 7 Rreshtoni profilet në qoshe dhe shtypni ato në bashkim. 10
- 8 Vendosni pllakat në profil, duke u siguruar që skajet e tyre të përshtaten me profilin dhe të jenë të rrafshët.

Faqe 1/1


Vizatime origjinale dhe faqe referimi

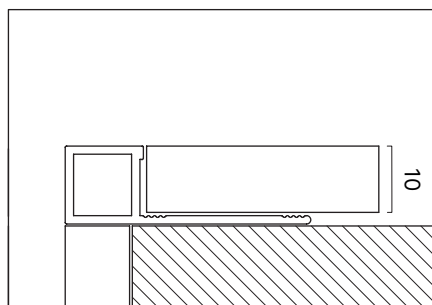


1 Pick the correct profile according to the tile thickness.




2 Apply joint and place the profiles anchor accordingly.

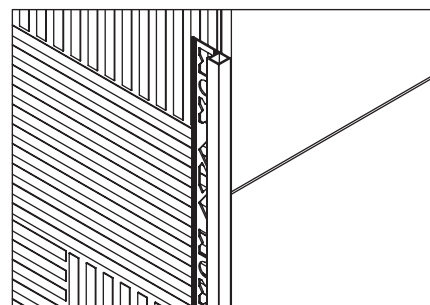


3 Press the profile until it is fixed to the joint.

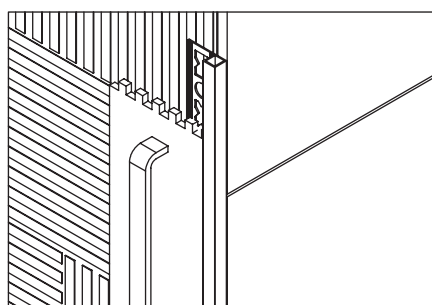


4 Apply joint to the places where the ceramics will be placed.

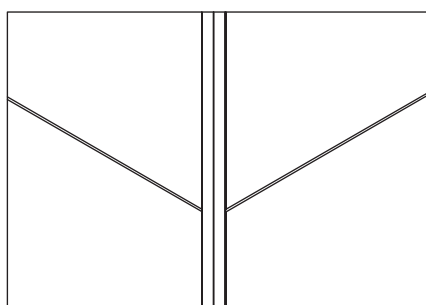


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

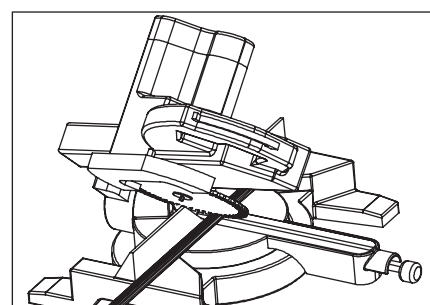

6 Cut two profiles at 45 degrees for corner joints.

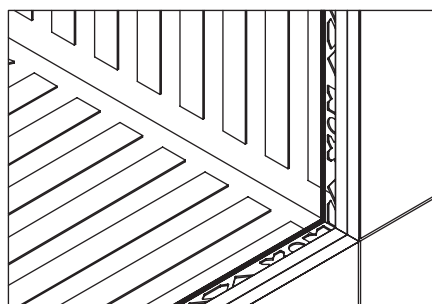

7 Align the profiles at the corners and press them into the joint.

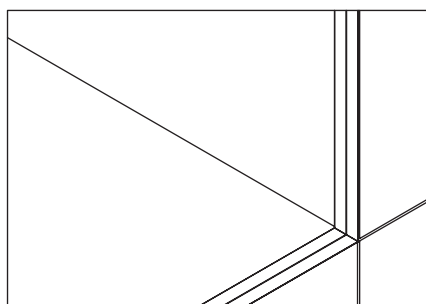

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.