

MOX Systems - dokumentacion teknik

assembly-manual-velo-en.pdf

Përkthimi teknik: konsultohuni me vizatimet origjinale dhe faqet e referencës për dimensionet.


Faqja burimore 1

UDHËZUES PËR KUVENDIM Velo


- 1 Shtrydhni silikonin në mënyrën e dy vijave në anën e pasme të profilit.
- 2 Ngjitni profilin që keni shtrydhur silikonin në mur dhe shtypni.
- 3 Ngjitni profilin që keni ngjitur në mur në intervale prej 50 cm.
- 4 Hiqini shiritat që janë në profil me kujdes të nesërmen.
- 5 Sigurohuni që profili të jetë ngjitur fort në mur.
- 6 Pritini profilet 45 gradë për qoshet e jashtme.
- 7 Ngjitni profilet që keni prerë 45 gradë në mur në mënyrën që do të mbyllen me njëri-tjetrin.
- 8 Sigurohuni që profilet që janë prerë 45 gradë të jenë të fiksuara plotësisht me njëri-tjetrin në qoshet e jashtme.
- 9 Pritini profilet 45 gradë për qoshet e brendshme.
- 10 Ngjitni profilet që keni prerë 45 gradë në mur në mënyrën që do të mbyllen me njëri-tjetrin.
- 11 Sigurohuni që profilet që janë prerë 45 gradë të jenë të fiksuara plotësisht me njëri-tjetrin në qoshet e brendshme.

Faqe 1/1


Vizatime origjinale dhe faqe referimi

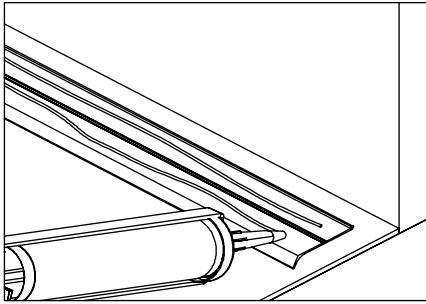


1 Squeeze the silicon in the manner of two lines to the back side of the profile.

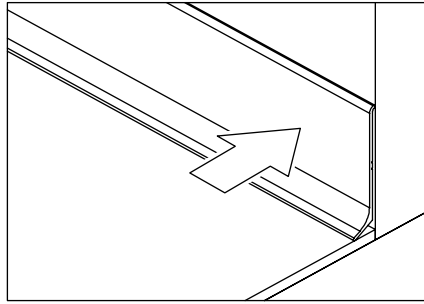


2 Paste the profile that you squeezed the silicon to the wall and press.

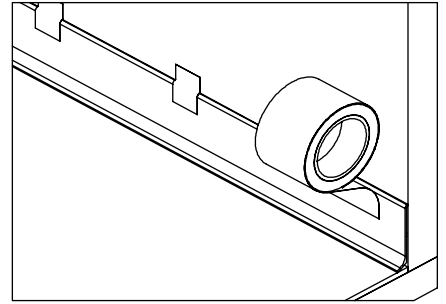


3 Tape the profile that you pasted to the wall at 50cm intervals.

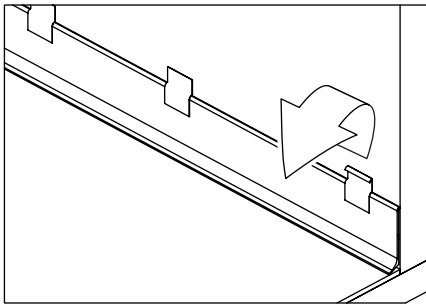


4 Remove the bands that on the profile heedfully the day after.

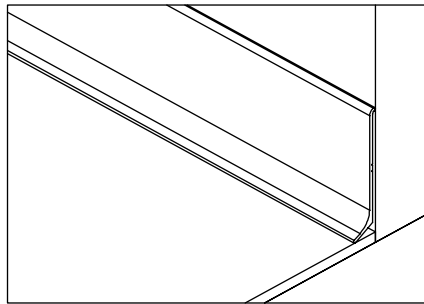


5 Make sure that the profile is stuck to the wall firmly.

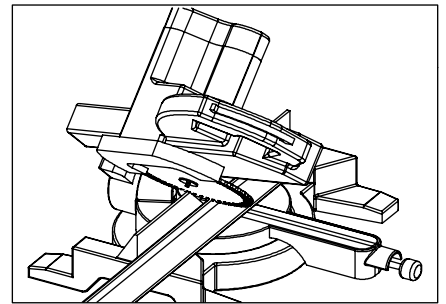


6 Cut profiles 45 degrees for external corners.

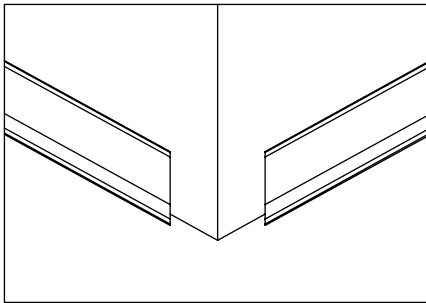


7 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

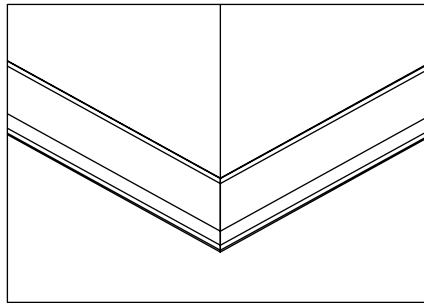


8 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

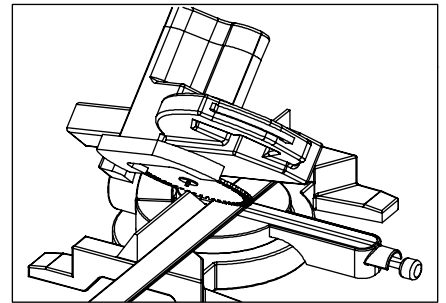

9 Cut profiles 45 degrees for internal corners.

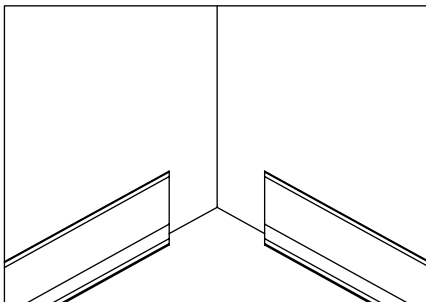

10 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

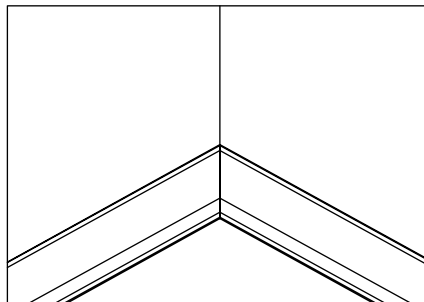

11 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.