

MOX Systems - dokumentacion teknik

assembly-manual-visio-en.pdf

Përkthimi teknik: konsultohuni me vizatimet origjinale dhe faqet e referencës për dimensionet.


Faqja burimore 1

Visio ASSEMBLY GUIDA


- 1 Zgjidhni profilin e duhur sipas trashësisë së dyshemesë.
- 2 Aplikoni bashkimin dhe vendoseni spirancën e profileve në përputhje me rrethanat.
- 3 Shtypni profilin derisa të fiksohet në bashkim.
- 4 Vendoseni tapetin në profil.
- 5 Pritini profilet 45 gradë për qoshet e jashtme.
- 6 Rreshtoni profilet në qoshet e jashtme dhe vendosini në bashkim.
- 7 Vendoseni tapetin në profil.
- 8 Pritini profilet 45 gradë për qoshet e brendshme.
- 9 Rreshtoni profilet në qoshet e brendshme dhe vendosini ato në bashkim.
- 10 Vendoseni tapetin në profil. 6 8

Faqe 1/1


Vizatime origjinale dhe faqe referimi

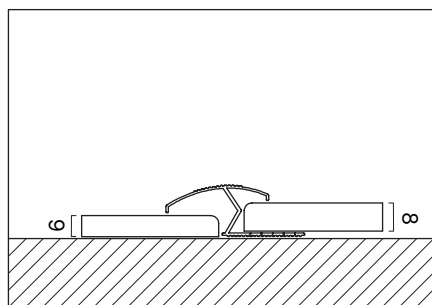


1 Pick the correct profile according to the flooring thickness.

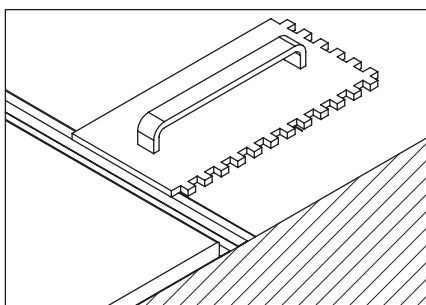


2 Apply joint and place the profiles anchor accordingly.

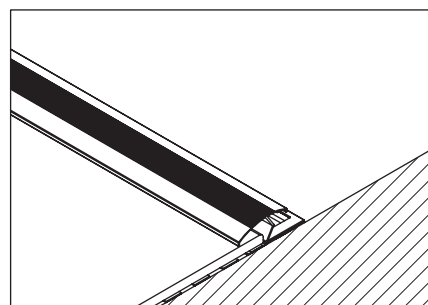


3 Press the profile until it is fixed to the joint.

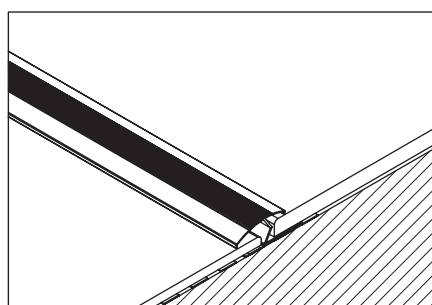


4 Place the carpet to the profile.

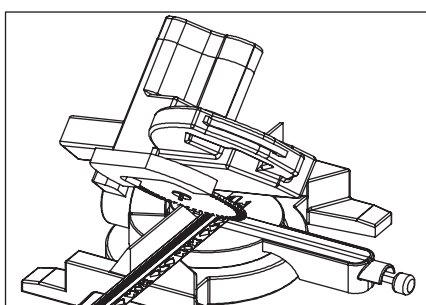


5 Cut profiles 45 degrees for external corners.

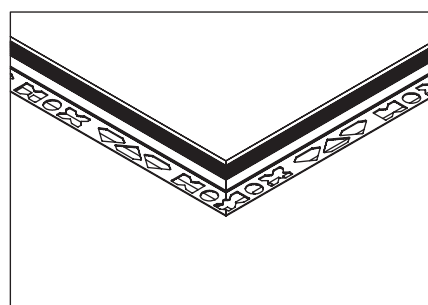


6 Align the profiles at the external corners and place them into the joint.

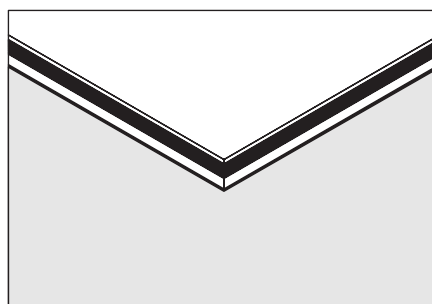


7 Place the carpet to the profile.

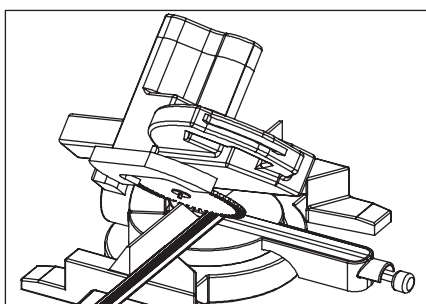

8 Cut profiles 45 degrees for internal corners.

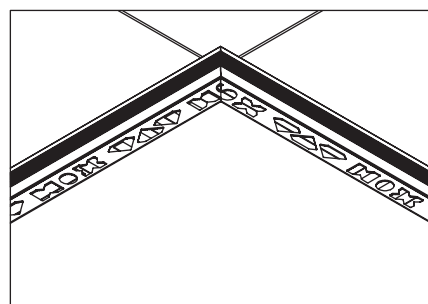

9 Align the profiles at the internal corners and place them into the joint.

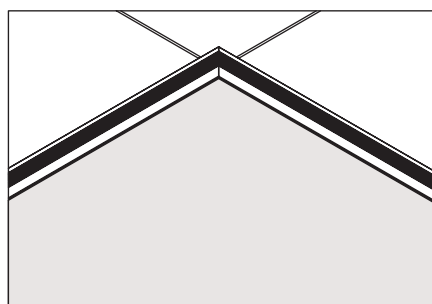

10 Place the carpet to the profile.