

# МОХ системи - техничка документација

assembly-manual-mps-n-en.pdf

Технички превод: консултујте оригиналне цртеже и референтне странице за димензије.

## Изворна страница 1

### МОХ МПС-Н ВОДИЧ ЗА САСТАВЉАЊЕ

Изаберите одговарајући профил према дебљини пода.

2 Нанесите спој и у складу са тим поставите сидрење профила.

3 Притисните профил док се не причврсти за спој.

4 Нанесите спој на места на којима ће се поставити под.

5 Поставите и поравнајте под према профилу.

6 Изрежите профиле под 45 степени за спољне углове.

Поравнајте профиле на спољним угловима и притисните их у спој.

8 Поставите и поравнајте под према профилу.


9 Изрежите профиле 45 степени за унутрашње углове.

10 Поравнајте профиле на унутрашњим угловима и притисните их у спој.


11 Поставите и поравнајте под према профилу.

Страна 1/1


## Оригинални цртежи и референтне странице

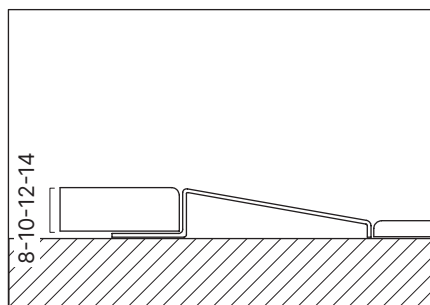


**1** Pick the correct profile according to the flooring thickness.

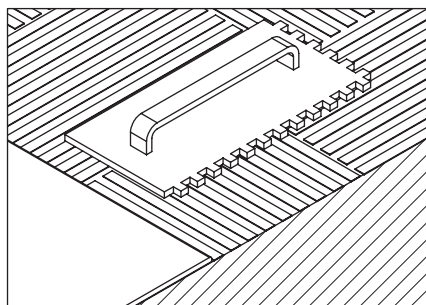


**2** Apply joint and place the profiles anchor accordingly.

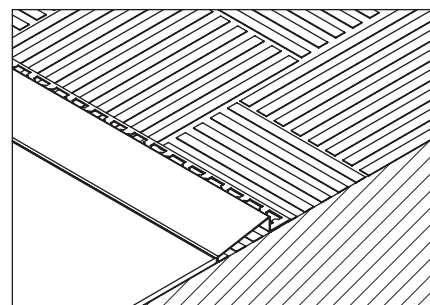


**3** Press the profile until it is fixed to the joint.

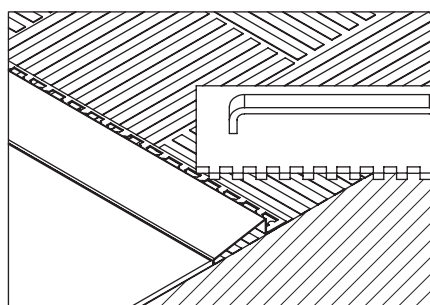


**4** Apply joint to the places where the flooring will be placed.

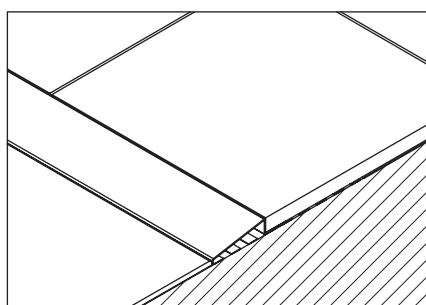


**5** Place and align the flooring to the profile.

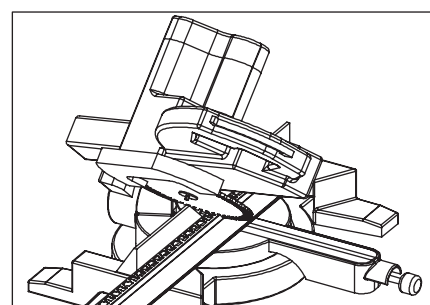


**6** Cut profiles 45 degrees for external corners.

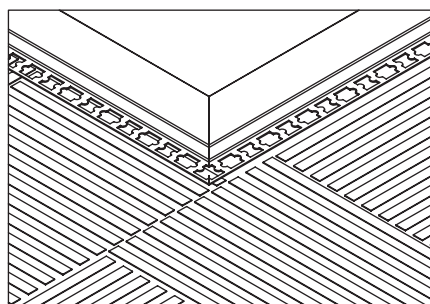


**7** Align the profiles at the external corners and press them into the joint.

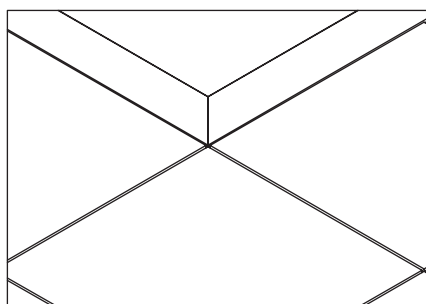


**8** Place and align the flooring to the profile.

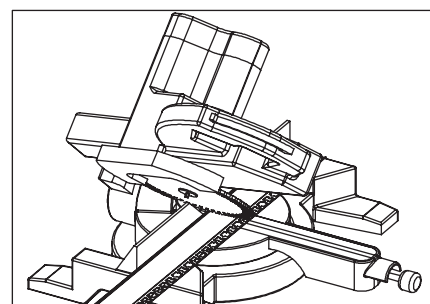

**9** Cut profiles 45 degrees for internal corners.

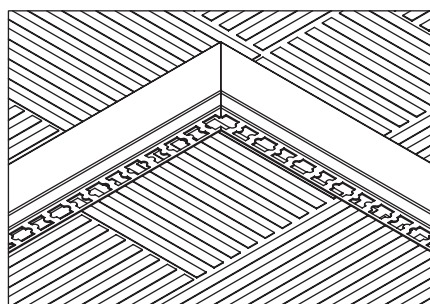

**10** Align the profiles at the internal corners and press them into the joint.

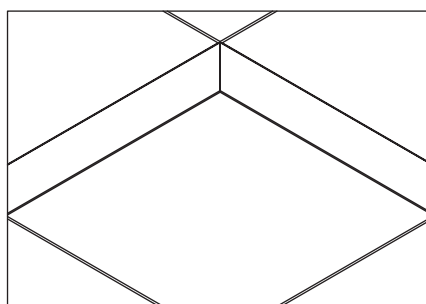

**11** Place and align the flooring to the profile.