

МОХ системи - техничка документација

assembly-manual-mps-tb-en.pdf

Технички превод: консултујте оригиналне цртеже и референтне странице за димензије.

Изворна страница 1

МОХ МПС-ТБ ВОДИЧ ЗА САСТАВЉАЊЕ

Изаберите одговарајући профил према дебљини пода.

2 Нанесите спој и у складу са тим поставите сидрење профила.

3 Притисните профил док се не причврсти за спој.

4 Нанесите спој на места на којима ће се поставити под.

5 Поставите и поравнајте под према профилу.

6 Изрежите профиле под 45 степени за спољне углове.

Поравнајте профиле на спољним угловима и притисните их у спој.

8 Поставите и поравнајте под према профилу.


9 Изрежите профиле 45 степени за унутрашње углове.

10 Поравнајте профиле на унутрашњим угловима и притисните их у спој.


11 Поставите и поравнајте под према профилу.

Страна 1/1


Оригинални цртежи и референтне странице

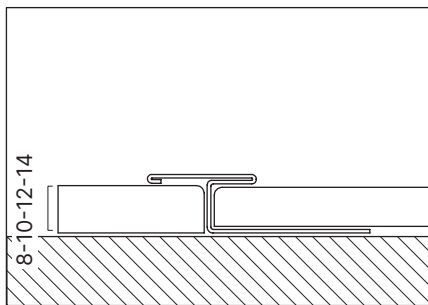


1 Pick the correct profile according to the flooring thickness.

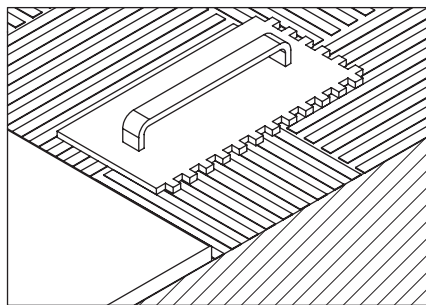


2 Apply joint and place the profiles anchor accordingly.

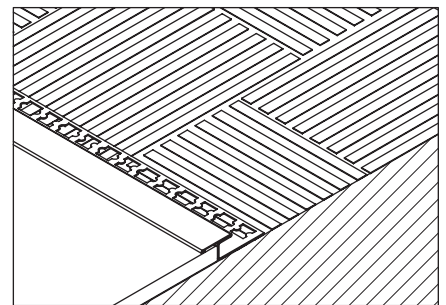


3 Press the profile until it is fixed to the joint.

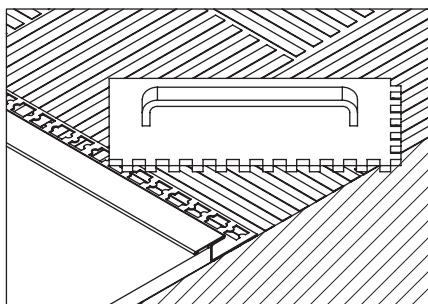


4 Apply joint to the places where the flooring will be placed.

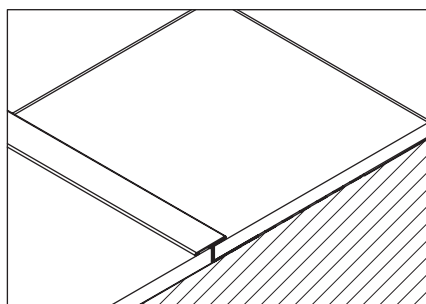


5 Place and align the flooring to the profile.

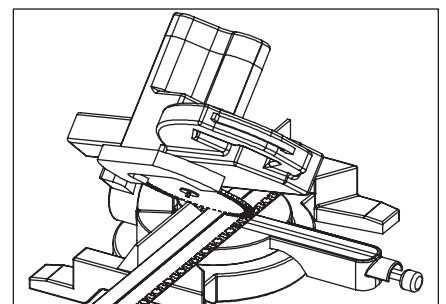


6 Cut profiles 45 degrees for external corners.

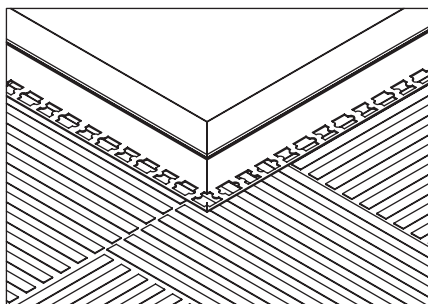


7 Align the profiles at the external corners and press them into the joint.

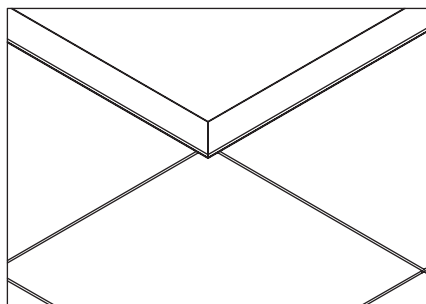


8 Place and align the flooring to the profile.

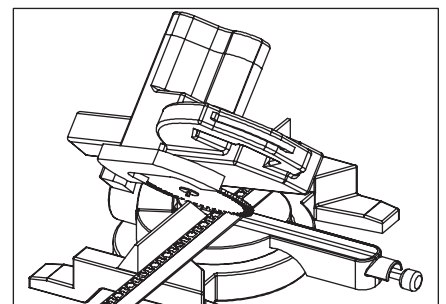

9 Cut profiles 45 degrees for internal corners.

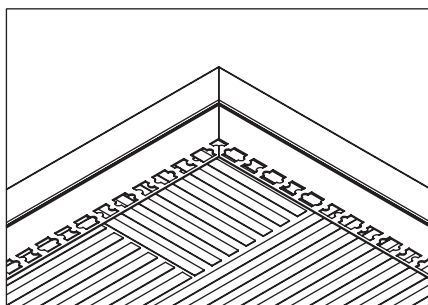

10 Align the profiles at the internal corners and press them into the joint.

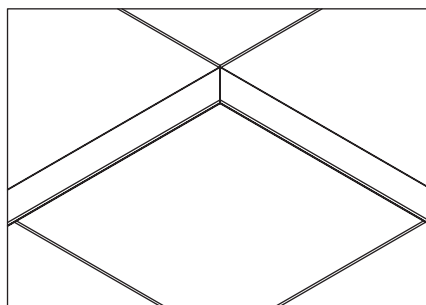

11 Place and align the flooring to the profile.