

МОХ системи - техничка документација

assembly-manual-revio-en.pdf

Технички превод: консултујте оригиналне цртеже и референтне странице за димензије.

Изворна страница 1

МОХ РЕВИО ВОДИЧ ЗА САСТАВЉАЊЕ

Примена са лепком

- 1 Нанесите силикон или спој на профил.
- 2 Причврстите профил за под и притисните га.
- 3 Поставите тепих на профил.

Примена са завртњем


- 11 Причврстите профил вијцима.
- 2 Поставите тепих на профил.

Косе Бирлесимлери


- 1 Изрежите профиле под 45 степени за унутрашње углове.
- 2 Поравнајте профиле на унутрашњим угловима и поставите их у спој.
- 3 Поставите тепих на профил.
- 4 Изрежите профиле 45 степени за спољне углове.
- 5 Поравнајте профиле на спољним угловима и поставите их у спој.
- 6 Поставите тепих на профил.

Оригинални цртежи и референтне странице


Application with Adhesive

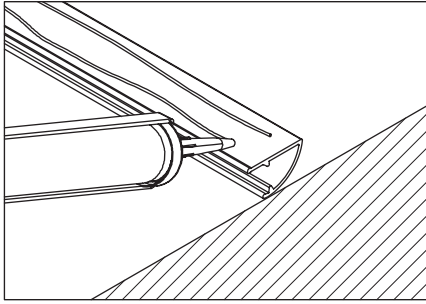

1 Apply silicone or joint to the profile.

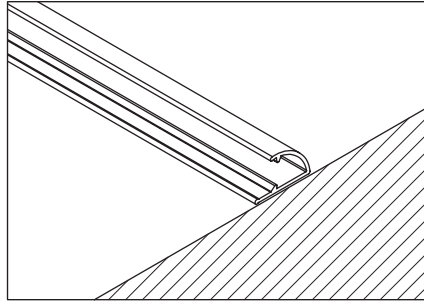


2 Fix the profile to the floor and press it.

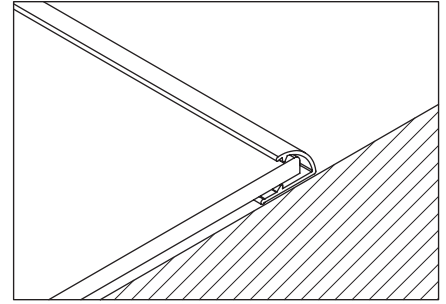


3 Place the carpet to the profile.

Application with Screw

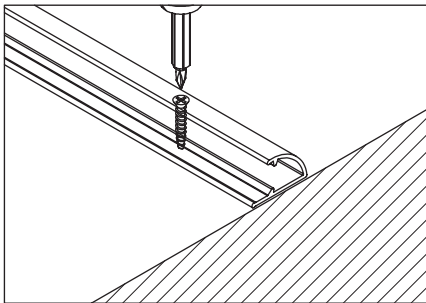


1 Fix the profile with screws.

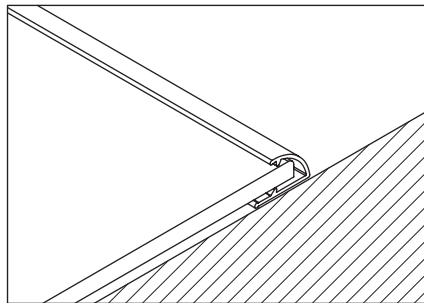


2 Place the carpet to the profile.


Köşe Birleşimleri

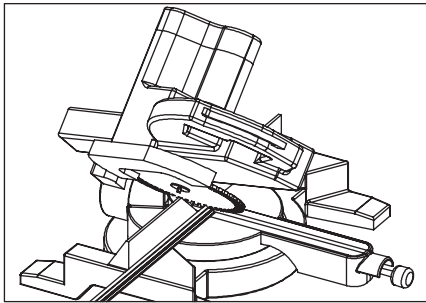


1 Cut profiles 45 degrees for internal corners.

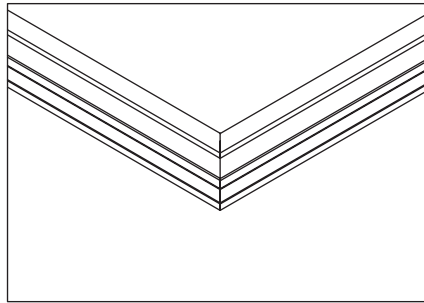


2 Align the profiles at the internal corners and place them into the joint.

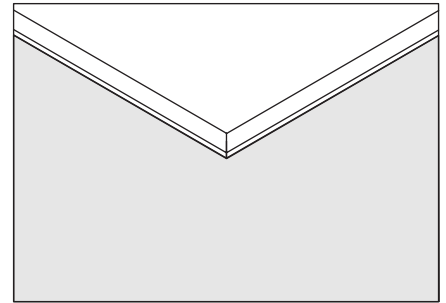


3 Place the carpet to the profile.

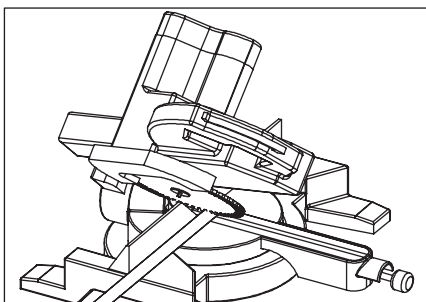

4 Cut profiles 45 degrees for external corners.

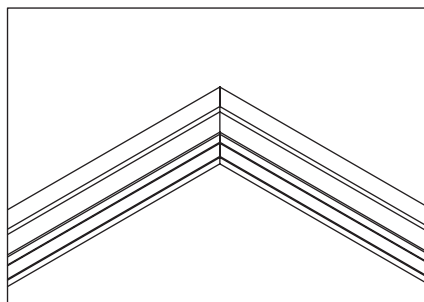

5 Align the profiles at the external corners and place them into the joint.

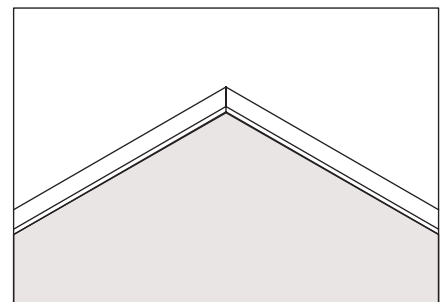

6 Place the carpet to the profile.