

МОХ системи - техничка документација

assembly-manual-round-fix-en.pdf

Технички превод: консултујте оригиналне цртеже и референтне странице за димензије.


Изворна страница 1

МОХ РОУНД-ФИКС ВОДИЧ ЗА САСТАВЉАЊЕ

- 1 Изаберите тачан профил према дебљини плочице.
- 2 Нанесите спој и у складу са тим поставите сидрење профила.
- 3 Притисните профил док се не причврсти за спој.
- 4 Нанесите спој на места на којима ће бити постављена керамика.
- 5 Поставите плочице на профил, пазећи да им ивице одговарају профилу и да су у равни.
- 6 Изрежите два профила под углом од 45 степени за угаоне спојеве.
- 7 Поравнајте профиле на унутрашњим угловима и притисните их у спој. 10
- 8 Поставите плочице на профил, пазећи да им ивице одговарају профилу и да су у равни.

Страна 1/1


Оригинални цртежи и референтне странице

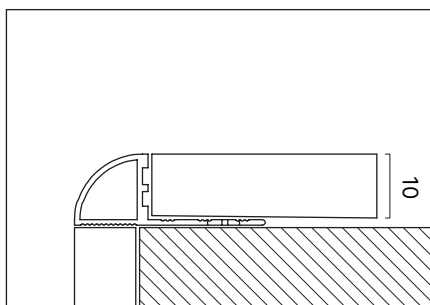


1 Pick the correct profile according to the tile thickness.




2 Apply joint and place the profiles anchor accordingly.

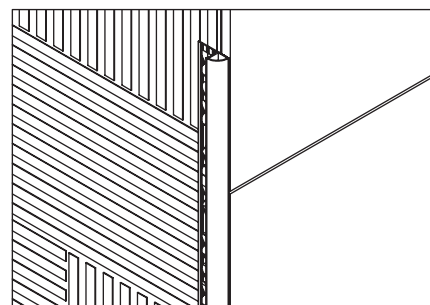


3 Press the profile until it is fixed to the joint.

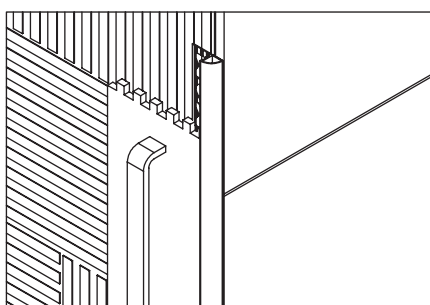


4 Apply joint to the places where the ceramics will be placed.

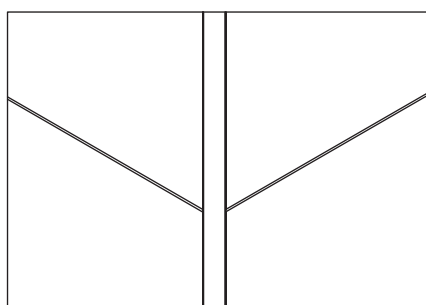


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

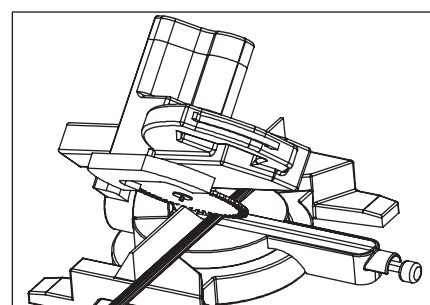

6 Cut two profiles at 45 degrees for corner joints.

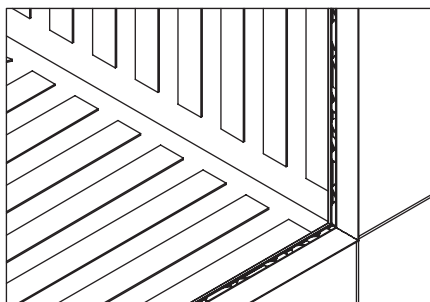

7 Align the profiles at the internal corners and press them into the joint.

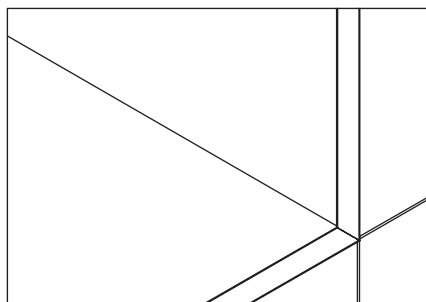

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.