

МОХ системи - техничка документација

assembly-manual-velo-en.pdf

Технички превод: консултујте оригиналне цртеже и референтне странице за димензије.


Изворна страница 1

МОХ ВЕЛО ВОДИЧ ЗА САСТАВЉАЊЕ


- 1 Стисните силицијум на начин две линије на задњу страну профила.
- 2 Залепите профил којим сте стиснули силицијум на зид и притисните.
- 3 Залепите профил који сте залепили на зид у интервалима од 50 цм.
- 4 Пажљиво уклоните траке на профилу сутрадан.
- 5 Уверите се да је профил чврсто причвршћен за зид.
- 6 Изрежите профиле под 45 степени за спољне углове.
- 7 Залепите профиле које сте исекли под углом од 45 степени на зид на начин да буду међусобно затворени.
- 8 Уверите се да су профили који су исечени под углом од 45 степени потпуно причвршћени један за други на спољним угловима.
- 9 Изрежите профиле 45 степени за унутрашње углове.
10. Залепите профиле које сте исекли за 45 степени на зид на начин који ће бити затворени један за други.
- 11 Уверите се да су профили који су исечени под углом од 45 степени потпуно причвршћени један за други на унутрашњим угловима.

Страна 1/1


Оригинални цртежи и референтне странице

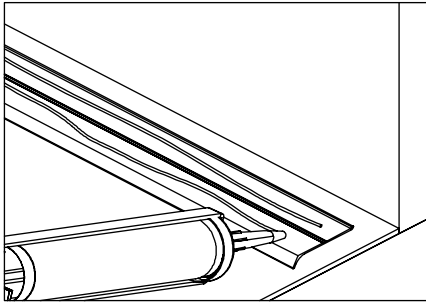


1 Squeeze the silicon in the manner of two lines to the back side of the profile.

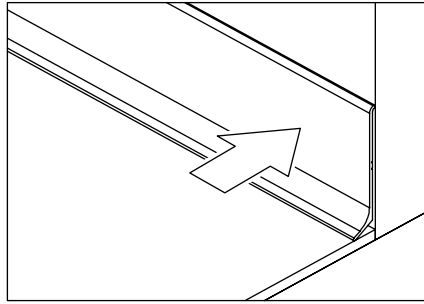


2 Paste the profile that you squeezed the silicon to the wall and press.

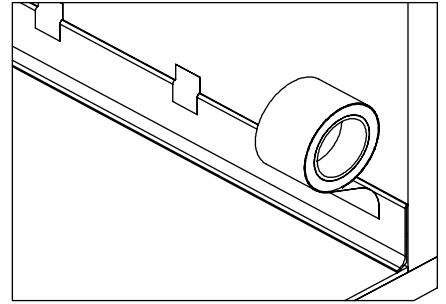


3 Tape the profile that you pasted to the wall at 50cm intervals.

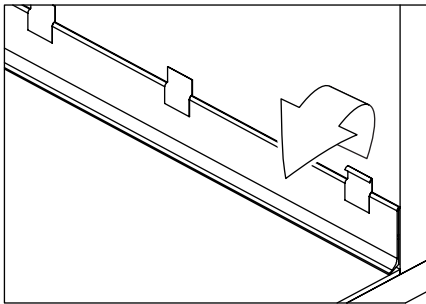


4 Remove the bands that on the profile heedfully the day after.

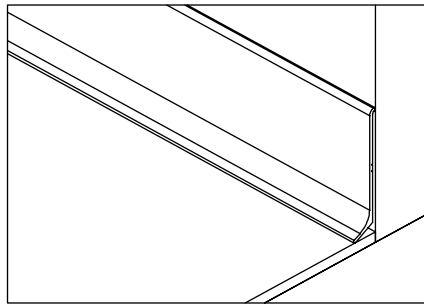


5 Make sure that the profile is stuck to the wall firmly.

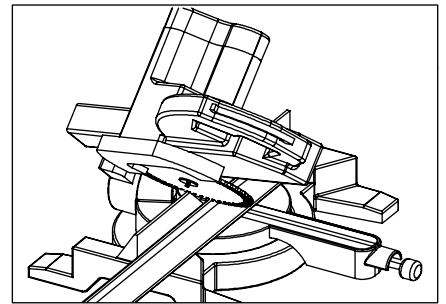


6 Cut profiles 45 degrees for external corners.

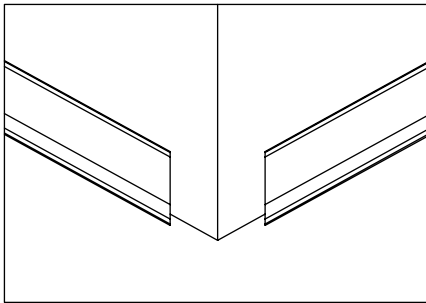


7 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

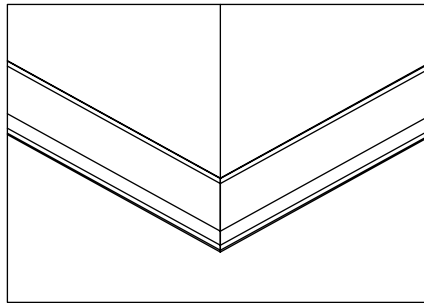


8 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

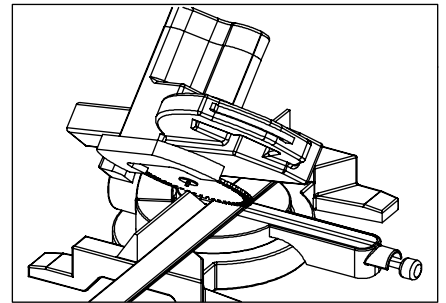

9 Cut profiles 45 degrees for internal corners.

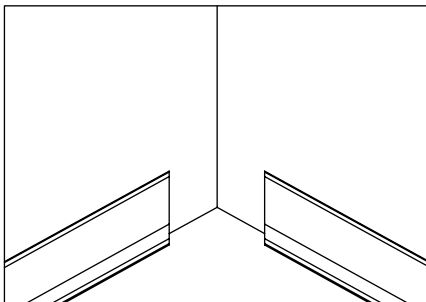

10 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

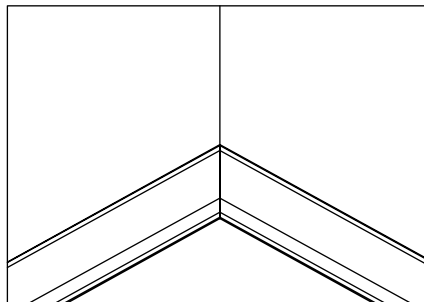

11 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.