

МОХ системи - техничка документација

assembly-manual-visio-en.pdf

Технички превод: консултујте оригиналне цртеже и референтне странице за димензије.


Изворна страница 1

МОХ ВИСИО ВОДИЧ ЗА САСТАВЉАЊЕ


- 1 Изаберите одговарајући профил према дебљини пода.
- 2 Нанесите спој и у складу са тим поставите сидрење профила.
- 3 Притисните профил док се не причврсти за спој.
- 4 Поставите тепих на профил.
- 5 Изрежите профиле под 45 степени за спољне углове.
- 6 Поравнајте профиле на спољним угловима и поставите их у спој.
- 7 Поставите тепих на профил.
- 8 Изрежите профиле 45 степени за унутрашње углове.
- 9 Поравнајте профиле на унутрашњим угловима и поставите их у спој.
- 10 Поставите тепих на профил. 6 8

Страна 1/1


Оригинални цртежи и референтне странице

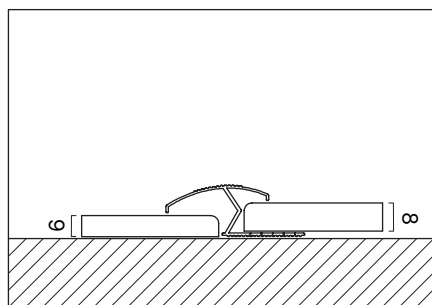


1 Pick the correct profile according to the flooring thickness.

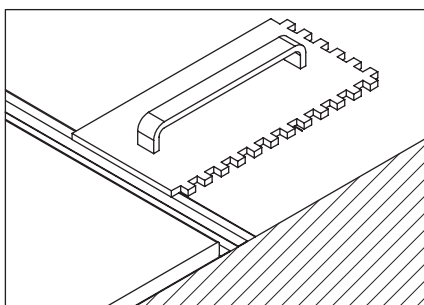


2 Apply joint and place the profiles anchor accordingly.

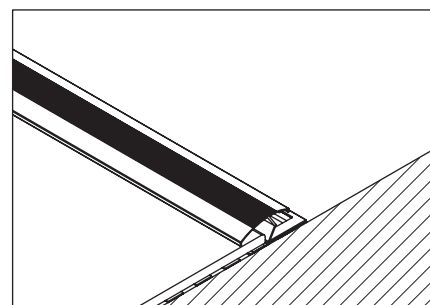


3 Press the profile until it is fixed to the joint.

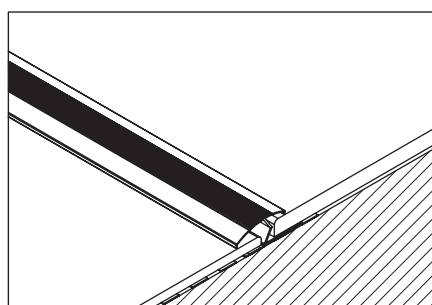


4 Place the carpet to the profile.

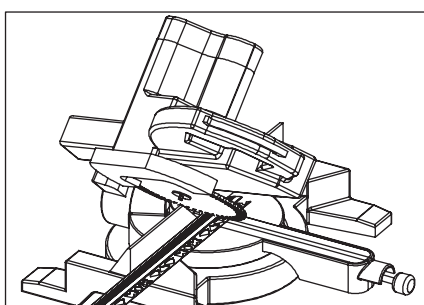


5 Cut profiles 45 degrees for external corners.

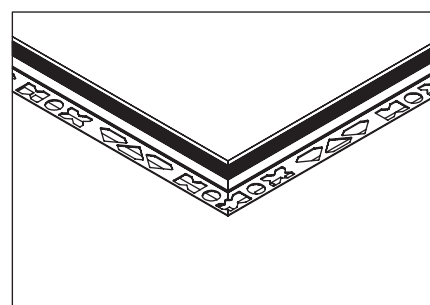


6 Align the profiles at the external corners and place them into the joint.

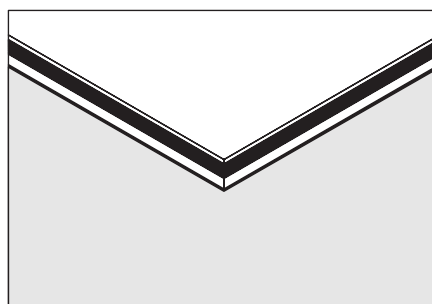


7 Place the carpet to the profile.

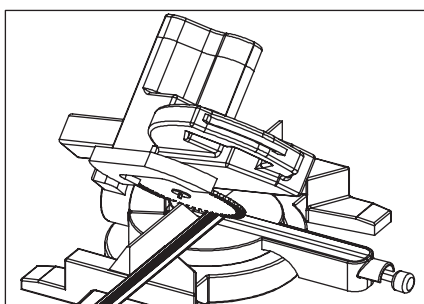

8 Cut profiles 45 degrees for internal corners.

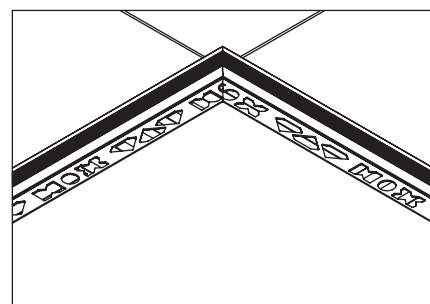

9 Align the profiles at the internal corners and place them into the joint.

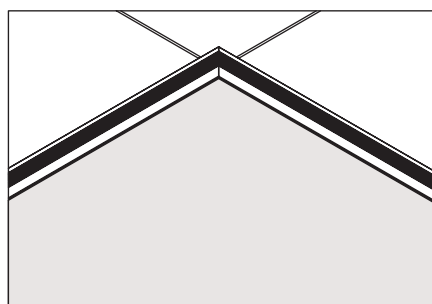

10 Place the carpet to the profile.