

MOX Systems - teknisk dokumentation

assembly-manual-mps-s-en.pdf

Teknisk översättning: se originalritningarna och referenssidorna för mått.

Källsida 1

Mps-S MONTERINGSHANDBOK

Välj rätt profil efter kakeltjockleken.

2 Applicera skarven och placera profilförankringen därefter.

3 Tryck på profilen tills den sitter fast i fogen.

Applicera fog på de platser där keramiken ska placeras.

5 Placera och rikta in keramiken mot profilen.

6 Kapade profiler 45 grader för yttre hörn.

Rikta in profilerna i de yttre hörnen och tryck in dem i fogen.

8 Placera och rikta in keramiken mot profilen.


9 Kapade profiler 45 grader för invändiga hörn.

10 Rikta in profilerna i de inre hörnen och tryck in dem i fogen.


11 Placera och rikta in keramiken mot profilen.

Sida 1/1


Originalritningar och referenssidor

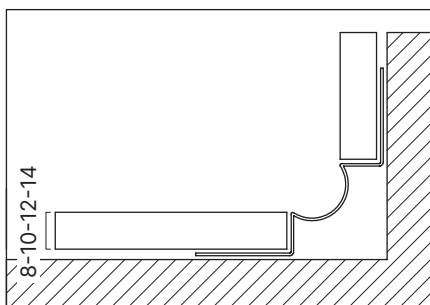


- 1 Pick the correct profile according to the tile thickness.

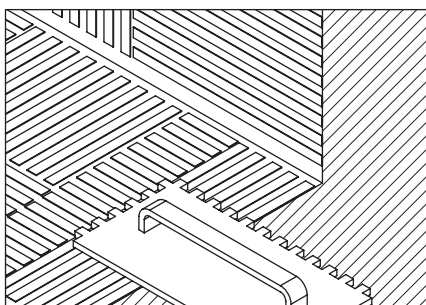


- 2 Apply joint and place the profiles anchor accordingly.

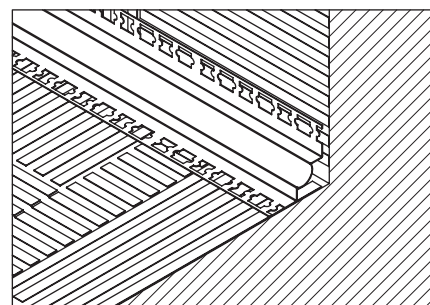


- 3 Press the profile until it is fixed to the joint.

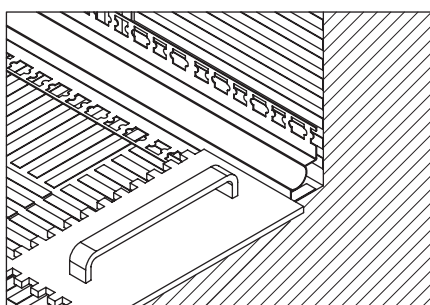


- 4 Apply joint to the places where the ceramics will be placed.

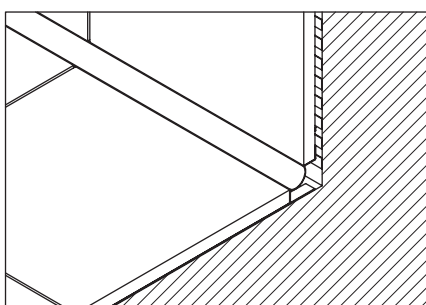


- 5 Place and align the ceramics to the profile.

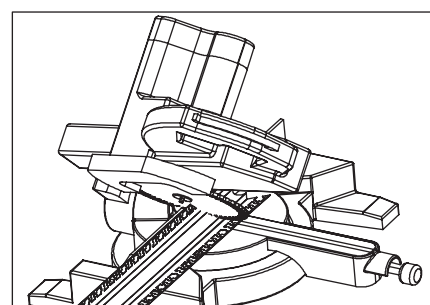


- 6 Cut profiles 45 degrees for external corners.

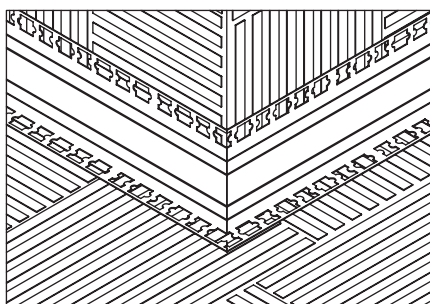


- 7 Align the profiles at the external corners and press them into the joint.

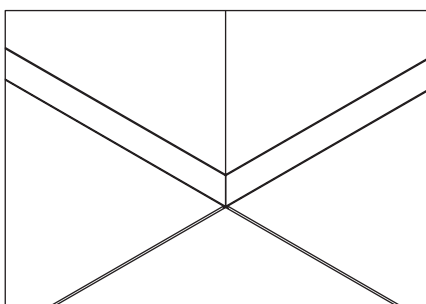


- 8 Place and align the ceramics to the profile.

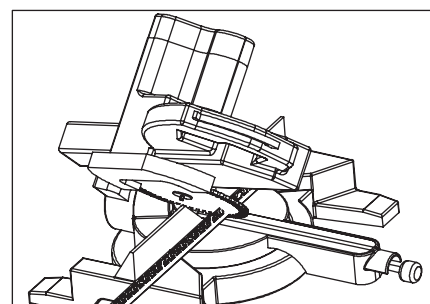

- 9 Cut profiles 45 degrees for internal corners.

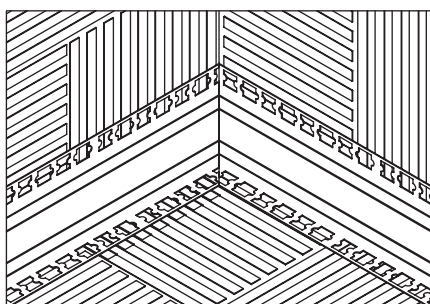

- 10 Align the profiles at the internal corners and press them into the joint.

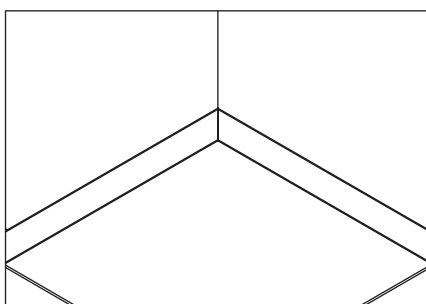

- 11 Place and align the ceramics to the profile.