

MOX Systems - teknisk dokumentation

assembly-manual-mps-tb-en.pdf

Teknisk översättning: se originalritningarna och referenssidorna för mått.

Källsida 1

Mps-Tb MONTERINGSGUIDE

Välj rätt profil beroende på golvtjockleken.

2 Applicera skarven och placera profilförankringen därefter.

3 Tryck på profilen tills den sitter fast i fogen.

4 Applicera fog på de platser där golvet ska placeras.

5 Placera och rikta in golvet mot profilen.

6 Kapade profiler 45 grader för yttre hörn.

Rikta in profilerna i de yttre hörnen och tryck in dem i fogen.

8 Placera och rikta in golvet mot profilen.


9 Kapade profiler 45 grader för invändiga hörn.

10 Rikta in profilerna i de inre hörnen och tryck in dem i fogen.


11 Placera och rikta in golvet mot profilen.

Sida 1/1


Originalritningar och referenssidor

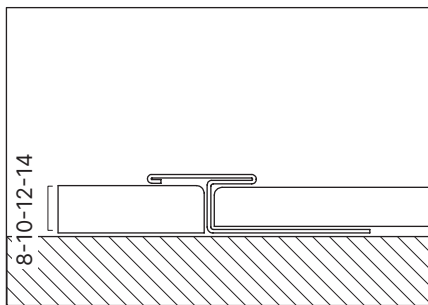


1 Pick the correct profile according to the flooring thickness.

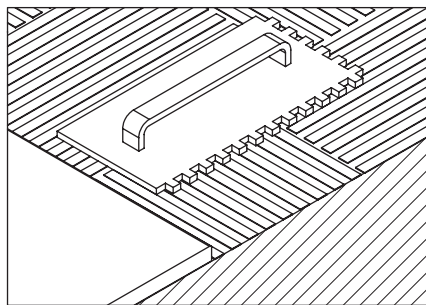


2 Apply joint and place the profiles anchor accordingly.

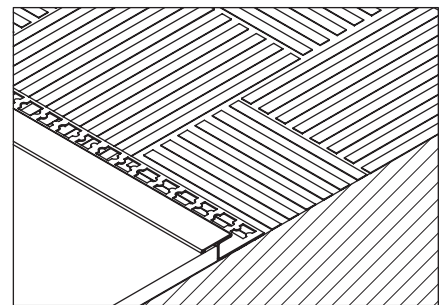


3 Press the profile until it is fixed to the joint.

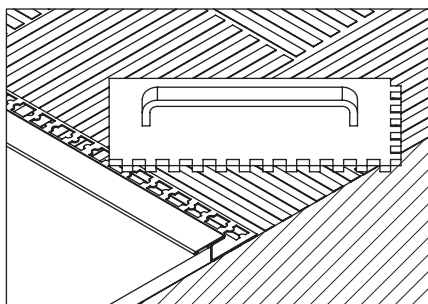


4 Apply joint to the places where the flooring will be placed.

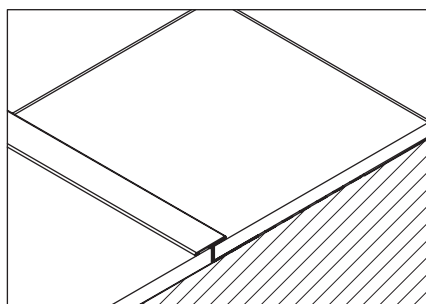


5 Place and align the flooring to the profile.

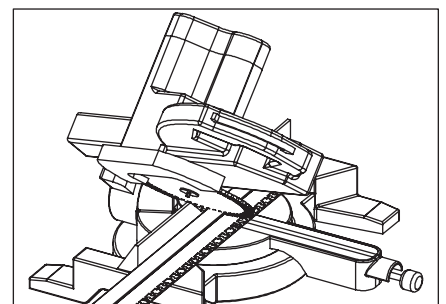


6 Cut profiles 45 degrees for external corners.

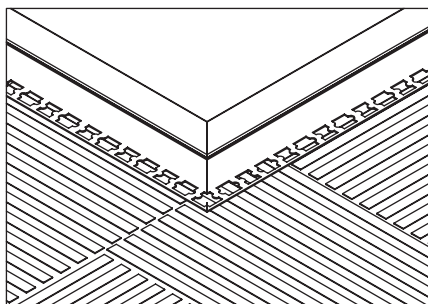


7 Align the profiles at the external corners and press them into the joint.

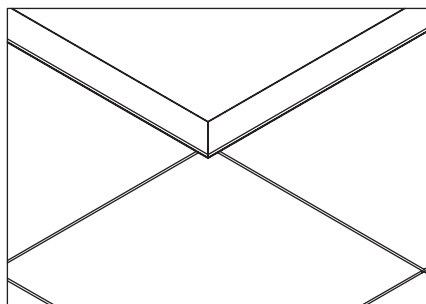


8 Place and align the flooring to the profile.

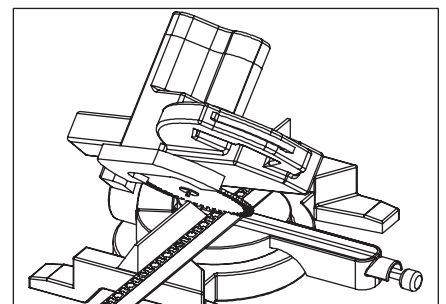

9 Cut profiles 45 degrees for internal corners.

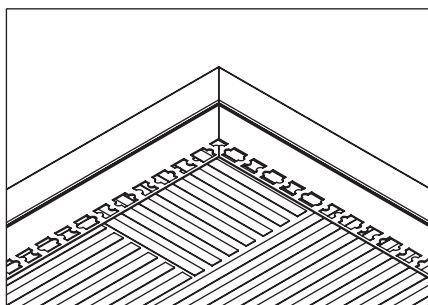

10 Align the profiles at the internal corners and press them into the joint.

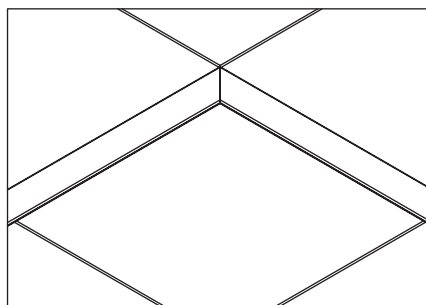

11 Place and align the flooring to the profile.