

MOX Systems - teknisk dokumentation

assembly-manual-revio-en.pdf

Teknisk översättning: se originalritningarna och referenssidorna för mått.

Källsida 1

Revio MONTERINGSGUIDE

Applicering med lim

- 1 Applicera silikon eller fog på profilen.
- 2 Fäst profilen i golvet och tryck fast den.
- 3 Placera mattan på profilen.

Applicering med skruv


- 11 Fäst profilen med skruvar.
- 2 Placera mattan på profilen.

Köşe Birleşimleri


- 1 Kapa profiler 45 grader för invändiga hörn.
- 2 Rikta in profilerna i de inre hörnen och placera dem i fogen.
- 3 Placera mattan på profilen.
- 4 Kapade profiler 45 grader för yttre hörn.
- 5 Rikta in profilerna i de yttre hörnen och placera dem i fogen.
- 6 Placera mattan på profilen.

Originalritningar och referenssidor


Application with Adhesive

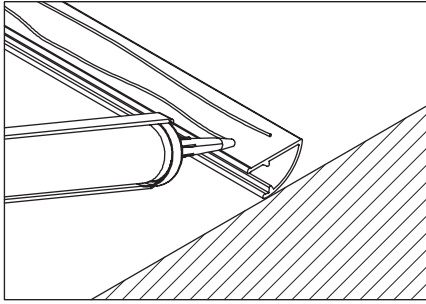

1 Apply silicone or joint to the profile.

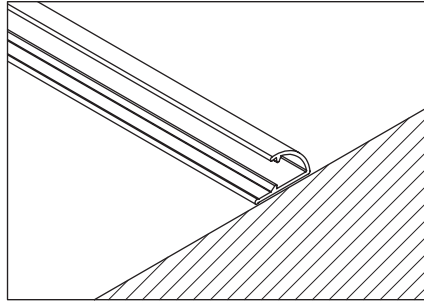


2 Fix the profile to the floor and press it.

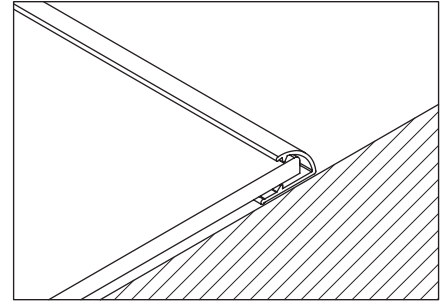


3 Place the carpet to the profile.

Application with Screw

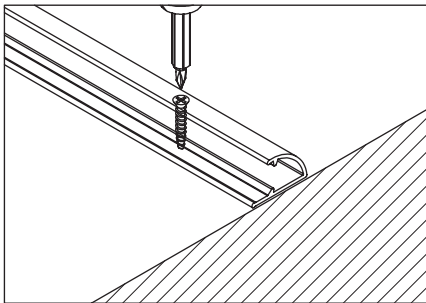


1 Fix the profile with screws.

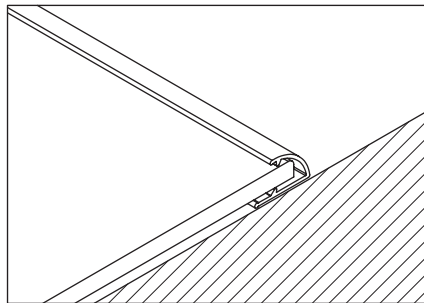


2 Place the carpet to the profile.


Köşe Birleşimleri

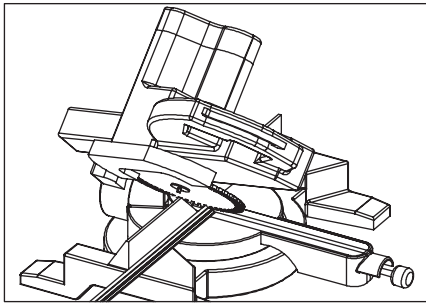


1 Cut profiles 45 degrees for internal corners.

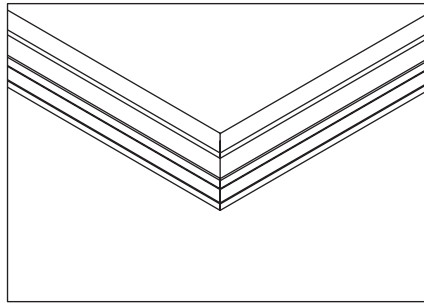


2 Align the profiles at the internal corners and place them into the joint.

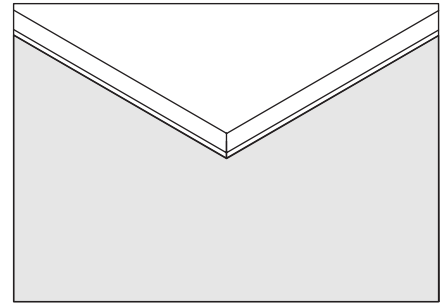


3 Place the carpet to the profile.

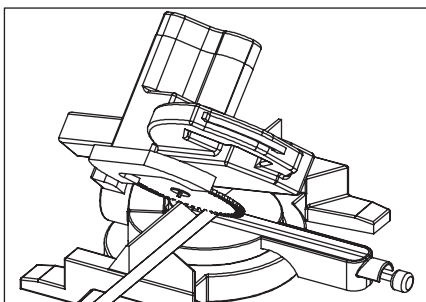

4 Cut profiles 45 degrees for external corners.

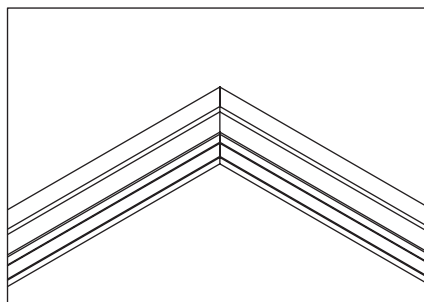

5 Align the profiles at the external corners and place them into the joint.

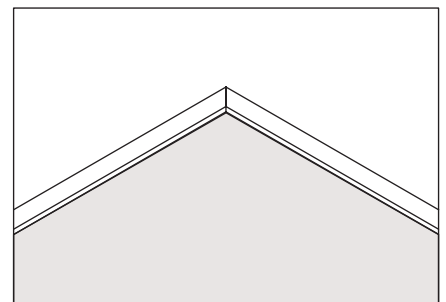

6 Place the carpet to the profile.