

MOX Systems - teknisk dokumentation

assembly-manual-visio-en.pdf

Teknisk översättning: se originalritningarna och referenssidorna för mått.


Källsida 1

Visio MONTERINGSGUIDE


- 1 Välj rätt profil enligt golvtjockleken.
- 2 Applicera skarven och placera profilförankringen därefter.
- 3 Tryck på profilen tills den sitter fast i fogen.
- 4 Placera mattan på profilen.
- 5 Kapade profiler 45 grader för yttre hörn.
- 6 Rikta in profilerna i de yttre hörnen och placera dem i fogen.
- 7 Placera mattan på profilen.
- 8 Kapade profiler 45 grader för invändiga hörn.
- 9 Rikta in profilerna i de inre hörnen och placera dem i fogen.
- 10 Placera mattan på profilen. 6 8

Sida 1/1


Originalritningar och referenssidor

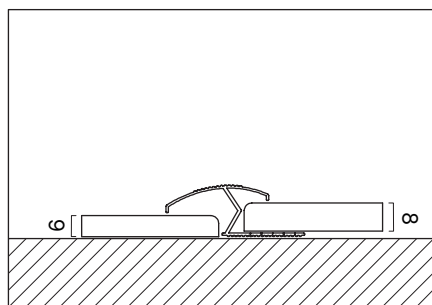


1 Pick the correct profile according to the flooring thickness.

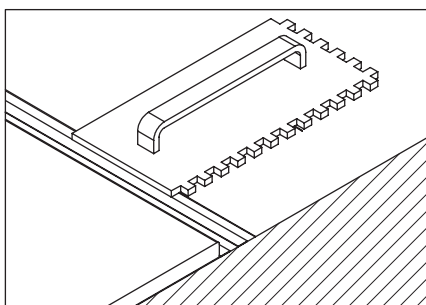


2 Apply joint and place the profiles anchor accordingly.

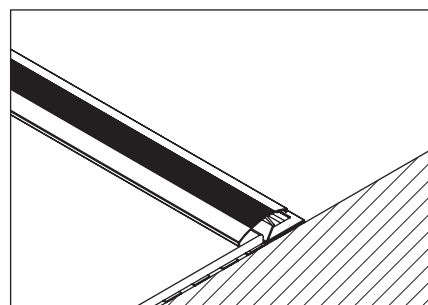


3 Press the profile until it is fixed to the joint.

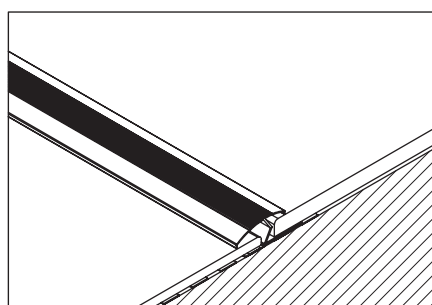


4 Place the carpet to the profile.

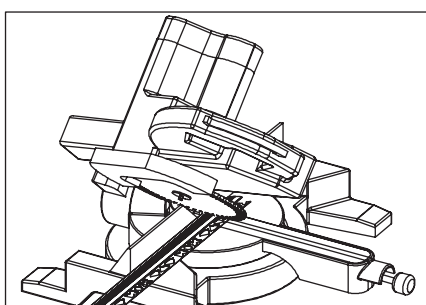


5 Cut profiles 45 degrees for external corners.

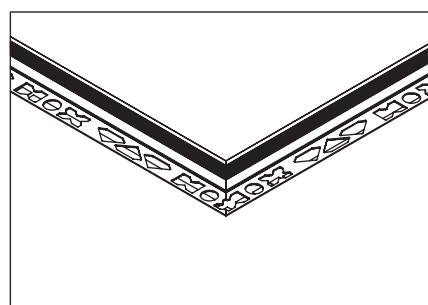


6 Align the profiles at the external corners and place them into the joint.

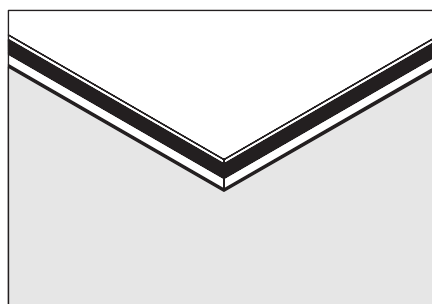


7 Place the carpet to the profile.

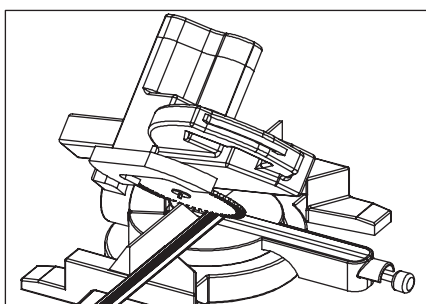

8 Cut profiles 45 degrees for internal corners.

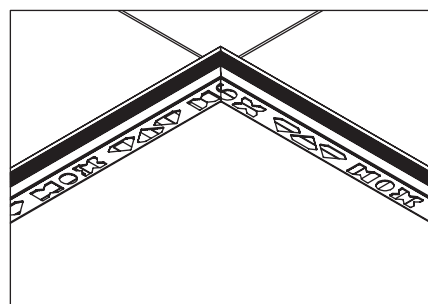

9 Align the profiles at the internal corners and place them into the joint.

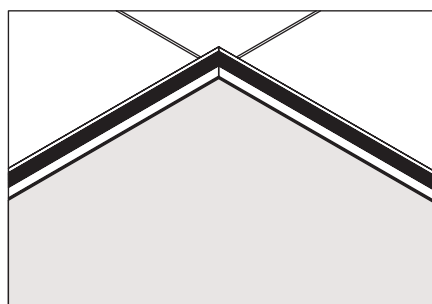

10 Place the carpet to the profile.