

MOX Sistemleri - teknik belgeler

assembly-manual-mps-tb-en.pdf

Teknik çeviri: boyutlar için orijinal çizimlere ve referans sayfalarına bakın.

Kaynak sayfa 1

Mps-Tb MONTAJ KILAVUZU

Döşeme kalınlığına göre doğru profili seçin.

2 Derzi uygulayın ve profil dübellerini buna göre yerleştirin.

3 Profili bağlantı noktasına sabitlenene kadar bastırın.

4 Döşemenin yerleştirileceği yerlere derz uygulayın.

5 Döşemeyi profile yerleştirin ve hizalayın.

6 Dış köşeler için profilleri 45 derece kesin.

Profilleri dış köşelerden hizalayın ve bağlantı yerine bastırın.

8 Döşemeyi profile yerleştirin ve hizalayın.


9 İç köşeler için profilleri 45 derece kesin.

10 Profilleri iç köşelerden hizalayın ve bağlantı yerine bastırın.


11 Döşemeyi profile yerleştirin ve hizalayın.

Sayfa 1/1


Orijinal çizimler ve referans sayfaları

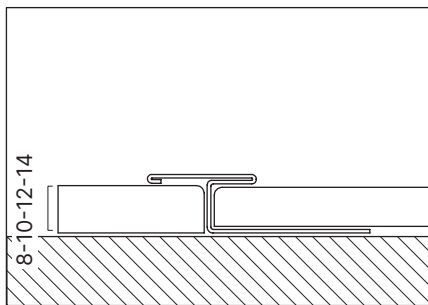


1 Pick the correct profile according to the flooring thickness.

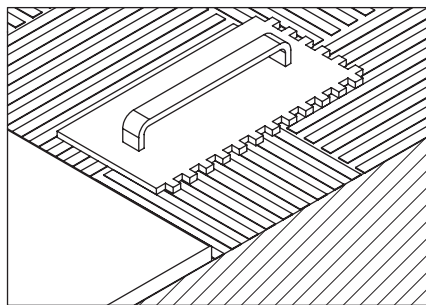


2 Apply joint and place the profiles anchor accordingly.

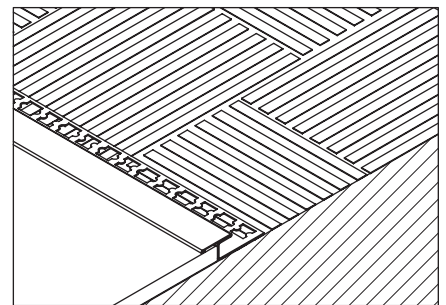


3 Press the profile until it is fixed to the joint.

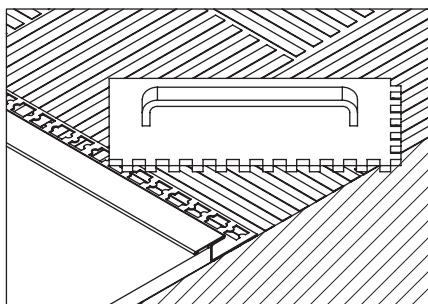


4 Apply joint to the places where the flooring will be placed.

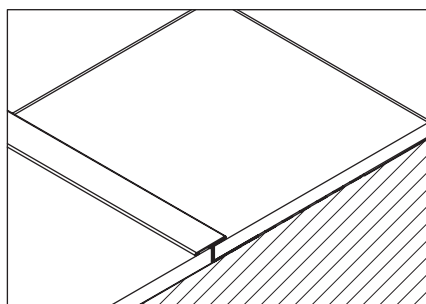


5 Place and align the flooring to the profile.

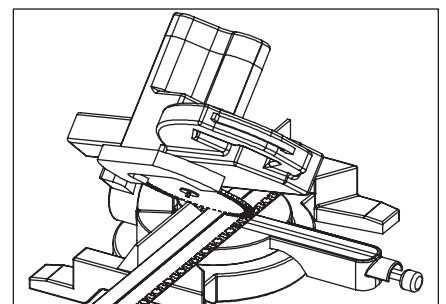


6 Cut profiles 45 degrees for external corners.

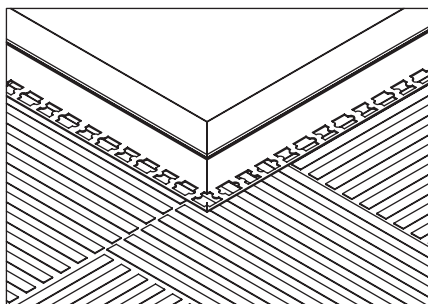


7 Align the profiles at the external corners and press them into the joint.

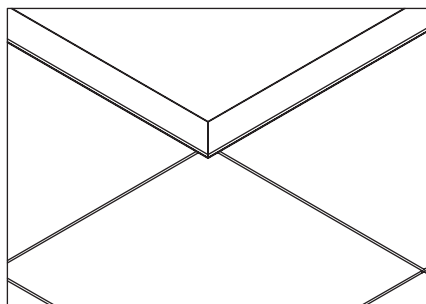


8 Place and align the flooring to the profile.

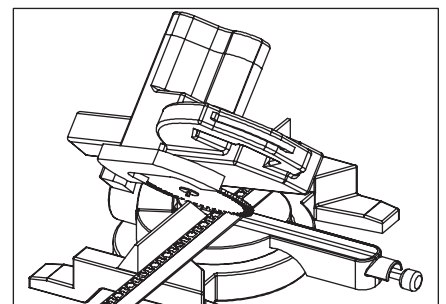

9 Cut profiles 45 degrees for internal corners.

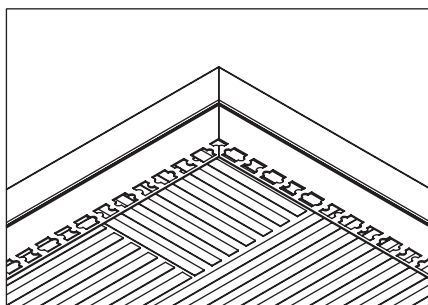

10 Align the profiles at the internal corners and press them into the joint.

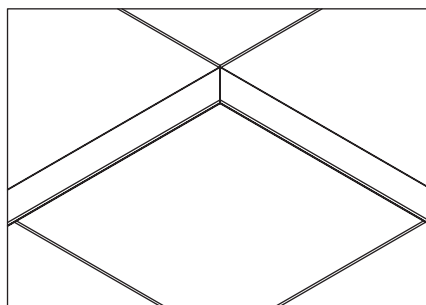

11 Place and align the flooring to the profile.