

MOX Sistemleri - teknik belgeler

assembly-manual-revio-en.pdf

Teknik çeviri: boyutlar için orijinal çizimlere ve referans sayfalarına bakın.

Kaynak sayfa 1

Revio MONTAJ KILAVUZU

Yapıştırıcı ile Uygulama

- 1 Profile silikon veya derz uygulayın.
- 2 Profili zemine sabitleyin ve bastırın.
- 3 Halıyı profile yerleştirin.

Vidalı Uygulama


- 11 Profili vidalarla sabitleyin.
- 2 Halıyı profile yerleştirin.

Köşe Birleşimleri


- 1 İç köşeler için profilleri 45 derece kesin.
- 2 Profilleri iç köşelerden hizalayın ve derzin içine yerleştirin.
- 3 Halıyı profile yerleştirin.
- 4 Dış köşeler için profilleri 45 derece kesin.
- 5 Profilleri dış köşelerden hizalayın ve derzin içine yerleştirin.
- 6 Halıyı profile yerleştirin.

Orijinal çizimler ve referans sayfaları


Application with Adhesive

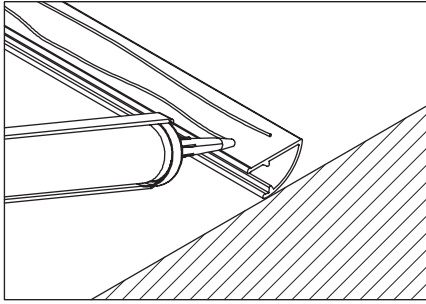

1 Apply silicone or joint to the profile.

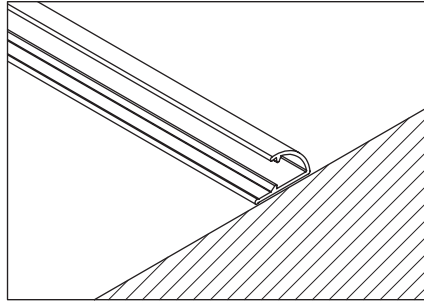


2 Fix the profile to the floor and press it.

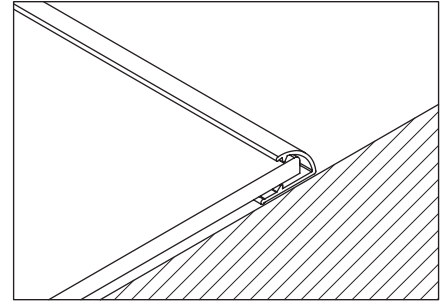


3 Place the carpet to the profile.

Application with Screw

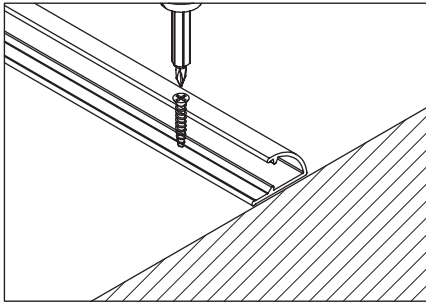


1 Fix the profile with screws.

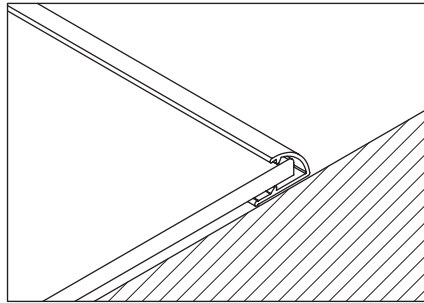


2 Place the carpet to the profile.


Köşe Birleşimleri

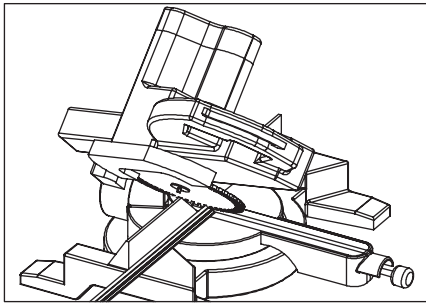


1 Cut profiles 45 degrees for internal corners.

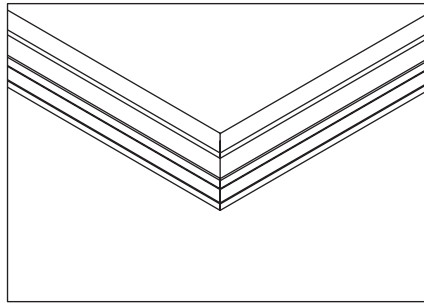


2 Align the profiles at the internal corners and place them into the joint.

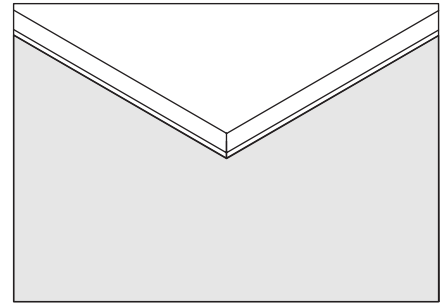


3 Place the carpet to the profile.

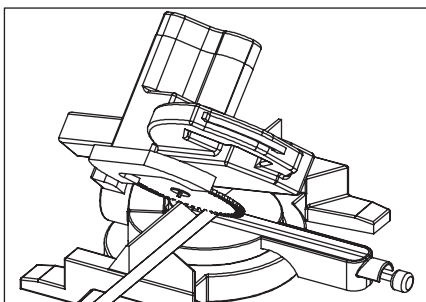

4 Cut profiles 45 degrees for external corners.

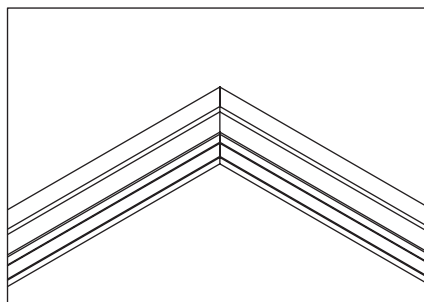

5 Align the profiles at the external corners and place them into the joint.

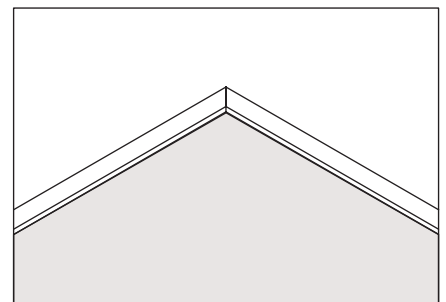

6 Place the carpet to the profile.