

MOX Sistemleri - teknik belgeler

assembly-manual-round-fix-en.pdf


Teknik çeviri: boyutlar için orijinal çizimlere ve referans sayfalarına bakın.

Kaynak sayfa 1

MOX YUVARLAK-SABİT MONTAJ KILAVUZU

- 1 Fayans kalınlığına göre doğru profili seçin.
 - 2 Derzi uygulayın ve profil dübellerini buna göre yerleştirin.
 - 3 Profili bağlantı noktasına sabitlenene kadar bastırın.
 - 4 Seramiklerin yerleştirileceği yerlere derz uygulayın.
 - 5 Fayansları, kenarlarının profile uygun ve aynı hizada olduğundan emin olarak profile yerleştirin.
 - 6 Köşe birleşimleri için iki profili 45 derecede kesin.
 - 7 Profilleri iç köşelerden hizalayın ve bağlantı yerine bastırın. 10
 - 8 Fayansları, kenarlarının profile uygun ve aynı hizada olduğundan emin olarak profile yerleştirin.
- Sayfa 1/1


Orijinal çizimler ve referans sayfaları

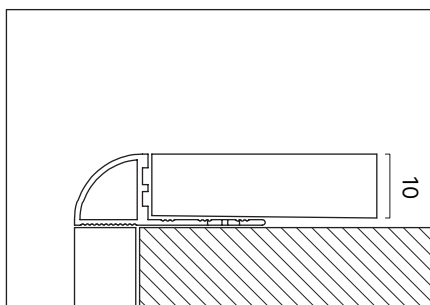


1 Pick the correct profile according to the tile thickness.




2 Apply joint and place the profiles anchor accordingly.

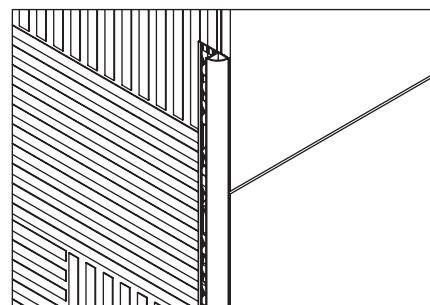


3 Press the profile until it is fixed to the joint.

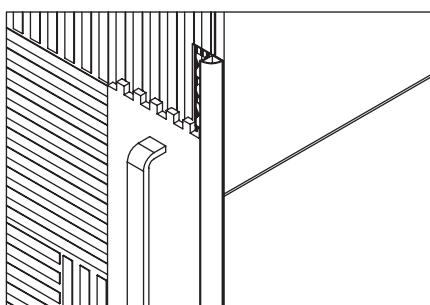


4 Apply joint to the places where the ceramics will be placed.

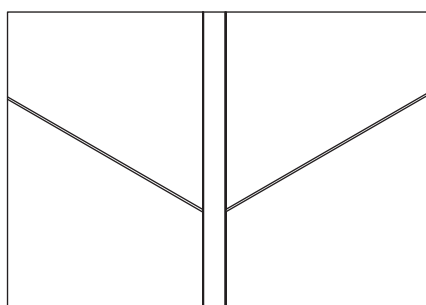


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

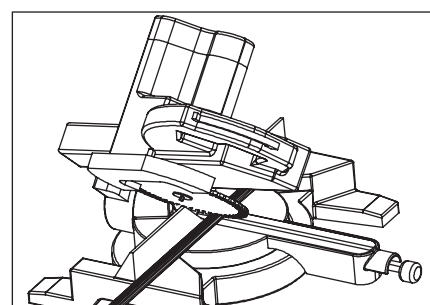

6 Cut two profiles at 45 degrees for corner joints.

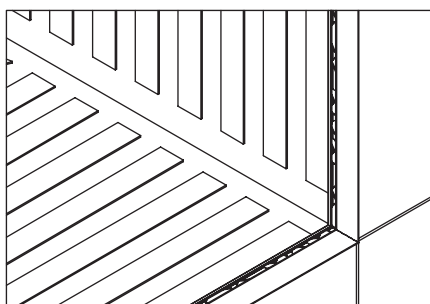

7 Align the profiles at the internal corners and press them into the joint.

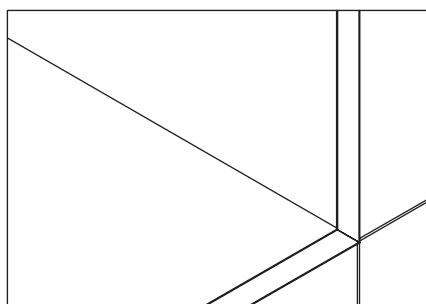

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.