

MOX Sistemleri - teknik belgeler

assembly-manual-sentio-en.pdf

Teknik çeviri: boyutlar için orijinal çizimlere ve referans sayfalarına bakın.


Kaynak sayfa 1

Sentio MONTAJ KILAVUZU


- 1 Duvar sabitleme aletlerini 50 cm aralıklarla yerleştirin ve vida deliklerinden duvarı işaretleyin.
- 2 Daha önce işaretlediğiniz noktaları delin.
- 3 Açılan deliklere duvar malzemesine göre doğru dübelleri yerleştirin.
- 4 Duvar sabitleme aparatlarını 50cm aralıklarla açılan yerlere vidalayınız.
- 5 Profili resimdeki gibi duvara sabitleme aparatlarına monte edin.
- 6 Profil çivileri ile sabitleme aleti çivilerinin birbirine tam olarak bağlandığından ve profil tabanının zemine sabitlendiğinden emin olun.
- 7 Dış köşeler için profilleri 45 derece kesin.
- 8 Duvar sabitleme aparatlarını köşelere kapanacak şekilde yapıştırın ve 45 derece kestiğiniz profilleri üzerine monte edin.
- 9 45 derece kesilen profillerin dış köşelerinde birbirine tam olarak sabitlendiğinden emin olun.
- 10 İç köşeler için profilleri 45 derece kesin.
- 11 Duvar sabitleme aparatlarını köşelere kapanacak şekilde yapıştırın ve 45 derece kestiğiniz profilleri üzerine monte edin.
- 12 45 derece kesilen profillerin iç köşelerinde birbirine tam olarak sabitlendiğinden emin olun.

Sayfa 1/1


Orijinal çizimler ve referans sayfaları

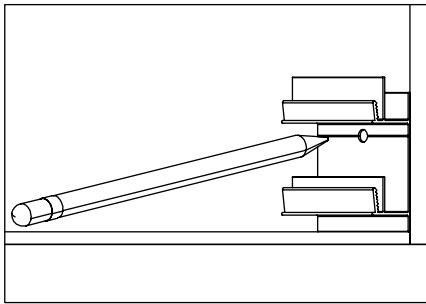


1 Place the wall fixation tools at 50cm intervals and mark the wall from the screw holes.

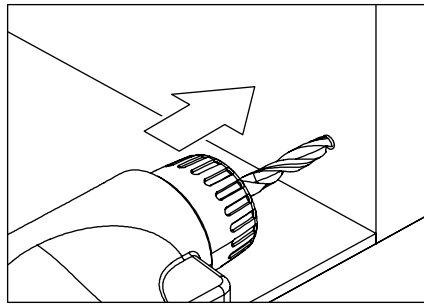


2 Drill the points that you have already marked.

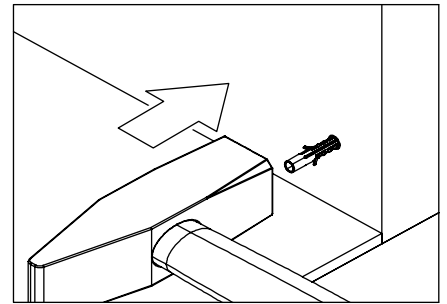


3 Place the correct dowels according to the wall material into the drilled holes.

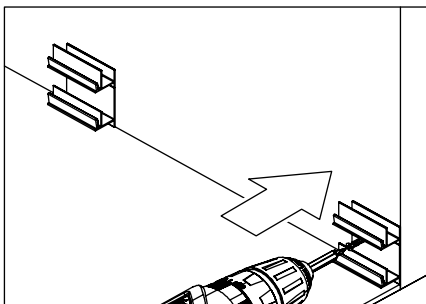


4 Screw the wall fixation tools to places that are drilled at 50cm intervals.

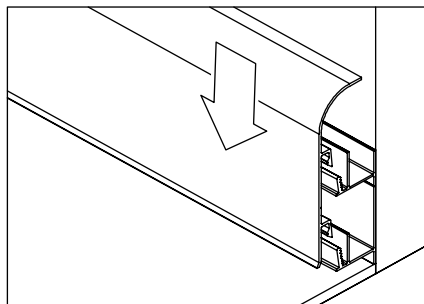


5 Assemble the profile on the wall fixation tools just like in the picture.

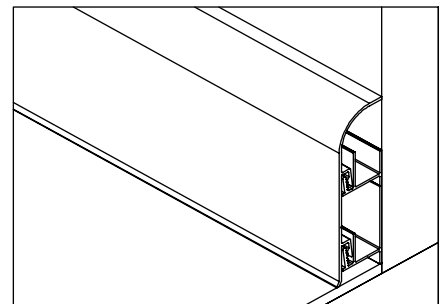


6 Make sure that the profile nails and the fixation tool's nails are completely connected to each other and be sure that the profile sole is fixed to the floor.

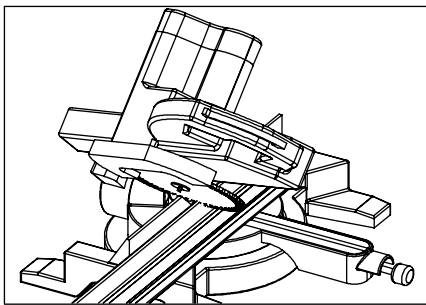


7 Cut profiles 45 degrees for external corners.

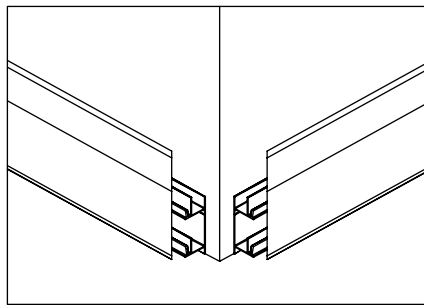


8 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

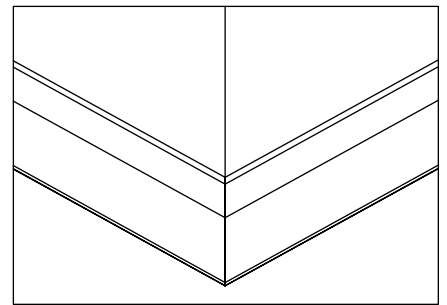


9 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

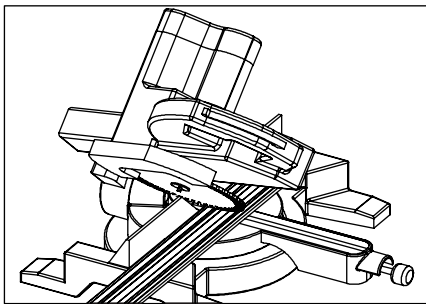

10 Cut profiles 45 degrees for internal corners.

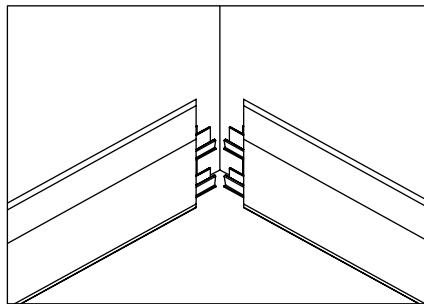

11 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

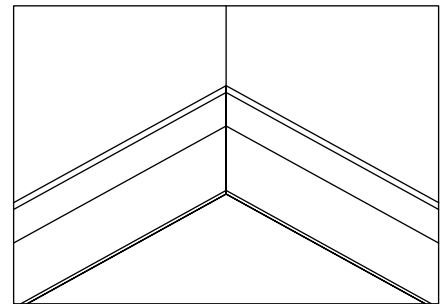

12 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.