

MOX Sistemleri - teknik belgeler

assembly-manual-visio-en.pdf

Teknik çeviri: boyutlar için orijinal çizimlere ve referans sayfalarına bakın.


Kaynak sayfa 1

Visio MONTAJ KILAVUZU


- 1 Döşeme kalınlığına göre doğru profili seçin.
- 2 Derzi uygulayın ve profil dübellerini buna göre yerleştirin.
- 3 Profili bağlantı noktasına sabitlenene kadar bastırın.
- 4 Halıyı profile yerleştirin.
- 5 Dış köşeler için profilleri 45 derece kesin.
- 6 Profilleri dış köşelerden hizalayın ve derzin içine yerleştirin.
- 7 Halıyı profile yerleştirin.
- 8 İç köşeler için profilleri 45 derece kesin.
- 9 Profilleri iç köşelerden hizalayın ve derzin içine yerleştirin.
- 10 Halıyı profile yerleştirin. 6 8

Sayfa 1/1


Orijinal çizimler ve referans sayfaları

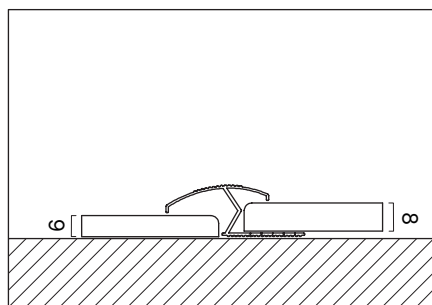


1 Pick the correct profile according to the flooring thickness.

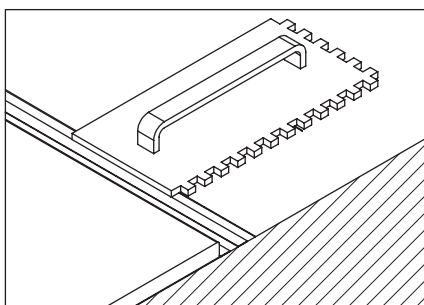


2 Apply joint and place the profiles anchor accordingly.

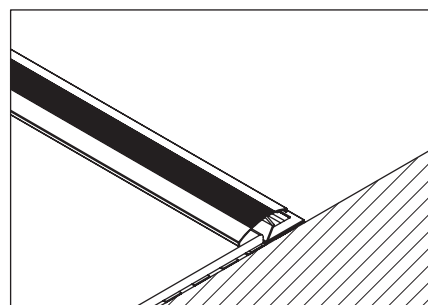


3 Press the profile until it is fixed to the joint.

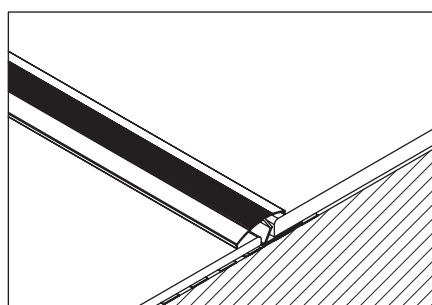


4 Place the carpet to the profile.

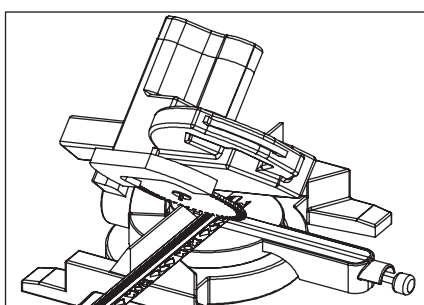


5 Cut profiles 45 degrees for external corners.

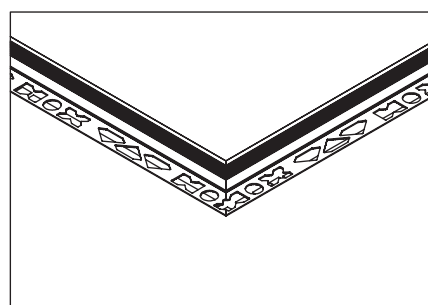


6 Align the profiles at the external corners and place them into the joint.

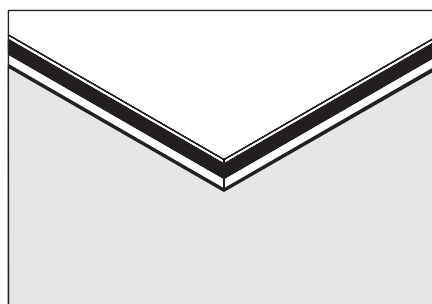


7 Place the carpet to the profile.

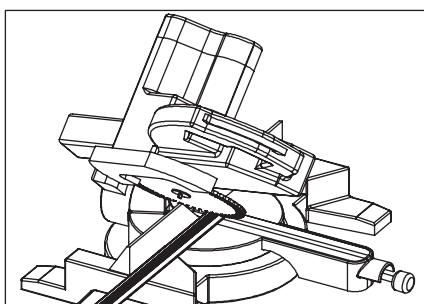

8 Cut profiles 45 degrees for internal corners.

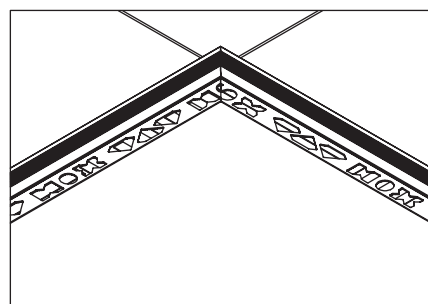

9 Align the profiles at the internal corners and place them into the joint.

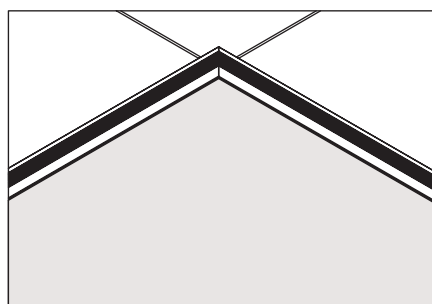

10 Place the carpet to the profile.