

MOX Systems - технічна документація

assembly-manual-mps-s-en.pdf

Технічний переклад: зверніться до оригінальних креслень і довідкових сторінок щодо розмірів.

Вихідна сторінка 1

ПОСІБНИК З МОНТАЖУ Mps-S

Підберіть правильний профіль відповідно до товщини плитки.

2 Застосуйте з'єднання та відповідно розмістіть анкери профілів.

3 Притисніть профіль, поки він не закріпиться на стику.

Нанесіть шви на місця, де буде укладатися кераміка.

5 Покладіть і вирівняйте кераміку на профіль.

6 Відріжте профілі під кутом 45 градусів для зовнішніх кутів.

Вирівняйте профілі по зовнішніх кутах і втисніть їх у стик.

8 Розмістіть і вирівняйте кераміку на профіль.


9 Відріжте профілі 45 градусів для внутрішніх кутів.

10 Вирівняйте профілі по внутрішніх кутах і втисніть їх у стик.


11 Покладіть і вирівняйте кераміку на профіль.

Сторінка 1/1


Оригінальні креслення та довідкові сторінки

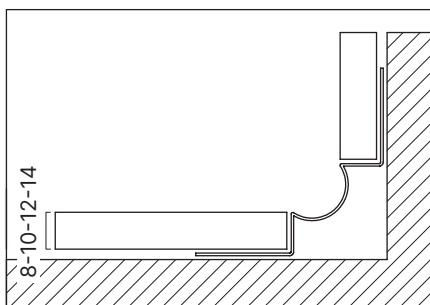


1 Pick the correct profile according to the tile thickness.

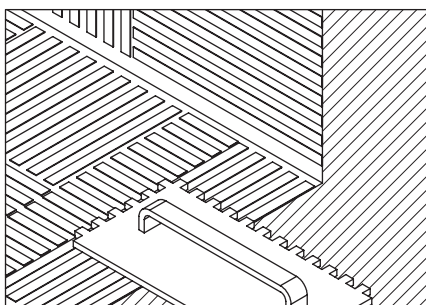


2 Apply joint and place the profiles anchor accordingly.

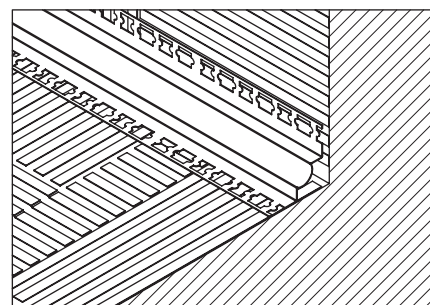


3 Press the profile until it is fixed to the joint.

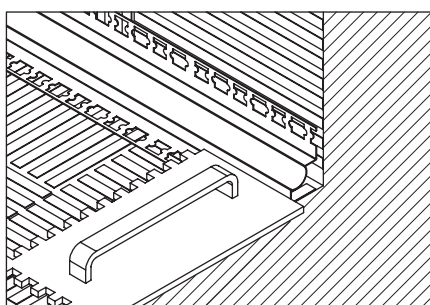


4 Apply joint to the places where the ceramics will be placed.

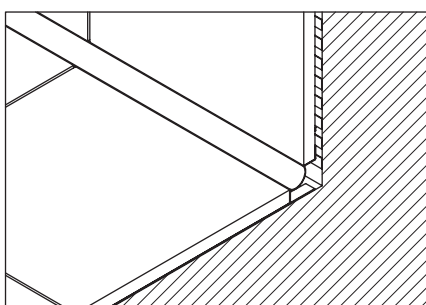


5 Place and align the ceramics to the profile.

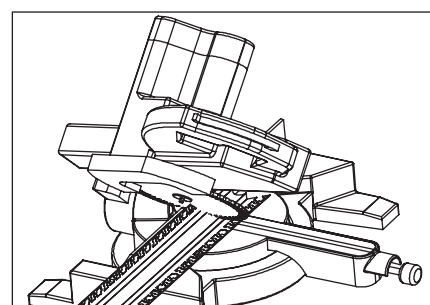


6 Cut profiles 45 degrees for external corners.

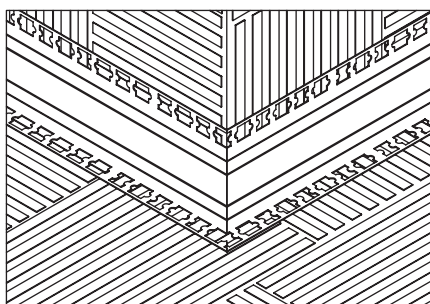


7 Align the profiles at the external corners and press them into the joint.

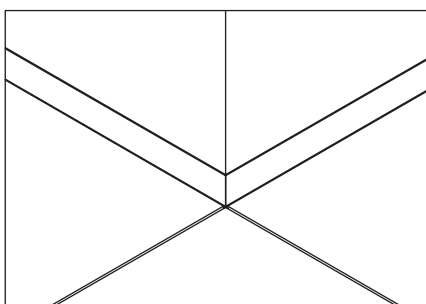


8 Place and align the ceramics to the profile.

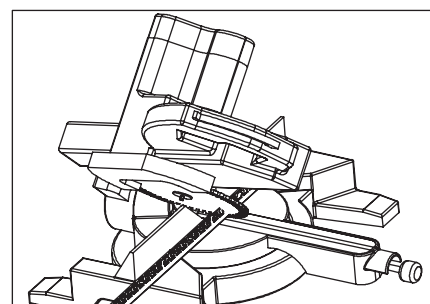

9 Cut profiles 45 degrees for internal corners.

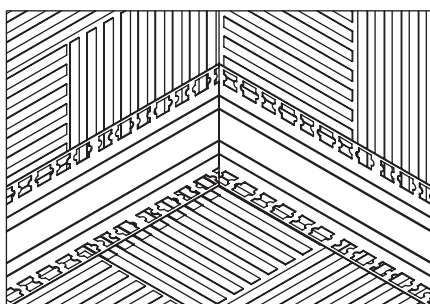

10 Align the profiles at the internal corners and press them into the joint.

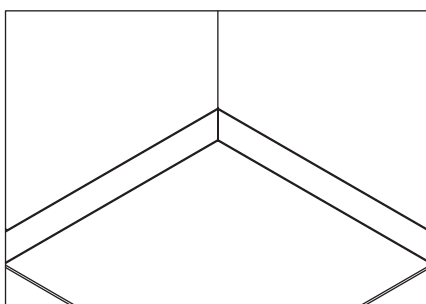

11 Place and align the ceramics to the profile.