

MOX Systems - технічна документація

assembly-manual-mps-yd-en.pdf

Технічний переклад: зверніться до оригінальних креслень і довідкових сторінок щодо розмірів.

Вихідна сторінка 1

Mps-Yd ПОСІБНИК З МОНТАЖУ

Підберіть правильний профіль відповідно до товщини підлоги.

2 Застосуйте з'єднання та відповідно розмістіть анкери профілів.

3 Притисніть профіль, поки він не закріпиться на стику.

4 Нанесіть шви на місця, де буде укладатися підлогове покриття.

5 Покладіть і вирівняйте настил до профілю.


6 Відріжте профілі під кутом 45 градусів.

7 Вирівняйте профілі по кутах і втисніть їх у стик. 41-21-01-8


8 Покладіть і вирівняйте настил до профілю.

Сторінка 1/1


Оригінальні креслення та довідкові сторінки

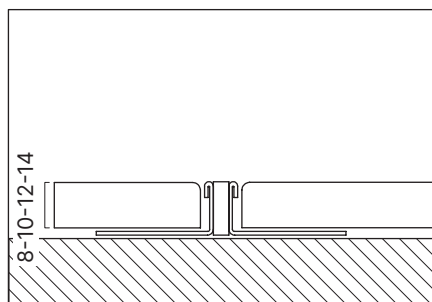


1 Pick the correct profile according to the flooring thickness.

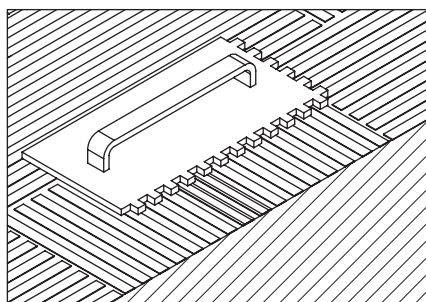


2 Apply joint and place the profiles anchor accordingly.

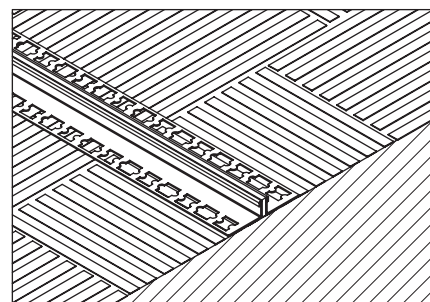


3 Press the profile until it is fixed to the joint.

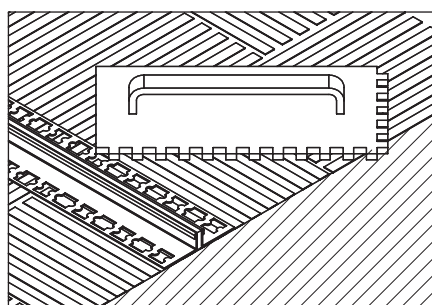


4 Apply joint to the places where the flooring will be placed.

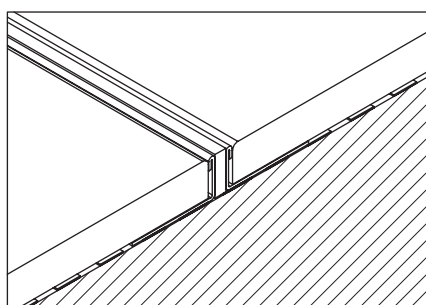


5 Place and align the flooring to the profile.

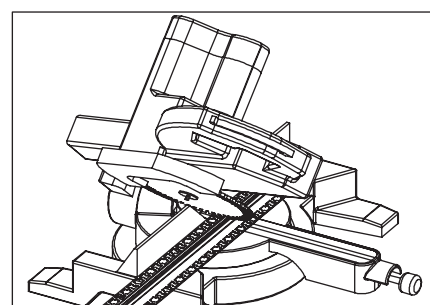

6 Cut profiles 45 degrees for corners.

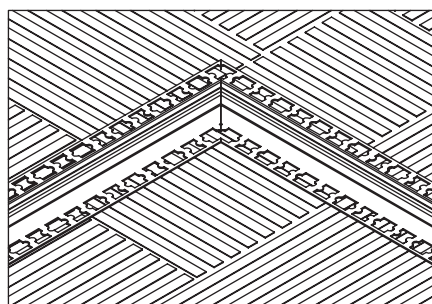

7 Align the profiles at the corners and press them into the joint.

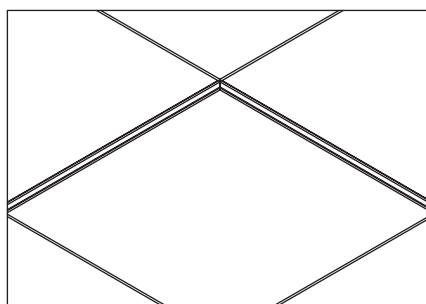

8 Place and align the flooring to the profile.