

MOX Systems - технічна документація

assembly-manual-revio-en.pdf

Технічний переклад: зверніться до оригінальних креслень і довідкових сторінок щодо розмірів.

Вихідна сторінка 1

КЕРІВНИЦТВО З СКЛАДАННЯ Revio

Аплікація за допомогою клею

- 1 Нанесіть на профіль силікон або шви.
- 2 Прикріпіть профіль до підлоги і притисніть його.
- 3 Прикладіть килим до профілю.

Аплікація з гвинтом


- 11 Закріпіть профіль шурупами.
- 2 Прикладіть килим до профілю.

Köşe Birleşimleri


- 1 Розріжте профілі під 45 градусів для внутрішніх кутів.
- 2 Вирівняйте профілі по внутрішніх кутах і помістіть їх у стик.
- 3 Прикладіть килим до профілю.
- 4 Відріжте профілі під кутом 45 градусів для зовнішніх кутів.
- 5 Вирівняйте профілі по зовнішніх кутах і вставте їх у стик.
- 6 Прикладіть килим до профілю.

Оригінальні креслення та довідкові сторінки


Application with Adhesive

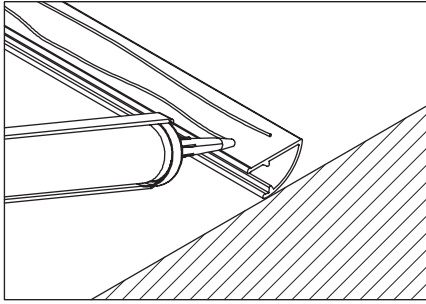

1 Apply silicone or joint to the profile.

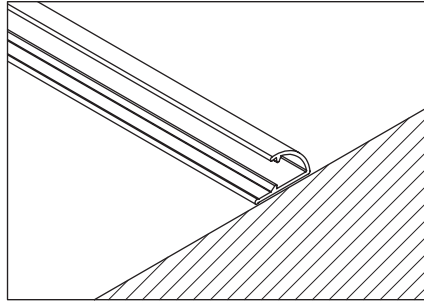


2 Fix the profile to the floor and press it.

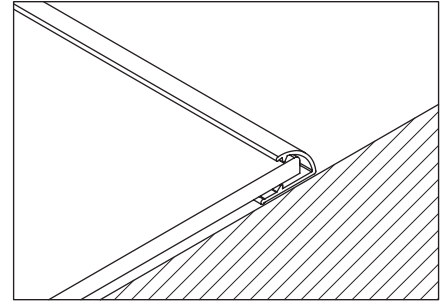


3 Place the carpet to the profile.

Application with Screw

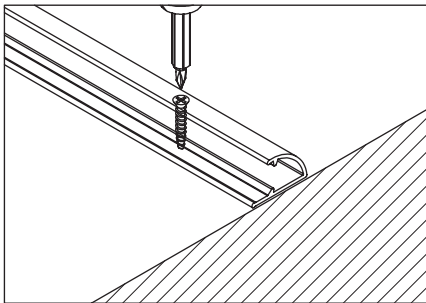


1 Fix the profile with screws.

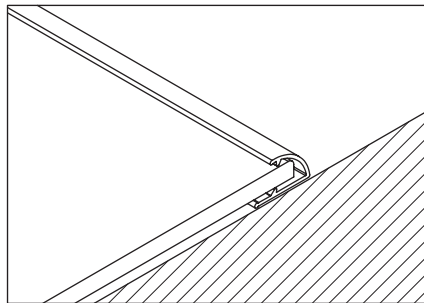


2 Place the carpet to the profile.


Köşe Birleşimleri

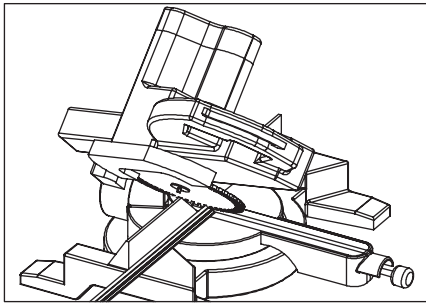


1 Cut profiles 45 degrees for internal corners.

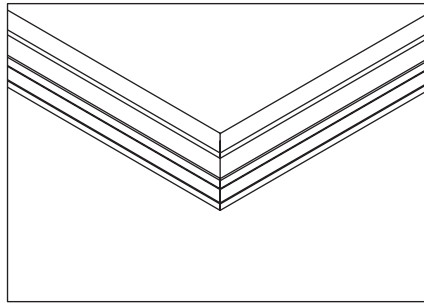


2 Align the profiles at the internal corners and place them into the joint.

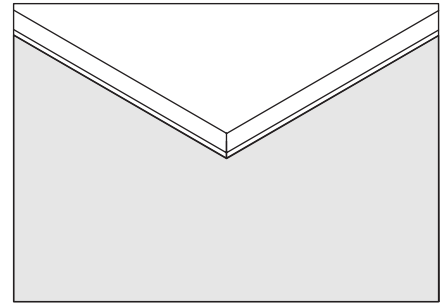


3 Place the carpet to the profile.

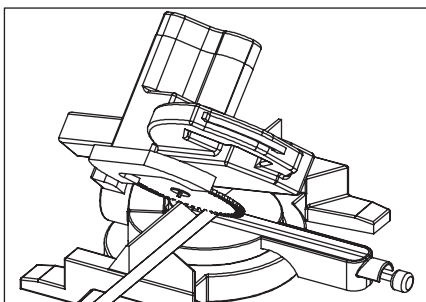

4 Cut profiles 45 degrees for external corners.

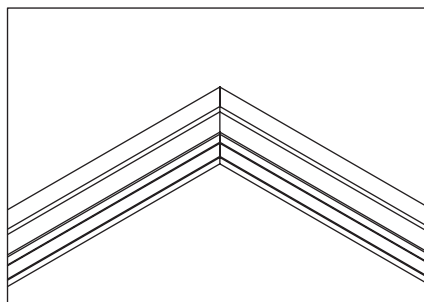

5 Align the profiles at the external corners and place them into the joint.

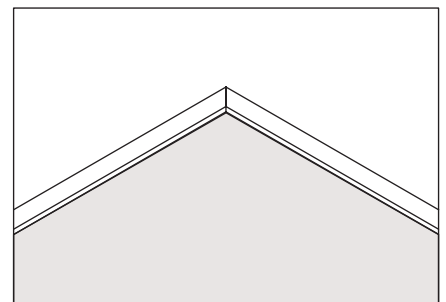

6 Place the carpet to the profile.