

MOX Systems - технічна документація

assembly-manual-round-fix-en.pdf

Технічний переклад: зверніться до оригінальних креслень і довідкових сторінок щодо розмірів.


Вихідна сторінка 1

КЕРІВНИЦТВО З МОНТАЖУ Round-Fix

- 1 Виберіть правильний профіль відповідно до товщини плитки.
- 2 Застосуйте з'єднання та відповідно розмістіть анкери профілів.
- 3 Притисніть профіль, поки він не закріпиться на стику.
- 4 Нанесіть шви на місця, де буде укладатися кераміка.
- 5 Покладіть плитки на профіль, переконавшись, що їхні краї підходять до профілю та знаходяться врівень.
- 6 Розріжте два профілі під кутом 45 градусів для кутових з'єднань.
- 7 Вирівняйте профілі по внутрішніх кутах і втисніть їх у стик. 10
- 8 Покладіть плитки на профіль, переконавшись, що їхні краї підходять до профілю та знаходяться врівень.

Сторінка 1/1


Оригінальні креслення та довідкові сторінки

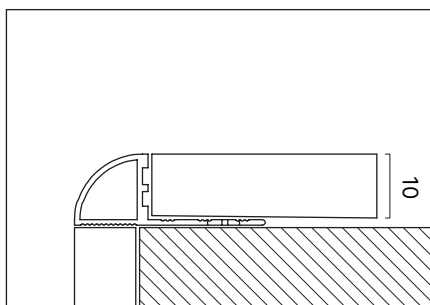


1 Pick the correct profile according to the tile thickness.




2 Apply joint and place the profiles anchor accordingly.

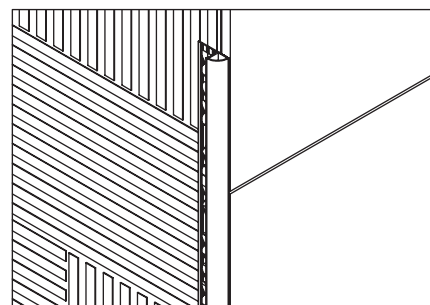


3 Press the profile until it is fixed to the joint.

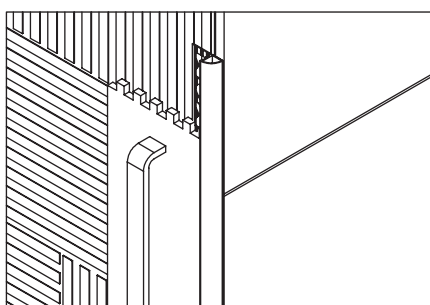


4 Apply joint to the places where the ceramics will be placed.

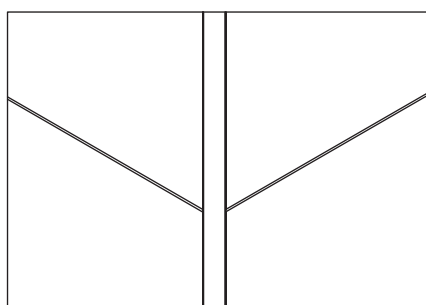


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

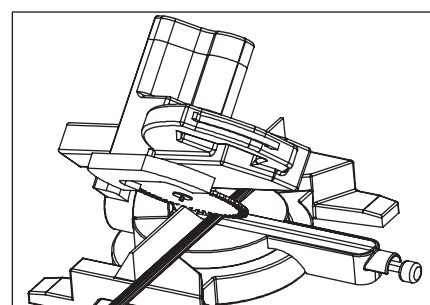

6 Cut two profiles at 45 degrees for corner joints.

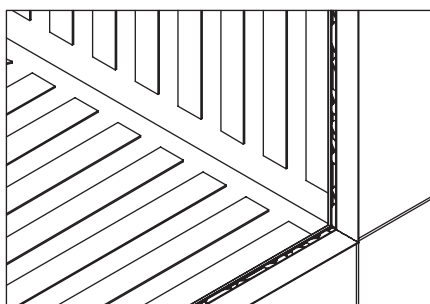

7 Align the profiles at the internal corners and press them into the joint.

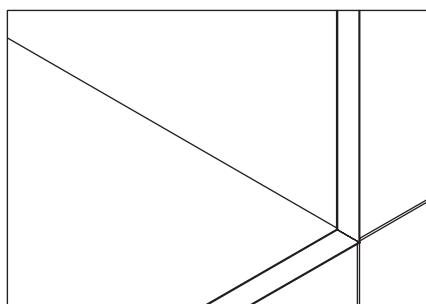

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.