

MOX Systems - технічна документація

assembly-manual-visio-en.pdf

Технічний переклад: зверніться до оригінальних креслень і довідкових сторінок щодо розмірів.


Вихідна сторінка 1

КЕРІВНИЦТВО З СКЛАДАННЯ Visio


- 1 Виберіть правильний профіль відповідно до товщини підлоги.
- 2 Застосуйте з'єднання та відповідно розмістіть анкери профілів.
- 3 Притисніть профіль, поки він не закріпиться на стику.
- 4 Прикладіть килим до профілю.
- 5 Відріжте профілі під кутом 45 градусів для зовнішніх кутів.
- 6 Вирівняйте профілі по зовнішніх кутах і вставте їх у стик.
- 7 Прикладіть килим до профілю.
- 8 Розріжте профілі 45 градусів для внутрішніх кутів.
- 9 Вирівняйте профілі по внутрішніх кутах і помістіть їх у стик.
- 10 Прикладіть килим до профілю. 6 8

Сторінка 1/1


Оригінальні креслення та довідкові сторінки

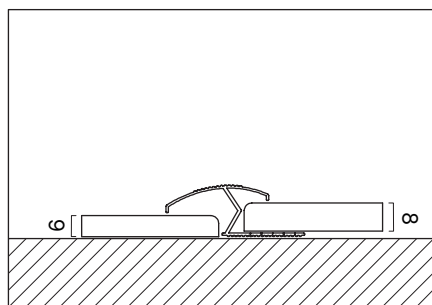


1 Pick the correct profile according to the flooring thickness.

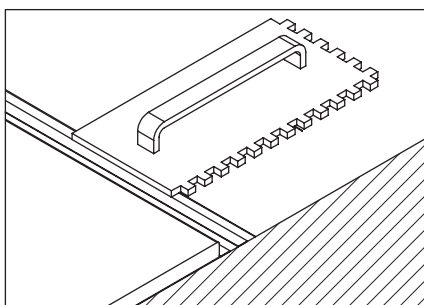


2 Apply joint and place the profiles anchor accordingly.

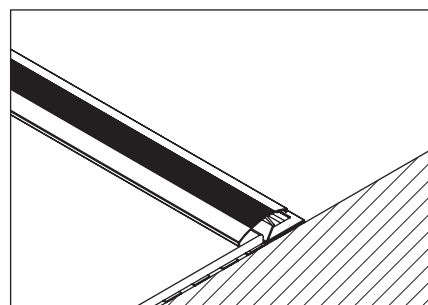


3 Press the profile until it is fixed to the joint.

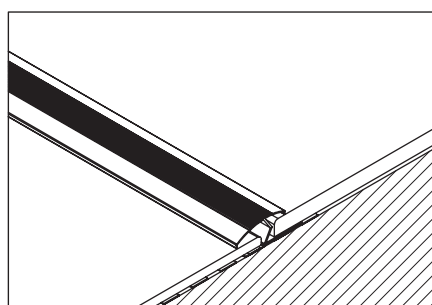


4 Place the carpet to the profile.

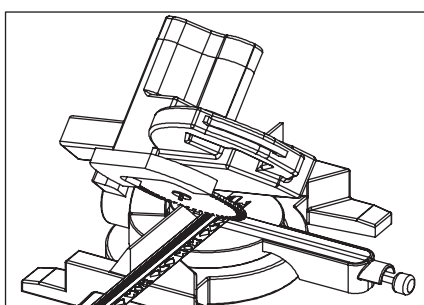


5 Cut profiles 45 degrees for external corners.

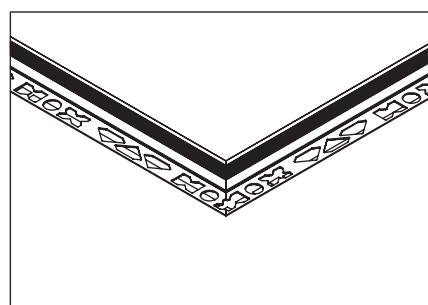


6 Align the profiles at the external corners and place them into the joint.

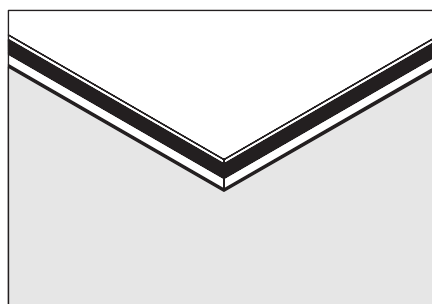


7 Place the carpet to the profile.

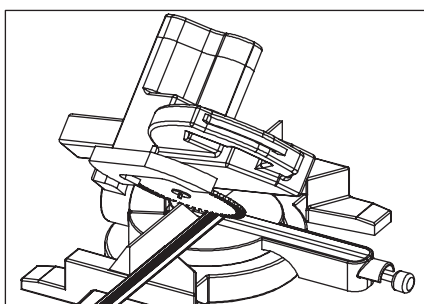

8 Cut profiles 45 degrees for internal corners.

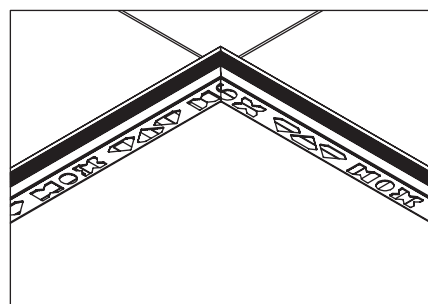

9 Align the profiles at the internal corners and place them into the joint.

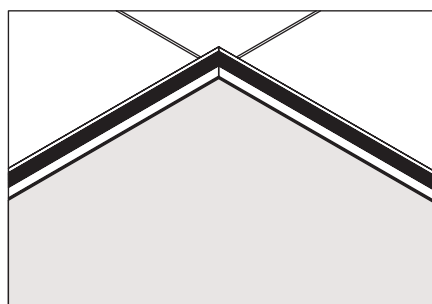

10 Place the carpet to the profile.